



**THANK YOU FOR BUYING A WHIRLPOOL PRODUCT**  
In order to receive a more complete assistance, please register your product on [www.whirlpool.eu/register](http://www.whirlpool.eu/register)



**Before using the appliance carefully read the Safety Instruction.**

 
## PRODUCT DESCRIPTION

### FIRST TIME USE

Wait at least two hours, after the installation, before connecting the appliance to the power supply.  
Connect the appliance to the power supply and turn the thermostat knob to switch on the appliance.


After turning the appliance on, you must wait for 4-6 hours for the correct storage temperature to be reached for a normally filled appliance. Position the antibacterial anti-odour filter in the fan as demonstrated in the filter packaging (if available).

### CONTROL PANEL

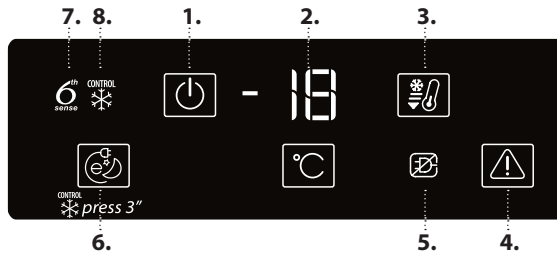

1. On/Stand By button
2. Temperature display
3. Fast freezer button
4. Stop Alarm button
5. Black out alarm
6. Eco Night function
7. 6<sup>th</sup> Sense Freeze control indicator
8. Freezer control indicator

#### ON/STAND BY BUTTON

To put the product in Stand-by, press and hold for 3 seconds. All the icons turn off except On/Standby indicator . To reactivate the appliance press once (briefly) this button.

#### TEMPERATURE SETTING BUTTON

The appliance is normally factory-set for operation at the recommended temperature of -18°C. The internal temperature can be adjusted between -16°C and -24°C, proceeding as follows: Press to change the set point (°C). The storage temperature can be changed by -1°C with each pressure of the button: the value changes cyclically between -16°C and -24°C.

#### FAST FREEZER BUTTON

To activate/deactivate the Fast Freeze function simply press Fast Freeze button (see the Instructions for Use). The Fast Freeze function switches off automatically after 50 hours.

#### STOP ALARM BUTTON

Press in case of alarm.

#### BLACK OUT ALARM

Long Black-out Alarm indicator (see the Instructions for Use).

#### ECO NIGHT FUNCTION (NIGHT TIME RATE)

Press to activate/deactivate the Eco Night function. The Eco Night function enables appliance energy consumption to be concentrated in the reduced rate hours, generally at night (see the Instructions for Use).

 
#### 6<sup>th</sup> SENSE FREEZE CONTROL INDICATOR

6<sup>th</sup> Sense Freeze Control is an advanced technology that reduces freeze burns and food preserves its original quality and color.

#### FREEZER CONTROL BUTTON

Freeze Control is an advanced technology that reduces temperature fluctuations in the whole freezer compartment to minimum. To activate/deactivate the Freeze Control function press for 3 seconds the FREEZE CONTROL button. If the function is engaged and the user modify the freezer temperature out of the working range, the function is automatically switched off. In case of Fast freezing is engaged, the function "Freeze control" is inhibited until the Fast Freezing function switched off (see the Instructions for Use).

## FREEZER COMPARTMENT AND FOOD STORAGE

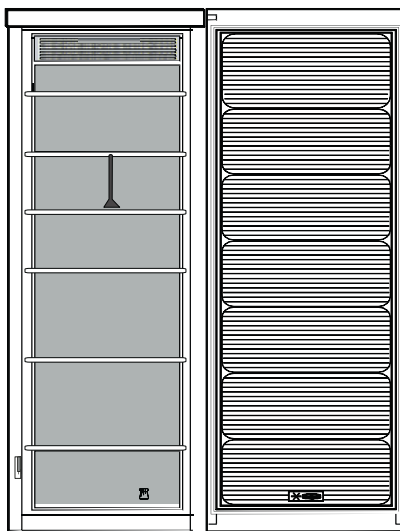

#### Legend



**FREEZER ZONE**  
All food items

 
# TROUBLESHOOTING

What to do if...	Possible reasons	Solutions
The appliance doesn't work.	There may be an appliance power supply problem.	Make sure: <ul style="list-style-type: none"> <li>• there is not a power failure;</li> <li>• the plug is properly inserted in the power socket and the double-pole switch (if present) is in the correct position (on);</li> <li>• the household electrical system protection devices function;</li> <li>• the power cable is not broken.</li> </ul>
The inside light does not work.	It may be necessary to replace the light bulb.	Disconnect the appliance from the power supply and contact the Technical Assistance Service if you need a replacement.
The internal temperature of the compartments is not cold enough.	The reasons could vary (see "Solution") column.	Check that: <ul style="list-style-type: none"> <li>• the doors are closed properly;</li> <li>• the appliance is not installed near a heat source;</li> <li>• the temperature is appropriately set;</li> <li>• the circulation of air through the ventilation grilles on the base of the appliance is not obstructed.</li> </ul>
There is water on the bottom of the refrigerator compartment.	The defrost water drain is blocked.	Clean the defrosting water drain (see section "Cleaning and Maintenance").
Excessive amount of frost in the freezer compartment.	The door to the freezer compartment is not closed properly.	<ul style="list-style-type: none"> <li>• Check that there is nothing preventing the door from closing properly.</li> <li>• Defrost the freezer compartment.</li> <li>• Make sure the appliance has been correctly installed.</li> </ul>
The front edge of the appliance that the door gaskets seal against is hot.	This is not a problem. It prevents condensation from forming.	A solution is not needed.
The temperature of the refrigerator compartment is too cold.	<ul style="list-style-type: none"> <li>• The set temperature is too cold.</li> <li>• A large amount of fresh food may have been placed in the freezer compartment.</li> </ul>	<ul style="list-style-type: none"> <li>• Try to set a less cold temperature.</li> <li>• If fresh food has been put in the freezer compartment, wait until the freezing has been completed.</li> <li>• Turn off the fan (if present) described in the paragraph "FAN".</li> </ul>



You can download the Safety Instructions, User Manual, Product Fiche and Energy data by:

- Visiting our website [docs.whirlpool.eu](https://docs.whirlpool.eu)
- Using QR Code
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.

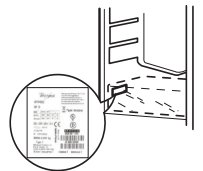

Whirlpool



19515448000