

# Instructions for use

**KitchenAid**



<b>Important safety instructions</b>	<b>4</b>
<b>Installation</b>	<b>8</b>
<b>Safeguarding the environment</b>	<b>9</b>
<b>EC Declaration of conformity</b>	<b>9</b>
<b>Troubleshooting Guide</b>	<b>9</b>
<b>After-Sales Service</b>	<b>10</b>
<b>Cleaning</b>	<b>10</b>
<b>Maintenance</b>	<b>11</b>
<b>Instructions for oven use</b>	<b>12</b>
<b>Functions description table</b>	<b>21</b>
<b>Cooking table</b>	<b>23</b>
<b>Table of Tested Recipes</b>	<b>25</b>
<b>Recommended use and tips</b>	<b>26</b>

## Important safety instructions

### **YOUR SAFETY AND THAT OF OTHERS IS VERY IMPORTANT**

This manual and the appliance itself provide important safety warnings, to be read and observed at all times.



This is the danger symbol, pertaining to safety, which alerts users to potential risks to themselves and others. All safety warnings are preceded by the danger symbol and the following terms:



#### **DANGER**

Indicates a hazardous situation which, if not avoided, will cause serious injury.



#### **WARNING**

Indicates a hazardous situation which, if not avoided, could cause serious injury.

All safety warnings give specific details of the potential risk present and indicate how to reduce risk of injury, damage and electric shock resulting from improper use of the appliance. Carefully observe the following instructions:

- Use protective gloves to perform all unpacking and installation operations.
- The appliance must be disconnected from the power supply before carrying out any installation work.
- Installation and maintenance must be carried out by a qualified technician, in compliance with the manufacturer's instructions and local safety regulations. Do not repair or replace any part of the appliance unless specifically stated in the user manual.
- Power cable replacement must be carried out by a qualified electrician. Contact an authorised service centre.
- Regulations require that the appliance is earthed.
- Once the appliance is fitted in its housing, the power

cable must be long enough to connect the appliance to the main power supply.

- For installation to comply with current safety regulations, an all-pole disconnect switch with minimum contact gap of 3 mm must be used.
- Do not use multiple plug adaptors if the oven is fitted with a plug.
- Do not use extension leads.
- Do not pull the power supply cable.
- The electrical components must not be accessible to the user after installation.
- If the surface of the induction plate is cracked, do not use it and switch off the appliance to avoid the possibility of electric shock (only for models with induction function).
- Do not touch the appliance with any wet part of the body and do not operate it when barefoot.
- This appliance is designed solely for use as a domestic appliance for cooking food. No other type of use is permitted (e.g.: heating rooms).  
The manufacturer declines all responsibility for inappropriate use or incorrect setting of the controls.
- The appliance and its accessible parts become hot during use.
- Care should be taken to avoid touching heating elements.
- Very young (0-3 years) and young children (3-8 years) shall be kept away unless continuously supervised.
- Children of 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, can use this appliance

only if they are supervised or have been given instructions on safe appliance use and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance must not be performed by children without supervision.

- During and after use, do not touch the heating elements or interior surfaces of the appliance – risk of burns. Do not allow the appliance to come into contact with cloths or other flammable materials until all the components have cooled down completely.
- At the end of cooking, exercise caution when opening the appliance door, letting the hot air or steam exit gradually before accessing the oven. When the appliance door is shut, hot air is vented from the aperture above the control panel. Do not obstruct the vent apertures.
- Use oven gloves to remove pans and accessories, taking care not to touch the heating elements.
- Do not place flammable materials in or near the appliance: a fire may break out if the appliance is inadvertently switched on.
- Do not heat or cook sealed jars or containers in the appliance.
- The pressure that builds up inside might cause the jar to explode, damaging the appliance.
- Do not use containers made of synthetic materials.
- Overheated oils and fats catch fire easily. Always remain vigilant when cooking foods rich in fat and oil.
- Never leave the appliance unattended during food drying.
- If alcoholic beverages are used when cooking foods

(e.g. rum, cognac, wine), remember that alcohol evaporates at high temperatures. As a result, there is a risk that vapours released by the alcohol may catch fire upon coming into contact with the electrical heating element.

- Never use steam cleaning equipment.
- Do not touch the oven during the pyrolysis cycle. Keep children away from the oven during the pyrolysis cycle. Any excess spillage must be removed from the oven cavity before the cleaning cycle (only for ovens with Pyrolysis function).
- During and after the pyrolysis cycle, the animals have to be kept away from the area of the appliance location (only for ovens with Pyrolysis function).
- Use only the temperature probe recommended for this oven.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass as they can scratch the surface, which may result in the glass shattering.
- Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- Do not use aluminium foil to cover food in the cooking vessel (only for ovens with a cooking vessel supplied).

### **SCRAPPING OF HOUSEHOLD APPLIANCES**

- This appliance is manufactured with recyclable or reusable materials. Scrap the appliance in accordance with local regulations on waste disposal. Before scrapping, cut off the power cords so that the appliances cannot be connected to the mains.
- For further information on the treatment, recovery and recycling of household electrical appliances, contact your competent local authority, the collection service for household waste or the store where you purchased the appliance.

# Installation

After unpacking the oven, make sure that it has not been damaged during transit and that the oven door closes properly.

In the event of problems, contact the dealer or your nearest After-Sales Service. To avoid any damage, only remove the oven from its polystyrene foam base at the time of installation.

## Preparing the housing unit

- Kitchen units in contact with the oven must be heat resistant (min 90°C).
- Carry out all cabinet cutting work before fitting the oven in the housing and carefully remove all wood chips and sawdust.
- After installation, the bottom of the oven must no longer be accessible.
- For correct appliance operation, do not obstruct the minimum gap between the worktop and the upper edge of the oven.

## Electrical connection

Make sure the power voltage specified on the appliance dataplate is the same as the mains voltage. The dataplate is on the front edge of the oven (visible when the door is open).

- Power cable replacement (type H05 RR-F 3 x 1.5 mm<sup>2</sup>) must be carried out by a qualified electrician. Contact an authorized service centre.

The oven is programmed to operate with power absorption above 2.5 kW (indicated by "HIGH" in the settings, as shown in the figure below) which is compatible with a domestic power supply above 3 kW. If the household has a lower power supply, the setting must be lowered ("LOW" in the settings). The table below details the recommended electrical power settings for the various countries.

COUNTRY	ELECTRICAL POWER SETTING
GERMANY	HIGH
SPAIN	LOW
FINLAND	HIGH
FRANCE	HIGH
ITALY	LOW
HOLLAND	HIGH
NORWAY	HIGH
SWEDEN	HIGH
U.K.	LOW
BELGIUM	HIGH

1. To change the power absorption setting, turn the "Functions" knob to "CLOCK", then select "POWER" with the browse knob.
2. Press  to access the setting.
3. Turn the "Browse" knob to select the desired setting and confirm by pressing button .

## GENERAL RECOMMENDATIONS

### Before use:

- Remove cardboard protection pieces, protective film and adhesive labels from the oven and the accessories.
- Remove the accessories from the oven and heat it at 200°C for about an hour to eliminate the smell and fumes from the protective grease and insulating materials.

### During use:

- Do not place heavy objects on the door as they could damage it.
- Do not cling to the door or hang anything from the handle.
- Do not cover the inside of the oven with aluminium foil.
- Do not pour water into the inside of a hot oven; this could damage the enamel coating.
- Do not drag pots or pans across the bottom of the oven as this could damage the enamel coating.
- Make sure that the electrical cables of other appliances do not touch hot parts of the oven or become trapped in the door.
- Do not expose the oven to atmospheric agents.

# Safeguarding the environment

## Disposal of packing materials

- The packaging materials are 100% recyclable and are marked with the recycling symbol .
- The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.



## Appliance scrapping

- This appliance is marked according to the European Directive 2012/19/EU, Waste Electrical and Electronic Equipment (WEEE).
- By ensuring correct disposal of the product, the user can help prevent potential negative consequences for the environment and human health.



- The symbol  on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection centre for the recycling of electrical and electronic equipment.

## Energy saving tips

- Only preheat the oven if specified in the cooking table or your recipe.
- Use dark lacquered or enamelled baking moulds as they absorb heat far better.

# EC Declaration of conformity

- This oven, which is intended to come into contact with foodstuffs, complies with European Regulation  n. 1935/2004 and has been designed, manufactured and sold in conformity with the safety requirements of the "Low Voltage" directive 2006/95/CE (which replaces 73/23/CEE and subsequent amendments) and the protection requirements of "EMC" directive "EMC" 2004/108/CE.
- This appliance meets the eco design requirements of European regulations n. 65/2014 and n. 66/2014 in conformity to the European standard EN 60350-1.

# Troubleshooting Guide

## The oven does not work:

- Check for the presence of mains electrical power and if the oven is connected to the electrical supply.
- Switch the oven off and then on again to see if the fault has been eliminated.

## The electronic programmer does not work:

- If the display shows the letter " F " followed by a number, contact your nearest After-Sales Service. Specify in this case the number after the letter " F ".

## After-Sales Service

### Before contacting the After-Sales Service:

1. See if you can solve the problem yourself with the help of the suggestions given in the "Troubleshooting guide".
2. Switch the appliance off and then on again to see if the problem has been eliminated.

### If the fault persists after the above checks, contact the nearest After-Sales Service.

Always specify:

- a brief description of the fault;
- the type and exact model of the oven;
- the service number (number after the word Service on the rating plate), located on the right

hand edge of the oven cavity (visible when the oven door is open). The service number is also indicated on the guarantee booklet;

- your full address;
- your telephone number.

**SERVICE** 0000 000 00000



If any repairs are required, contact an **authorized Service Centre** (to guarantee the use of original spare parts and correct repair).

## Cleaning

### WARNING

- **Do not use steam cleaners.**
- **Only clean the oven when it is cool to the touch.**
- **Disconnect the appliance from the mains power supply.**

#### Oven exterior

**IMPORTANT: do not use corrosive or abrasive detergents. If any of these products unintentionally comes into contact with the appliance, clean immediately with a damp microfibre cloth.**

- Clean the surfaces with a damp microfibre cloth. If it is very dirty, add a few drops of washing up detergent to the water. Finish off with a dry cloth.

#### Oven interior

**IMPORTANT: do not use abrasive sponges or metallic scrapers or scourers. Over time, these can ruin enamelled surfaces and the oven door glass.**

- After every use, allow the oven to cool then clean it preferably while it is still warm in order to remove built-up dirt and stains caused by food residues (e.g. food with a high sugar content).
- Do not use corrosive or abrasive detergents.
- Clean the door glass with a suitable liquid detergent. The oven door can be removed to facilitate cleaning (see MAINTENANCE).

**N.B: during prolonged cooking of foods with a high water content (e.g. pizza, vegetables, etc.) condensation may form on the inside of the door and around the seal. When the oven is cold, dry the inside of the door with a cloth or sponge.**

#### Accessories:

- Soak the accessories in water with washing up detergent immediately after use, handling them with oven gloves if still hot.
- Food residues can be easily removed using a washing-up brush or sponge.

# Maintenance


## WARNING

- Use protective gloves.
- Ensure the oven is cold before carrying out the following operations.
- Disconnect the appliance from the mains power supply.

### REMOVING THE DOOR

#### To remove the door:


1. Open the door fully.
2. Lift the catches and push them forwards as far as they will go (fig. 1).
3. Close the door as far as it will go (A), lift it up (B) and turn it (C) until it is released (D) (fig. 2).

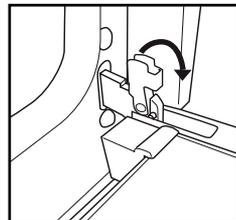

(fig. 1)

#### To refit the door:

1. Insert the hinges in their seats.
2. Open the door fully.
3. Lower the two catches.
4. Close the door.

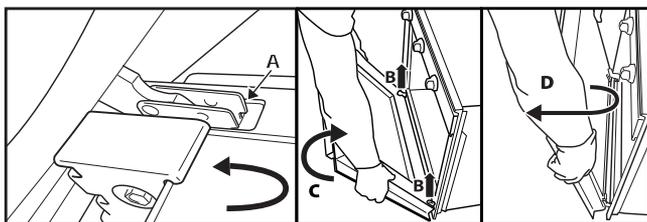


(fig. 2)

### REMOVING THE SIDE GRILLES

The side accessory-holder grilles are equipped with two fixing screws (fig. 3) for optimum stability

1. Remove the screws and relative plates on the right and left with the aid of a coin or tool (fig. 4).
2. To remove the grilles, lift them up (1) and turn them (2) as shown in fig. 5.

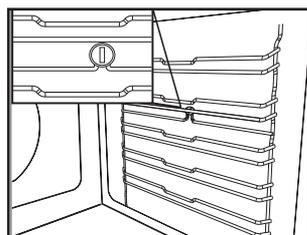

(fig. 3)


### REPLACING THE LAMP

#### To replace the rear lamp (if present):

1. Disconnect the oven from the mains power supply.
2. Unscrew the lamp cover, replace the lamp (see note for lamp type) and screw the lamp cover back on.
3. Reconnect the oven to the power supply

#### N.B:


- Only use 25-40W/230V type E-14, T300°C incandescent lamps, or 20-40W/230 V type G9, T300°C halogen lamps.
- The lamp used in the appliance is specifically designed for electrical appliances and is not suitable for household room illumination (Commission Regulation (ES) No 244/2009).
- Lamps are available from our After-Sales Service.

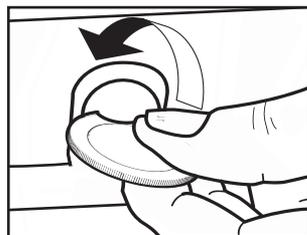

(fig. 4)

#### IMPORTANT:


- If using halogen lamps, do not handle with bare hands since fingerprints can damage them.
- Do not use the oven until the lamp cover has been repositioned.

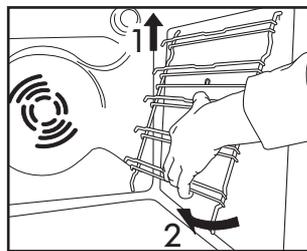

(fig. 5)

## Instructions for oven use

FOR ELECTRICAL CONNECTION, SEE THE PARAGRAPH ON INSTALLATION

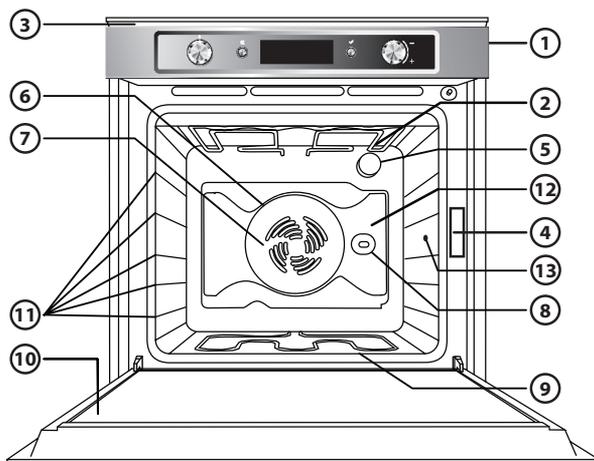

1. Control panel
2. Upper heating element/grill
3. Cooling fan (not visible)
4. Dataplate (not to be removed)
5. Lamps
6. Circular heating element (not visible)
7. Fan
8. Rotisserie (if supplied)
9. Bottom heating element (not visible)
10. Door
11. Position of shelves (the number of shelves is indicated on the front of the oven)
12. Rear wall
13. Meat probe connection


### N.B:

- During cooking, the cooling fan may switch on at intervals in order to minimise energy consumption.
- At the end of cooking, after the oven has been switched off, the cooling fan may continue to run for a while.
- When the oven door is opened during cooking, the heating elements switch off.

# Instructions for oven use


## ACCESSORIES SUPPLIED

**A. WIRE SHELF:** the wire shelf can be used to grill food or as a support for pans, cake tins and other ovenproof cooking receptacles.

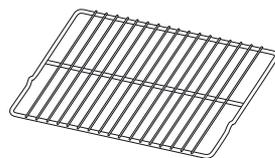

(Fig. A)

**B. BAKING TRAY:** for cooking all bread and pastry products, but also roasts, fish en papillote, etc.

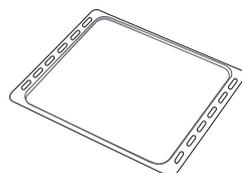

(Fig. B)

**C. DRIP TRAY:** the drip tray is designed to be positioned under the wire shelf in order to collect fat or as an oven tray for cooking meat, fish, vegetables, focaccia, etc.



(Fig. C)

**D. MEAT PROBE:** to measure the core temperature of food during cooking.



(Fig. D)

**E. SLIDING SHELVES (if present):** for easier handling of shelves and trays.



(Fig. E)

The number of accessories may vary according to which model is purchased.


## ACCESSORIES NOT SUPPLIED

Other accessories can be purchased separately from the After-Sales Service.

# Instructions for oven use

## INSERTING WIRE SHELVES AND OTHER ACCESSORIES IN THE OVEN


1. Insert the wire shelf horizontally, with the raised part “A” upwards (fig. 1).
2. The other accessories, like the drip tray and baking tray, are inserted with the raised part on the flat section “B” facing upwards (fig. 2).

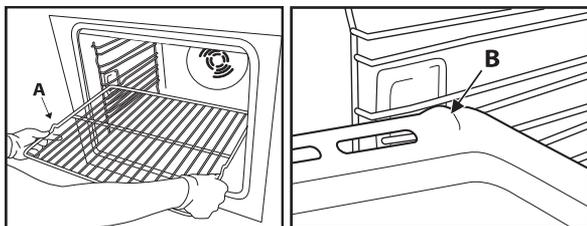

(fig. 1)

(fig. 2)


## CONTROL PANEL DESCRIPTION

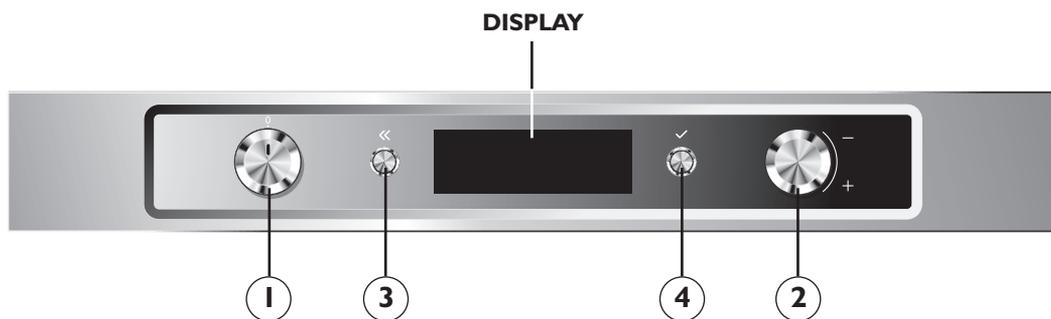

1. **FUNCTIONS KNOB:** On/off and function selector knob
2. **BROWSE KNOB:** for browsing the menu and adjusting pre-set values
3. **BUTTON** ⏪: to return to the previous screen
4. **BUTTON** ✓: to select and confirm settings

# Instructions for oven use

## DESCRIPTION OF DISPLAY

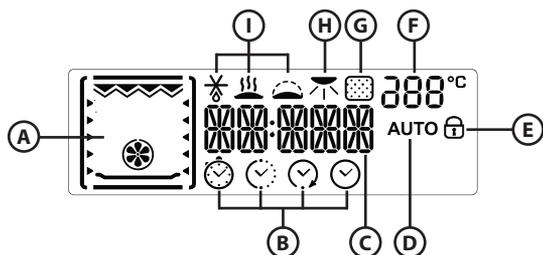


- A.** Display of heating elements activated during the various cooking functions
- B.** Time management symbols: timer, cooking time, end of cooking time, time
- C.** Information regarding selected functions
- D.** Automatic BREAD/PIZZA function selected
- E.** Indication of door locked during automatic cleaning cycle (pyro-cleaning)
- F.** Internal oven temperature
- G.** Pyro-cleaning function (not available on this model)
- H.** Browning
- I.** Special functions: defrosting, warm keeping, Yogurt, rising, Slow Cooking Meat, Slow Cooking Fish, Eco Forced Air.

## STARTING THE OVEN - SETTING LANGUAGE

At the first switch on of the oven, display show ENGLISH

Turn the Browse knob until the desired language is displayed then press the button to confirm.

## SETTING THE TIME

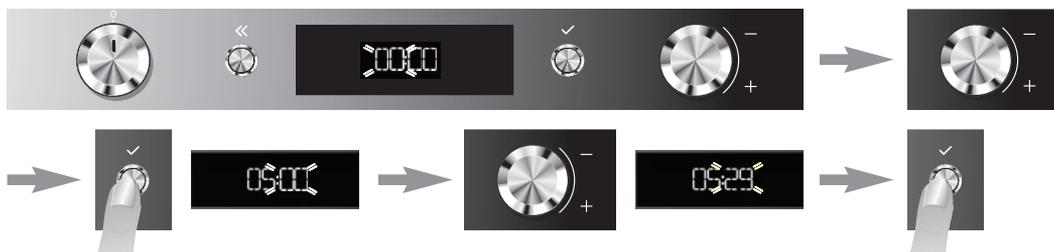

After setting the language, the time must be set on the clock. The two hour digits flash on the display.

1. Turn the "Browse" knob to display the correct hour.
2. Press the button to confirm; the two minute digits flash on the display.
3. Turn the "Browse" knob to display the correct minutes.
4. Press button to confirm.

To change the time, for example following a power cut, see the next paragraph (SETTINGS).

## SELECTING COOKING FUNCTIONS



1. Turn the "Functions" knob to the desired function: the cooking settings are shown on the display.
2. If the values shown are those desired, press . To change them, proceed as indicated below.

# Instructions for oven use


## SETTING THE TEMPERATURE/OUTPUT OF THE GRILL

To change the temperature or output of the grill, proceed as follows:



1. Turn the "Browse" knob to display the desired value.
2. Press button  to confirm.


## FAST PREHEATING

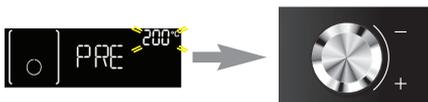

1. Turn the "Functions" knob to select the fast preheating function.
2. Confirm by pressing : the settings are shown on the display.
3. If the proposed temperature is that desired, press button . To change the temperature, proceed as described in previous paragraphs. The message PRE appears on the display. When the set temperature is reached, the corresponding value (e.g. 200°C) appears on the display and the acoustic signal sounds. At the end of preheating, the oven automatically selects the conventional function. At this point food can be placed in the oven for cooking.
4. If you wish to set a different cooking function, turn the "Functions" knob and select the desired function.

## SETTING COOKING TIME

This function can be used to cook food for a set length of time, from a minimum of 1 minute to the maximum time allowed by the selected function, after which the oven switches off automatically.

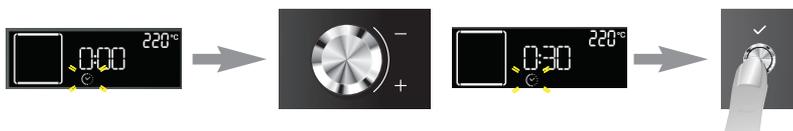

1. Once the temperature is confirmed, the symbol  flashes.
2. Turn the "Browse" knob to display the desired cooking time.
3. To confirm the cooking time, press button .

## SETTING END OF COOKING TIME / DELAYED START


**IMPORTANT:** the start delayed setting is not available for the following functions: **FAST PREHEATING, BREAD/PIZZA.**

**N.B.:** with this setting, the selected temperature is reached in a more gradual way, so cooking times will be slightly longer than stated in the cooking table.

The end of cooking time can be set, delaying the start of cooking by up to a maximum of 23 hours and 59 minutes. This can only be done once cooking time has been set.

After setting cooking time, the display shows the end of cooking time (for example 15:45) and the symbol  flashes.

## Instructions for oven use

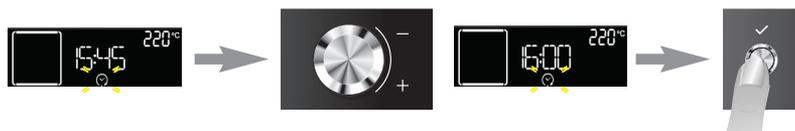

To delay the end of cooking time, and thus also the cooking start time, proceed as follows:

1. Turn the "Browse" knob to display the time you wish cooking to end (for example 16:00).
2. Confirm the selected value by pressing button : the two dots of end of cooking time flash, indicating that the setting has been made correctly.
3. The oven will automatically delay the start of cooking so as to finish cooking at the set time.

**At any time, however, set values (temperature, grill setting, cooking time) can be changed using button to go back, followed by the "Browse" knob to change values and button to confirm.**

### TIMER




This function can be used only with the oven switched off and is useful, for example, for monitoring the cooking time of pasta.

The maximum time which can be set is 23 hours and 59 minutes.

1. With the "Functions" knob at zero, turn the "Browse" knob to display the desired time.
2. Press button to start the countdown. When the set time has elapsed, the display will show "END" and an acoustic signal will sound. To mute the acoustic signal, press button (the time of day appears on the display).

### SELECTING SPECIAL FUNCTIONS

Turn the "Functions" knob indicator to "DEFROST" to access a submenu containing seven special functions. To browse, select and start one of these functions, proceed as follows:

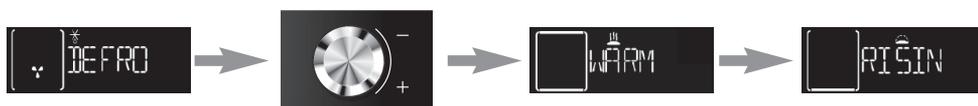

1. Turn the "Functions" knob to "DEFROST" along with this function's corresponding symbol.
2. Turn the "Browse" knob to scroll the list of functions: DEFROST, KEEP WARM, YOGURT, RISING, SLOW COOKING MEAT, SLOW COOKING FISH, ECO FORCED AIR.
3. Press button to confirm.

## Instructions for oven use

### BROWNING

At the end of cooking, with certain functions, the display indicates the possibility of browning. This function can only be used when cooking time has been set.



At the end of cooking time, the display shows: "PRESS ✓ TO BROWN". Press button ✓, and the oven starts a 5-minute browning cycle. This function can be selected consecutively a maximum of twice.

### BREAD/PIZZA FUNCTION SELECTION

Turn the "Functions" knob indicator to "BREAD" to access a submenu containing two automatic cooking functions for "bread" and "pizza".

#### Bread



1. Turn the "Functions" knob to "BREAD" and AUTO at the side.
2. Press ✓ to select the function.
3. Turn the "Browse" knob to set the required temperature (between 180°C and 220°C) and confirm with button ✓.
4. Turn the "Browse" knob to set the required cooking duration and press ✓ to start cooking.

#### Pizza



1. Turn the Functions knob to "BREAD". To select the "PIZZA" function, proceed as follows:
2. Turn the "Browse" knob: "PIZZA" appears on the display.
3. Press ✓ to select the function.
4. Turn the "Browse" knob to set the required temperature (between 220°C and 250°C) and confirm with button ✓.
5. Turn the "Browse" knob to set the required cooking duration and press ✓ to start cooking.

# Instructions for oven use

## MEAT PROBE (PROBE)

The meat probe supplied allows the exact temperature (up to 100°C) to be measured during cooking, to ensure optimum cooking.

Based on the food being cooked, the required core temperature can be set.

It is very important to position the probe accurately in order to obtain perfect cooking results. Insert the probe fully into the fleshiest part of the meat, avoiding bones and fatty parts (Fig. 1). For poultry, the probe should be inserted sideways, in the middle of the breast, taking care to ensure the tip does not end up in a hollow part (Fig. 2). In the case of meat with very irregular thickness, check it is cooked properly before removing it from the oven. Connect the end of the probe in the hole located on the right wall of the oven chamber.

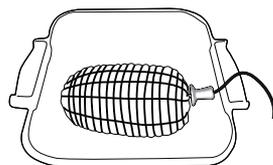


fig. 1

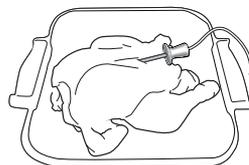


fig. 2

## Meat Probe Cooking Function

When the meat probe is inserted, cavity temperature is managed as defined for the selected function but cooking process finish once the temperature measured reach the estimated meat probe target set by the customer.

There isn't a specified menu for the meat probe cooking functions, but is always possible switch from a traditional function to a "Meat Probe function" This occurs when the meat probe is inserted on.

An acoustic signal sounds when the meat probe is detected, and "PROBE" appears on the display for 3 seconds. The display then shows the current information again.



If the Functions knob is not turned to Standby or Lamp, the display shows the general information on the cooking functions and the temperature set for the meat probe.



If the meat probe is inserted and detected at the start of a function (quick preheating, grill, special functions, browning) without probe enabling, cooking will not start until the probe is removed. An alarm signal occurs and the following message is displayed:



Since the end of cooking depends on the temperature set for the meat probe, a countdown timer cannot be set for the function, and therefore a cooking function with delayed start cannot be set.

After selecting a cooking function, adjust the oven temperature (at the top right of the display) by turning the knob +/- and confirming with the key . The value to be set for the meat probe (at the bottom right of the display) can now be changed: turn the knob +/- and confirm with the key  to start cooking. The oven and meat probe temperature can be changed at any time during cooking. To change the oven temperature, just turn the knob +/-; to change the meat probe temperature, press the key  twice, turn the knob +/- to set the value and confirm with the key . The meat probe default value is 70°C and can be adjusted with minimum steps of 1°C.

When the meat probe is detected at the start of or during a function, all the preheating phases are skipped and the first cooking phase of the selected function is carried out; the lamp stays ON until the meat probe is removed and no longer detected.

If the probe is removed during operation, the display shows the minutes of cooking and the counter increases the value until the user stops the function or inserts the meat probe again.

When end of cooking occur the display shows a blinking "END".

# Instructions for oven use

## SETTINGS

Turn the "Functions" knob indicator to "CLOCK" to access a submenu containing five display settings which can be changed.

### Clock

Turn the "Browse" knob to display "CLOCK". To change the time of day, see the previous paragraph (SETTING THE TIME).

### Brightness

To change the display brightness, proceed as follows:

1. Turn the "Browse" knob to display "BRIGHTNESS".
2. Press button : number 1 appears on the display.
3. Turn the "Browse" knob to increase or decrease brightness and confirm by pressing .

### Sound

To activate or deactivate the acoustic signal, proceed as follows:

1. Turn the "Browse" knob to display "SOUND".
2. Press  to access the setting (ON/OFF).
3. Turn the "Browse" knob to select the desired setting and confirm by pressing button .

### Eco

With the ECO mode selected (ON), the display reduces the brightness, showing the clock when the oven is in stand-by position for 3 minutes. To view information on the display, simply press a button or turn a knob.

1. Turn the "Browse" knob to display "ECO".
2. Press  to access the setting (ON/OFF).
3. Turn the "Browse" knob to select the desired setting and confirm by pressing button .
4. During a cooking function, if the Eco Mode is activated, the cavity lamp will be switched off after 1 minute of cooking and reactivated for each user interaction.

### Power

1. To change the power absorption setting, turn the "Functions" knob to "CLOCK", then select "POWER" with the browse knob.
2. Press  to access the setting
3. Turn the "Browse" knob to select the desired setting and confirm by pressing button .

For further information see the relevant section in INSTALLATION paragraph at page 8.

### Language

1. Turn the "Browse" knob to display "LANGUAGE".
2. Press  to access the setting.
3. Turn the "Browse" knob until desired language is displayed then press the confirmation button .

## KEY-LOCK

This function can be used to lock the buttons and knobs on the control panel.



To activate it, press  and  at the same time for at least 3 seconds. When activated, the functions associated with the buttons are locked and the display shows a key symbol. This function can also be activated during cooking. To deactivate it, repeat the above procedure. When the key-lock function is activated, the oven can be switched off by turning the knob to 0 (zero). In this case, however, the previously selected function will have to be set again.

## Functions description table

FUNCTION SELECTOR KNOB			
<b>0</b>	<b>OFF</b>	To stop cooking and switch off the oven.	
	<b>LAMP</b>	To switch the oven interior light on/off.	
<b>SPECIAL FUNCTIONS</b>	<b>BROWSE KNOB</b>	 <b>DEFROST</b>	To speed up defrosting of food. Place food on the middle shelf. Leave food in its packaging in order to prevent it from drying out on the outside.
		 <b>KEEP WARM</b>	For keeping just-cooked food hot and crisp (e.g: meat, fried food or flans). Place food on the middle shelf. The function will not activate if the temperature in the oven is above 65°.
		 <b>YOGURT</b>	For preparing homemade yoghurt. Use small china jars or aluminium foil baking cups. Cover with aluminium foil during cooking. Position the drip tray with the containers on the 1st shelf. The oven does not have to be preheated.
		 <b>RISING</b>	For optimal rising of sweet or savory dough. Place the dough on the 2nd shelf. The oven does not have to be preheated. To safeguard the quality of proving, do not activate the function if the oven is still hot after a cooking cycle.
		 <b>SLOW COOKING MEAT</b>	For slow cooking of meat at 90°C. This function offers slow cooking which ensures the food remains tender and succulent. For roast joints, brown in the pan first in order to seal in the meat's natural juices. Cooking times range from 4 hours for 1 Kg joints to 6-7 hours for 3 kg joints. For optimum results, avoid opening the oven door during cooking and use a cooking thermometer to check the core temperature of the meat.
		 <b>SLOW COOKING FISH</b>	To cook fish gently at 85°C. This function offers slow cooking which ensures the food remain tender and succulent. Thanks to the low temperature, the food does not brown on the outside and the end result is similar to steam cooking. Cooking times range from 2 hours for 300 g. fish to 4-5 hours for 3 kg fish. For optimum results, keep oven door openings to a minimum during cooking in order to avoid heat dispersion.
		 <b>ECO FORCED AIR</b>	To cook stuffed roasts and meat in pieces on one shelf. This function uses discontinuous, delicate fan assistance, which prevents excessive drying of foods. In this ECO function the light remains off during cooking and can be temporarily switched on again by pressing the confirm button. In order to maximize energy efficiency, it is advisable not to open the door during cooking. It is advisable to use 3rd level. The oven does not have to be preheated.
	<b>CONVENTIONAL</b>	To cook any kind of dish on one shelf only. Use the 3rd shelf. To cook pizza, savoury pies and sweets with liquid fillings, use the 1st or 2nd shelf. Preheat the oven before placing food inside.	
	<b>CONVECTION BAKE</b>	To cook meat and pies with liquid filling (savoury or sweet) on single shelf. Use 3rd shelf. Preheat the oven before cooking.	
	<b>FORCED AIR</b>	To cook a variety of food requiring the same cooking temperature on two shelves at the same time (e.g: fish, vegetables, cakes). This function can be used to cook different foods without odours being transferred from one food to another. Use the 2nd shelf to cook on one shelf only. To cook on two shelves, use the 1st and 4th shelves after preheating the oven.	
	<b>MAXI COOKING</b>	To cook large joints of meat (above 2.5 kg). Use the 1st or 2nd shelves, depending on the size of the joint. The oven does not have to be preheated. It is advisable to turn the meat over during cooking for more even browning. It is best to baste the meat every now and again to prevent it from drying out.	

## Functions description table

FUNCTION SELECTOR KNOB			
<b>GRILL FUNCTIONS</b>	BROWSE KNOB	 <b>GRILL</b>	To grill steak, kebabs and sausages; to cook vegetables au gratin and toast bread. Place food on the 4th or 5th shelf. When grilling meat, use the drip tray to collect the cooking juices. Position it on the 3rd/4th shelf, adding approx. half a litre of water. The oven does not have to be preheated. During cooking the oven door must remain closed.
		 <b>TURBO GRILL</b>	To roast large joints of meat (legs, roast beef, chickens). Position the food on the middle shelves. Use the drip tray to collect the cooking juices. Position it on the 1st/2nd shelf, adding approx. half a litre of water. The oven does not have to be preheated. During cooking the oven door must remain closed. With this function you can also use the turnspit, if provided.
<b>SETTINGS</b>	BROWSE KNOB	<b>CLOCK</b> <b>BRIGHTNESS</b> <b>SOUND</b> <b>ECO</b> <b>POWER</b> <b>LANGUAGE</b>	To set the display (language, time, brightness, buzzer volume, energy saving).
<b>BREAD / PIZZA</b>	BROWSE KNOB	 <b>BREAD</b>	To bake different types and sizes of pizza and bread. This function contains two programmes with predefined settings. Simply indicate the values required (temperature and time) and the oven will manage the cooking cycle automatically. Place the dough on the 2nd shelf after preheating the oven.
		 <b>PIZZA</b>	
		<b>FAST PREHEATING</b>	To preheat the oven rapidly.

# Cooking table

Recipe	Function	Preheating	Shelf (from bottom)	Temperature (°C)	Time (min)	Accessories
Leavened cakes		YES	2 / 3	160 - 180	30 - 90	Cake tin on wire shelf
		YES	1 - 4	160 - 180	30 - 90	Shelf 4: cake tin on wire shelf Shelf 1: cake tin on wire shelf
Filled pies (cheesecake, strudel, apple pie)		YES	3	160 - 200	30 - 85	Drip tray/ baking tray or cake tin on wire shelf
		YES	1 - 4	160 - 200	35 - 90	Shelf 4: cake tin on wire shelf Shelf 1: cake tin on wire shelf
Biscuits/Tartlets		YES	3	170 - 180	15 - 45	Drip tray / baking tray
		YES	1 - 4	160 - 170	20 - 45	Shelf 4: wire shelf Shelf 1: drip tray / baking tray
Choux pastry		YES	3	180 - 200	30 - 40	Drip tray / baking tray
		YES	1 - 4	180 - 190	35 - 45	Shelf 4: oven tray on wire shelf Shelf 1: drip tray / baking tray
Meringues		YES	3	90	110 - 150	Drip tray / baking tray
		YES	1 - 4	90	130 - 150	Shelf 4: oven tray on wire shelf Shelf 1: drip tray / baking tray
Bread / Pizza / Focaccia		YES	1 / 2	190 - 250	15 - 50	Drip tray / baking tray
		YES	1 - 4	190 - 250	20 - 50	Shelf 4: oven tray on wire shelf Shelf 1: drip tray / baking tray
Bread		YES	2	180 - 220	30 - 50	Drip-tray / baking tray or wire shelf
Pizza		YES	2	220 - 250	15 - 30	Drip-tray / baking tray
Frozen pizza		YES	3	250	10 - 15	Shelf 3: drip tray / baking tray or wire shelf
		YES	1 - 4	250	10 - 20	Shelf 4: oven tray on wire shelf Shelf 1: drip tray / baking tray
Savoury pies (vegetable pie, quiche lorraine)		YES	3	180 - 190	40 - 55	Cake tin on wire shelf
		YES	1 - 4	180 - 190	45 - 60	Shelf 4: cake tin on wire shelf Shelf 1: cake tin on wire shelf
Vols-au-vent / Puff pastry crackers		YES	3	190 - 200	20 - 30	Drip tray / baking tray
		YES	1 - 4	180 - 190	20 - 40	Shelf 4: oven tray on wire shelf Shelf 1: drip tray / baking tray
Lasagna / Baked pasta / Cannelloni / Flans		YES	3	190 - 200	45 - 65	Drip tray or oven tray on wire shelf
Lamb / Veal / Beef / Pork 1 Kg		YES	3	190 - 200	80 - 110	Drip tray or oven tray on wire shelf

## Cooking table

Recipe	Function	Preheating	Shelf (from bottom)	Temperature (°C)	Time (min)	Accessories
Chicken/Rabbit/Duck 1 Kg		YES	3	200 - 230	50 - 100	Drip tray or oven tray on wire shelf
Turkey / Goose 3 Kg		YES	2	190 - 200	80 - 130	Drip tray or oven tray on wire shelf
Baked fish / en papillote (fillet, whole)		YES	3	180 - 200	40 - 60	Drip tray or oven tray on wire shelf
Stuffed vegetables (tomatoes, courgettes, aubergines)		YES	2	180 - 200	50 - 60	Oven tray on wire shelf
Toast		-	5	3 (High)	3 - 6	Wire shelf
Fish fillets / steaks		-	4	2 (Medium)	20 - 30	Shelf 4: wire shelf (turn food halfway through cooking)
						Shelf 3: drip tray with water
Sausages / Kebabs / Spare ribs / Hamburgers		-	5	2 - 3 (Medium-High)	15 - 30	Shelf 5: wire shelf (turn food halfway through cooking)
						Shelf 4: drip tray with water
Roast chicken 1-1.3 Kg		-	2	2 (Medium)	55 - 70	Shelf 2: wire shelf (turn food two thirds of the way through cooking)
						Shelf 1: drip tray with water
				3 (High)	60 - 80	Shelf 2: turnspit (if present)
						Shelf 1: drip tray with water
Roast Beef rare 1 Kg		-	3	2 (Medium)	35 - 50	Oven tray on wire shelf (turn food two thirds of the way through cooking if necessary)
Leg of lamb / Shanks		-	3	2 (Medium)	60 - 90	Drip tray or oven tray on wire shelf (turn food two thirds of the way through cooking if necessary)
Roast potatoes		-	3	2 (Medium)	35 - 55	Drip-tray / baking tray (if necessary, turn food two thirds of the way through cooking)
Vegetable gratin		-	3	3 (High)	10 - 25	Drip tray or oven tray on wire shelf
Lasagna & Meat		YES	1 - 4	200	50-100*	Shelf 4: oven tray on wire shelf
						Shelf 1: drip tray or oven tray on wire shelf
Meat & Potatoes		YES	1 - 4	200	45 - 100*	Shelf 4: oven tray on wire shelf
						Shelf 1: drip tray or oven tray on wire shelf
Fish & Vegetables		YES	1 - 4	180	30 - 50*	Shelf 4: oven tray on wire shelf
						Shelf 1: drip tray or oven tray on wire shelf
Filled roast meats	ECO	-	3	200	80 - 120*	Drip-tray or pan on rack
Meat cuts (rabbit, chicken, lamb)	ECO	-	3	200	50 - 100*	Drip-tray or pan on rack

\* Cooking time is approximate. Food can be removed from the oven at different times depending on personal preference.

# Tested recipes

(in compliance with IEC 60350-1:2011-12 and DIN 3360-12:07:07)

Recipe	Function	Preheating	Shelf (from bottom)	Temperature (°C)	Time (min)	Accessories and notes*
<b>IEC 60350-1:2011-12 § 7.5.2</b>						
Shortbread		YES	3	170	15 - 25	Drip tray / baking tray
		YES	1 - 4	150	25 - 35	Shelf 4: baking tray Shelf 1: drip tray / baking tray
<b>IEC 60350-1:2011-12 § 7.5.3</b>						
Small cakes		YES	3	170	20 - 30	Drip tray / baking tray
		YES	1 - 4	160	25 - 35	Shelf 4: baking tray Shelf 1: drip tray / baking tray
<b>IEC 60350-1:2011-12 § 7.6.1</b>						
Fatless sponge cake		YES	2	170	30 - 40	Cake tin on wire shelf
		YES	1 - 4	160	35 - 45	Shelf 4: cake tin on wire shelf Shelf 1: cake tin on wire shelf
<b>IEC 60350-1:2011-12 § 7.6.1</b>						
2 Apples pies		YES	2 / 3	185	70 - 90	Cake tin on wire shelf
		YES	1 - 4	175	75 - 95	Shelf 4: cake tin on wire shelf Shelf 1: cake tin on wire shelf
<b>IEC 60350-1:2011-12 § 9.2</b>						
Toast**		-	5	3 (High)	3 - 6	Wire shelf
<b>IEC 60350-1:2011-12 § 9.2</b>						
Burgers**		-	5	3 (High)	18 - 30	Shelf 5: wire shelf (turn food halfway through cooking) Shelf 4: drip tray with water
		YES	1 - 4	160	55 - 65	Shelf 4: baking tray Shelf 1: drip tray / baking tray
<b>DIN 3360-12:07 § 6.5.2.3</b>						
Apple cake, yeast tray cake		YES	3	180	30 - 40	Drip tray / baking tray
		YES	1 - 4	160	55 - 65	Shelf 4: baking tray Shelf 1: drip tray / baking tray
<b>DIN 3360-12:07 § 6.6</b>						
Roast pork		-	2	170	110 - 150	Shelf 2: drip tray
<b>DIN 3360-12:07 annex C</b>						
Flat cake		YES	3	170	35 - 45	Drip tray / baking tray
		YES	1 - 4	160	40 - 50	Shelf 4: baking tray Shelf 1: drip tray / baking tray

The cooking table suggests the functions and ideal temperatures for obtaining best results with any type of recipe. For hot air cooking on a single level, it is advisable to use the second shelf and the same temperature suggested for "FORCED AIR" cooking on several levels.

\* When not provided, accessories can be purchased from after sale service.

\*\* When grilling, it is advisable to leave 3-4 cm free from the front edge of the grill to facilitate removal.

The indications given in the table are intended without the use of the sliding runners.

Energy efficiency class (in accordance with EN 60350-1:2013-07)

Use the relevant table to carry out the tests.

## Recommended use and tips

### How to read the cooking table

The table indicates the best function to use for any given food, to be cooked on one or more shelves at the same time. Cooking times start from the moment food is placed in the oven, excluding pre-heating (where required). Cooking temperatures and times are purely for guidance and will depend on the amount of food and type of accessory used. Use the lowest recommended values to begin with and, if the food is not cooked enough, then move on to higher values. Use the accessories supplied and preferably dark coloured metal cake tins and oven trays. You can also use pans and accessories in pyrex or stoneware, but bear in mind that cooking times will be slightly longer. To obtain best results, carefully follow the advice given in the cooking table for the choice of accessories (supplied) to be placed on the various shelves.

### Cooking different foods at the same time

Using the "FORCED AIR" function, you can cook different foods which require the same cooking temperature at the same time (for example: fish and vegetables), using different shelves. Remove the food which requires less cooking time and leave food which requires longer cooking time in the oven.

### Desserts

- Cook delicate desserts with the conventional function on one shelf only. Use dark coloured metal cake tins and always position them on the wire shelf supplied. To cook on more than one shelf, select the forced air function and stagger the position of the cake tins on the shelves, aiding optimum circulation of the hot air.
- To check whether a raising cake is cooked, insert a wooden toothpick into the centre of the cake. If the toothpick comes out clean, the cake is ready.
- If using non-stick cake tins, do not butter the edges as the cake may not rise evenly around the edges.
- If the cake "sinks" during cooking, set a lower temperature the next time, perhaps reducing the amount of liquid in the mixture and mixing more gently.
- For sweets with moist fillings (cheesecake or fruit pies) use the "CONVECTION BAKE" function. If the base of the cake is soggy, lower the shelf and sprinkle the bottom of the cake with breadcrumbs or biscuit crumbs before adding the filling.

### Meat

- Use any kind of oven tray or pyrex dish suited to the size of the piece of meat being cooked. For roast joints, it is best to add some stock to the bottom of the dish, basting the meat during cooking for added flavour. When the roast is ready, let it rest in the oven for another 10-15 minutes, or wrap it in aluminium foil.
- When you want to grill meat, choose cuts with an even thickness all over in order to achieve uniform cooking results. Very thick pieces of meat require longer cooking times. To prevent the meat from burning on the outside, lower the position of the wire shelf, keeping the food farther away from the grill. Turn the meat two thirds of the way through cooking.

To collect the cooking juices it is advisable to place a drip-tray with half a litre of water directly under the grill on which the meat is placed. Top-up when necessary.

## Recommended use and tips

### Tips for dishes cooked using the traditional functions

Recipe	Shelf (from bottom)	Recommended cooking temperature (°C)	Recommended end temperature for meat probe (°C)
Roast beef rare	2 / 3	200 - 220	48
Roast beef medium	2 / 3	170 - 190	60
Roast beef well done	2 / 3	170 - 190	68
Roast turkey	1 / 2	150 - 170	75
Roast chicken	2 / 3	200 - 210	83
Roast pork	2 / 3	170 - 190	75
Roast veal	2 / 3	160 - 180	68

#### Turnspit (only in some models)

Use this accessory to evenly roast large pieces of meat and poultry. Place the meat on the turnspit rod, tying it with string if chicken, and check that it is secure before inserting the rod in the seat located on the front wall of the oven and resting it on the respective support. To prevent smoke and to collect cooking juices, it is advisable to place a drip-tray with half a litre of water on the first level. The rod has a plastic handle which must be removed before starting to cook, and used at the end of cooking to avoid burns when taking the food out of the oven.

#### Pizza

Lightly grease the trays to ensure the pizza has a crispy base. Scatter the mozzarella over the pizza two thirds of the way through cooking.

#### Rising function (only in some models)

It is always best to cover the dough with a damp cloth before placing it in the oven. Dough proving time with this function is reduced by approximately one third compared to proving at room temperature (20-25°C). Proving time for a 1 Kg batch of pizza dough is around one hour.



FOR THE WAY IT'S MADE.

Printed in Italy  
04/15

400010791031

