

Freezer Compartment

- A. Control panel
- B. Top drawer (freezing area)
- C. Middle and bottom drawers (storage area for frozen and deep frozen food)
- D. Ice cube tray (if provided)
- E. Rating plate (located at side of drawer)

The ideal temperatures for preserving foods are already factory-set.

Fast Freezing

To freeze the compartment quickly or 24 hours before placing large amounts of fresh food to be frozen, activate the "Fast Freezing" function by pressing the "Temperature" button repeatedly until the 3 indicator lights flash and then remain lit.



The function deactivates automatically after 60 hours and the temperature setting returns to the value prior to activation of the function. To deactivate the function manually, press the "Temperature" button.


Note: The food to be frozen must not be touching already frozen food.

On/Stand-by

Press for 3 seconds to turn the appliance off. In Stand-by mode, none of the icons light up on the display. To turn the product on again, a brief press on the button is sufficient.

Note: this operation does not disconnect the appliance from the electrical supply.

Temperature alarm indicator

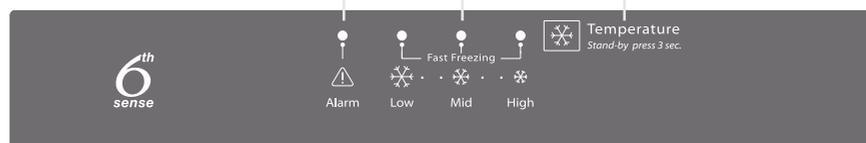


Freezer compartment temperature

The three green lights indicate the set freezer compartment temperature.

A different temperature can be set using the "Temperature" button.

The following adjustments are possible:

LED's on

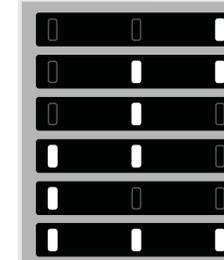

Set temperature

- High (least cold)
- Medium-high
- Intermediate
- Medium-low
- Low (coldest)
- Fast freezing



What to do if...	Possible causes:	Cures:
The control panel is switched off, the appliance does not work.	The appliance could be in off mode. There may be an appliance power supply problem.	Activate the appliance with the On/Off button Make sure: - there is not a power outage - the plug is properly inserted in the power socket and the mains double-pole switch (if present) is in the correct position (i.e. allows the appliance to be powered) - the household electrical system protection devices are efficient - the power cable is not broken.
The temperature inside the compartment is not low enough.	There could be various causes (see "Cures")	Make sure: - the doors close properly - the appliance is not installed near a heat source - the set temperature is adequate - the circulation of air through the vents at the bottom of the appliance is not obstructed
The front edge of the appliance, at the door striker seal, is hot.	This is not a defect It prevents condensation from forming.	No remedy is necessary.
The red  icon is flashing.	Temperature alarm The internal temperature is above -12°C	Keep the door closed until the alarm deactivates.

Note: some noises, such as gurgles and hissing, caused by the refrigeration system, are normal

Carefully read the user handbook provided before using the appliance.
The characteristics, technical data and images may vary according to the model.