

DAILY REFERENCE GUIDE



THANK YOU FOR PURCHASING A WHIRLPOOL PRODUCT

To receive more comprehensive help and support, please register your product at www.whirlpool.eu/register




You can download the Safety Instructions and the Use and Care Guide by visiting our website docs.whirlpool.eu and following the instructions on the back of this booklet.



Before using the appliance carefully read the Health and Safety guide.

PRODUCT DESCRIPTION

APPLIANCE

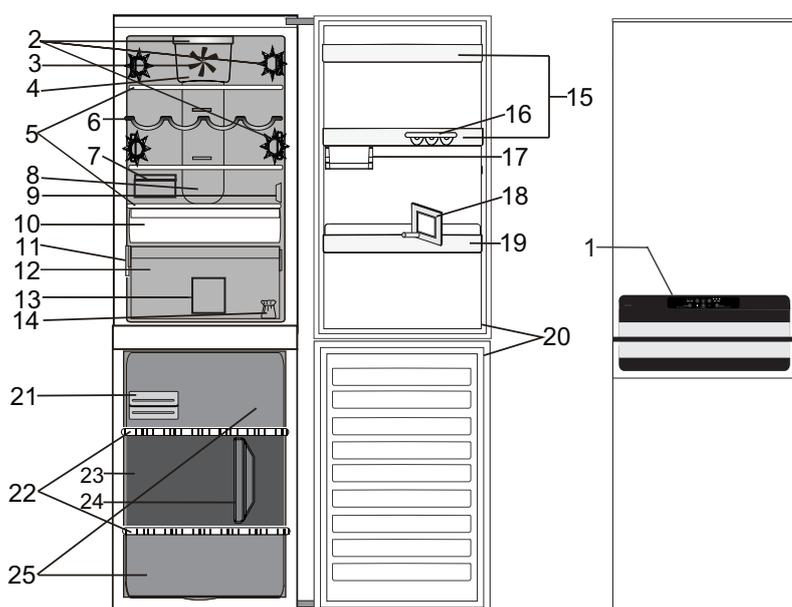

1. Control panel

Refrigerator compartment


2. LED lighting
3. Fan
4. Fan cover and antibacterial filter area
5. Shelves
6. Bottle rack
7. Cheese box + Lid
8. Multi-flow cold air area
9. Sensor cover
10. Active 0 compartment (to keep foods fresher for longer)
11. Rating plate with commercial name
12. Fruits and vegetables crisper

13. Fridge drawer divider
14. Door reversibility kit
15. Door trays
16. Egg tray
17. Small items half balcony
18. Bottle separator
19. Bottle balcony
20. Door seal

Freezer compartment

20. Door seals
21. Quick Ice / Eutetics
22. Shelves
23. Middle drawer: coolest zone best for freezing fresh food
24. Freezer drawer divider
25. Freezer drawers


CONTROL PANEL

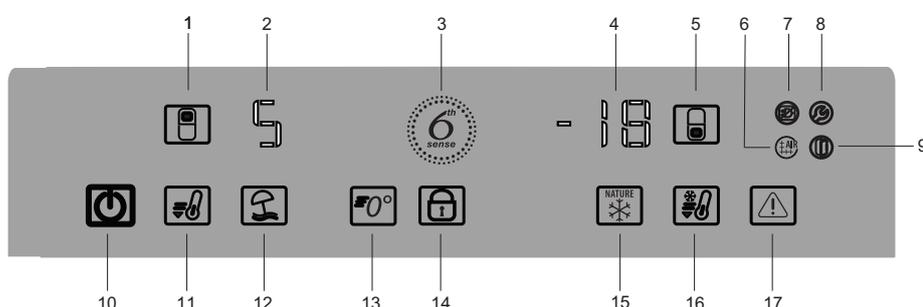

1. FRIDGE TEMPERATURE button
2. FRIDGE TEMPERATURE DISPLAY (°C)
3. 6TH SENSE FRESH CONTROL indicator
4. FREEZER TEMPERATURE DISPLAY (°C)
5. FREEZER TEMPERATURE button
6. ANTIBACTERIAL FILTER ALARM indicator
7. BLACK-OUT ALARM indicator
8. MALFUNCTION ALARM indicator
9. DOOR OPEN ALARM indicator
10. ON/STAND-BY button
11. FAST COOL button
12. VACATION button
13. ACTIVE 0 button
14. KEY LOCK button
15. FREEZE CONTROL button
16. FAST FREEZE button
17. STOP ALARM button

ACCESSORIES


EGG TRAY

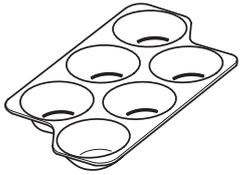


CHEESE BOX




BOTTLE RACK

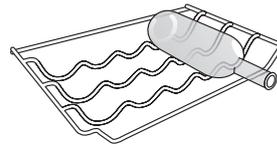


BOTTLE SEPARATOR

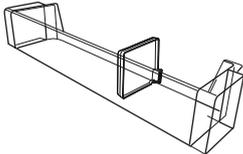


FREEZER DRAWER DIVIDER

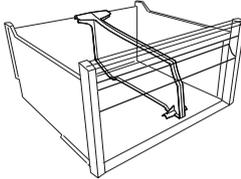


FRIDGE DRAWER DIVIDER

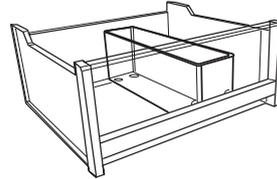

QUICK ICE COMPARTMENT

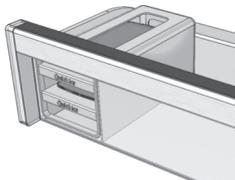

EUTETICS/QUICK ICE TRAYS

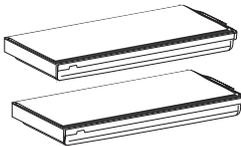

FIRST TIME USE

HOW TO START THE APPLIANCE

After plugging the appliance to the mains, it starts the operation automatically.
After starting the appliance, wait at least 4-6 hours before placing food into the fridge and into the freezer compartment.

When the appliance is connected to the power supply, the display lights up and all the icons appear on the display for approximately 1 second. The default (factory) values of the fridge compartment settings light-up.

DAILY USE

See Use and Care Guide for more details on functions / see last page for information on how to obtain the Use and Care Guide

FUNCTIONS

ON/STANDBY

To put the product in Stand-by, **press and hold the On/Stand By button for 3 seconds**. All the indicators turn off except On/Standby indicator.

Press again to reactivate the appliance.

SMART DISPLAY

This optional function can be used to save energy. To activate the Smart Display, press Fridge Temperature and Freezer Temperature buttons at the same time for 3 seconds until an audible signal sounds. To deactivate this function repeat the same procedure. Remember that this function does not disconnect the appliance from the power supply, but only reduce the power consumed by external display.

FRIDGE TEMPERATURE

To adjust the Fridge Temperature, press the Fridge °C button. The Fridge Temperature can be adjusted between +2°C and +8°C, as shown by the Fridge Temperature Display (°C).

FREEZER TEMPERATURE

To adjust the Freezer Temperature, press the Freezer °C button. The Freezer Temperature can be adjusted between -16°C and -24°C, as shown by the Freezer Temperature Display (°C).

VACATION

This function can be activated to reduce the energy consumption of the appliance during a prolonged period of time. Before activating the feature, all perishable food should be removed from the refrigeration compartment and make sure that the door is closed properly, since the refrigerator will maintain a suitable temperature to prevent the formation of unpleasant odors (+12°C).

To activate/deactivate press the Vacation mode button. When the function is enabled, the related symbol will light up. Changing the temperature setpoint will automatically deactivate the function.

The freezer compartment works properly.

KEY LOCK

To lock/unlock the keys of the Control Panel, press the Key Lock button for 3 seconds: the Key Lock indicator will light up and an acoustical signal will be played.

FREEZE CONTROL

Freeze Control is an advanced technology that reduces temperature fluctuations in the whole freezer compartment to minimum, thanks to an innovative air system, totally independent from the fridge. Freeze burns are reduced up to 60% and food preserves its original quality and color.

To activate/deactivate the Freeze Control function press and hold for 3 seconds the Party Mode button.

The function works properly in a defined range of temperature: between -22°C and -24°C . When the function is engaged and the current temperature in the freezer is set to the warmer set point than -22°C , the temperature is automatically set to -22°C to match the working range. If the function is engaged and the user modify the freezer temperature out of the working range, the function is automatically switched off.

In case of Fast freezing is engaged, the function "Freeze control" is inhibited until the Fast Freezing function switched off.

6TH SENSE FRESH CONTROL

This function automatically works to ensure the optimal conditions to preserve the stored food. If there are any variations, 6th Sense Fresh Control immediately restores the ideal conditions. Results are outstanding: freshness preserved at best throughout the fridge cavity up to 4 times longer.

FAST COOL

Using Fast Cool function it is possible to increase the cooling in the refrigerator compartment. The use of this function is recommended when placing a very high quantity of food in the refrigerator compartment. Press the Fast Cool button to activate Fast Cool function. When activated, the Fast Cool indicator will turn on. The function is automatically disabled after 6 hours, or can be manually disabled by pressing Fast Cool button.

FAST FREEZE

The use of this function is recommended when placing a very high quantity of food to be frozen in the freezer compartment. 24 hours before freezing fresh food, press the Freezer button to activate the Fast Freeze function. When activated, the Fast Freeze indicator turns on. After 24 hours place the food to be frozen in the middle freezing zone of freezer compartment. The function is automatically disabled after 48 hours, or can be manually disabled by pressing Fast Freeze button.

ACTIVE 0 COMPARTMENT


The Active 0 compartment is specifically designed to maintain a low temperature and a suitable humidity level, in order to keep foods fresher for longer (e.g. meat, fish). When deactivated, the drawer can be used for winter fruit and vegetables.

Activating and deactivating the compartment

To activate/deactivate the Active 0 compartment, press the dedicated button on the control panel (indicator in the figure below).



Active 0 compartment off: button partially lighted

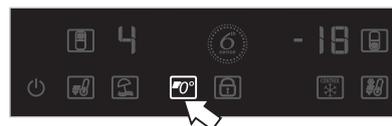

Active 0 compartment on: button fully lighted

REFRIGERATOR LIGHT

The light system inside the refrigerator compartment uses LEDs light, allowing a better lightning as well as a very low energy consumption.

If the LED light system does not work, please contact the Service to replace it.

Important: The refrigerator compartment light switches on when the refrigerator door is opened. If the door is kept open for more than 10 minutes the light will be automatically switched off.

FAN + ANTIBACTERIAL FILTER

The Fan improves temperature distribution inside the refrigerator compartment, allowing better preservation of stored food.

If the appliance has the Fan it can be equipped with the antibacterial filter.


Remove it from the box placed in the crisper drawer and insert into the fan cover.

The replacement procedure is included in the filter box.



ALARM TABLE

ALARM TYPE	Signal	Cause	Cure
Door open alarm	Door open alarm indicator remains on, the acoustical alarm is activated and the Alarm Indicator blinks.	The Fridge or Freezer door has remained open for more than 2 minutes.	Close the door or press the Stop Alarm to mute the acoustical alarm.
Temperature alarm	The Temperature display blinks ($^{\circ}\text{C}$) and the Alarm Indicator remains on.	Inside the Freezer the temperature is not adequate.	Press the Stop Alarm button; the acoustical alarm stops, the Temperature Display ($^{\circ}\text{C}$) blinks and the Alarm Indicator remains on until a temperature $< -10^{\circ}\text{C}$ is reached.
Antibacterial filter alarm	The Antibacterial filter alarm indicator lit on.	Finished the validity of Antibacterial filter.	Replace the Antibacterial filter, press the Alarm button to reset it.
Long black-out alarm	The Black Out Alarm icon remains on, the Alarm indicator blinks.	Prolonged power failure, able to cause the inside temperature to increase to 0°C .	Press the Stop Alarm button; the acoustical alarm stops.
Malfunction	The letter "F" blinks on the display ($^{\circ}\text{C}$).	Product malfunction.	Contact the After-sales Service.

HOW TO STORE FOOD AND BEVERAGE

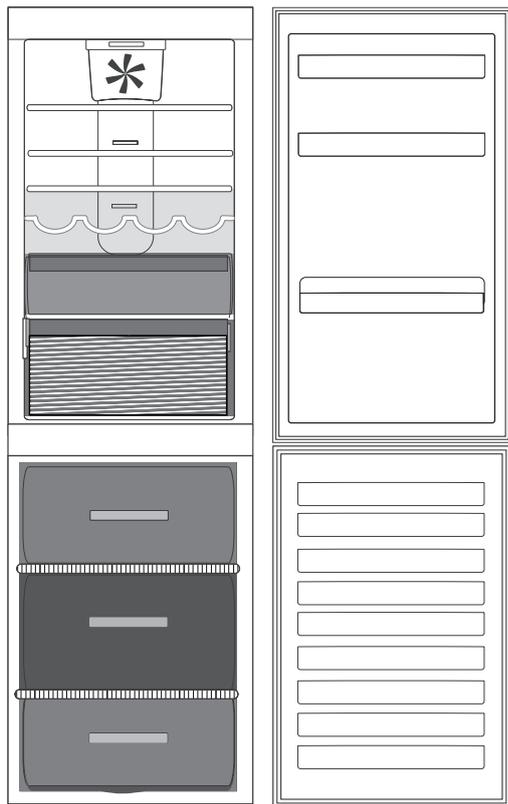

Legend

  -  **TEMPERATE ZONE**
Suggested for the storage of tropical fruit, cans, drinks, eggs, sauces, pickles, butter, jam
-  **COOL ZONE**
Suggested for storage of cheese, milk, dairy food, delicatessen, yogurt
-  **COOLEST ZONE**
Suggested for the storage of cold cuts, desserts
-  **FRUIT & VEGETABLE DRAWER**
-  **FREEZING ZONE DRAWER (MAX COOL ZONE)** Suggested to freeze fresh/cooked food
-  **NORMAL FREEZER DRAWERS**

Note: The Grey tone of the legend doesn't match with the color of drawers

FRIDGE COMPARTMENT

Use recyclable plastic, metal, aluminum and glass containers and cling film to wrap foods.

Always use closed containers for liquids and for food that may give off or be tainted by odor or flavor transfer or cover them.

If you have a little quantity of food to store in the refrigerator, we recommend to use the shelves above the crisper for fruits and vegetables since this is the coolest area of the compartment.

Foods which give off a large amount ethylene gas and those that are sensitive to this gas, such as fruit, vegetables and salad, should always be separated or wrapped so as not to reduce the storage life; for example do not store tomatoes together with kiwi fruits or cabbage.

To avoid bottles falling over, you can use the bottle holder (available on selected models).

Do not store food too close together to enable sufficient air circulation.

FREEZER COMPARTMENT

The freezer is the ideal storage location for store frozen food, make ice cubes and freeze fresh food in the freezer compartment.

The maximum number of kilograms of fresh food that can be frozen within a 24-hour period is indicated on the rating plate (...kg/24h).

If you have a little quantity of food to store in the freezer, we recommend to use the coldest areas of your freezer compartment, corresponding to the middle area.

PRODUCT FICHE

 [www](http://www.docs.whirlpool.eu) The product sheet inclusive of energy data for this appliance can be downloaded from the website docs.whirlpool.eu

HOW TO OBTAIN THE USE AND CARE GUIDE


>  [www](http://www.docs.whirlpool.eu) Download the Use and Care Guide from the website docs.whirlpool.eu (it is possible to use this QR Code) indicating the product code.

> As an alternative, contact the After-Sales Service



CONTACTING OUR AFTER-SALES SERVICE

The contact information can be found in the warranty manual. When you contact the After-Sales Service, please supply the code found on the product's identification label.

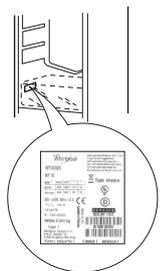

4 00010891134

Printed in Italy