



THANK YOU FOR BUYING A WHIRLPOOL PRODUCT
In order to receive a more complete assistance, please register your product on www.whirlpool.eu/register



Before using the appliance carefully read the Safety Instruction.

PRODUCT DESCRIPTION

FIRST TIME USE

AIR VENT (FOR THE SUCTION VERSIONS)

Connect the hood and discharge holes on the walls with a diameter equivalent to the air outlet (connection flange).
Using the tubes and discharge holes on walls with smaller dimensions will cause a diminution of the suction performance and a drastic increase in noise.
Any responsibility in the matter is therefore declined.
! Use a duct of the minimum indispensable length.
! Use a duct with as few elbows as possible (maximum elbow angle: 90°).
! Avoid drastic changes in the duct cross-section.
! The company declines any responsibility whenever these regulations are not respected.

FILTERING OR DUCTING?

! Your cooker hood is ready to be used in suction version.
To use the hood in filtering version the special ACCESSORY KIT must be installed.
Check if the ACCESSORY KIT is furnished or must be bought separately.
Note: If furnished, in certain cases, the additional activated carbon filtering

system may be installed on the hood. Information about the conversion of the hood from suction version to filtering version is present in the Manual "Safety Instructions & Installation".



DUCTING VERSION

In this case the fumes are conveyed outside of the building by means of a special pipe connected with the connection ring located on top of the hood.

Attention! The exhausting pipe is not supplied and must be purchased apart. Diameter of the exhausting pipe must be equal to that of the connection ring.

Attention! If the hood is supplied with active charcoal filter, then it must be removed.



FILTER VERSION

The aspirated air will be degreased and deodorised before being fed back into the room.

In order to use the hood in this version, you have to install a system of additional filtering based on activated charcoal.

CONTROL PANEL



T1



T2



T3

P

T4

ZEN

T5



T6

- T1.** Fan Motor / ON/OFF 1st speed
- T2.** Fan Motor / ON/OFF 2nd speed
- T3.** Fan Motor / ON/OFF 3rd speed
- T4.** "POWER BOOST" ON/OFF Function (time-controlled)

Note: the hood will go back to running at the 3th speed, after five minutes.

- T5.** Operation "ZEN Mode" ON/OFF Function

Note: This function makes it possible to activate an extraction speed with the perfect balance between quietness and extraction efficiency.

- T6.** Main light ON/OFF

GREASE/CHARCOAL FILTER ALARM/RESET

At regular intervals, the hood signals the need to perform filter maintenance.

Note: The indicators will only work for 40secs after switching OFF Fan Motor speed.

T1 + T2 flashing: carry out maintenance of the grease filter.

T3 + T4 flashing: carry out maintenance of the charcoal filter.

Note: charcoal filter alarm is normally disabled, to enable: switch hood OFF then press and hold T3+T4 for more than 3 secs, both signals lit for about 3secs to indicate charcoal filter alarm is enabled. Repeat operation to disable (both signals flashes for about 3 secs).

Resetting the filter saturation indicators

Press and hold for almost 3 secs signals while flashing.

* Available only on certain models

TECHNICAL DATA

Model	Height (cm)	Width (cm)	Depth (cm)	Ø of exhaust tube (cm)
WHC 93 F LT X	74.5 -118.5	89.8	52.0	15
WHC 63 F LT X	74.5 -118.5	59.8	52.0	15
WHC 63 F LB X	74.5 -118.5	59.8	51.5	14.9
WHC 93 F LE X	74.5 -118.5	89.8	51.5	14.9
WHBS 93 F LE X	70.7 – 114.8	89.8	45.0	14.9
WHBS 63 F LE X	70.7 – 114.8	59.8	45.0	14.9
WHFG 63 F LE X	68.3 – 113.7	59.8	41.4	14.9
WHFG 93 F LE X	68.3 – 113.7	89.8	41.4	14.9
WIFG 103 F LE X	78.4 – 106.4	99.8	50.9	14.9

CLEANING AND MAINTENANCE

CLEANING

- **Do not use steam-cleaning equipment.**
- **Disconnect the appliance from the mains.**

Important: do not use corrosive or abrasive detergents. If any such products unintentionally come into contact with the appliance, clean the appliance immediately with a damp cloth. Do not use alcohol.

- Clean the surfaces with a damp cloth. If it is very dirty, add a few drops of washing-up detergent to the water. Finish off with a dry cloth.

Important: do not use abrasive sponges or metallic scrapers or scourers. Over time, these can ruin the enamel surfaces.

- Use detergents specifically designed for cleaning the appliance and follow the manufacturer's instructions.

Important: clean the filters at least once a month to remove oil and grease residue.

 
MAINTENANCE OF THE CHARCOAL FILTER (FOR FILTRATION MODELS ONLY)

This filter retains the unpleasant odours produced during cooking. Saturation of the carbon filter occurs after a relatively long use, however this depends on the type of cooking and how regularly the grease filter is cleaned. Regardless, it is necessary to replace the cartridge every 4 months. It CANNOT be washed or recycled.

Fitting or replacing the carbon filter

1. Disconnect the hood from the mains.
2. Remove the grease filters.
3. Hook the carbon filter firstly to the metal tab at the back on the hood and then fix it at the front with the two knobs.
4. Reinstall the grease filter in place.


Proceed in reverse order to remove.

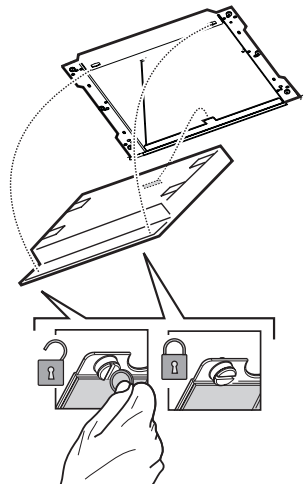

* Available only on certain models

MAINTENANCE OF THE GREASE FILTERS

 This must be cleaned once a month (or when the filter saturation indication system - if envisaged on the model in possession - indicates this necessity) using non aggressive detergents, either by hand or in the dishwasher, which must be set to a low temperature and a short cycle. When washed in a dishwasher, the grease filter may discolour slightly, but this does not affect its filtering capacity. Pull out the handle to remove the filter. Once the filter has been washed and left to dry, proceed in reverse order to refit the filter.

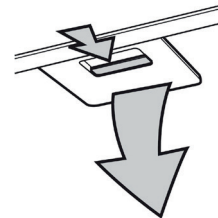

REPLACING THE LAMPS

The hood is equipped with an LED lighting system. LEDs ensure excellent illumination, have a service life up to 10 times longer than traditional bulbs, and offer up to 90% energy savings.

Note: For replacement LED, please contact the Technical After-sales Service Centre.

TROUBLESHOOTING


Problem	Solutions
The appliance does not work.	<ul style="list-style-type: none">• Check the mains voltage and whether the appliance is connected to the power supply;• Check that a speed has been selected;• Switch the appliance off and on again to see if the fault persists.
The hood is not extracting air sufficiently.	<ul style="list-style-type: none">• Check that the air extraction speed is set to the desired level;• Check that the filters are clean;• Check the air vents for any obstructions.
The hood has turned off during normal functioning.	<ul style="list-style-type: none">• Check that the power has not been disconnected;• Check that the omnipolar disconnection device has not tripped.

* Available only on certain models



You can download the Safety Instructions, User Manual, Product Fiche and Energy data by:

 - Visiting our website docs.whirlpool.eu
- Using QR Code
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.

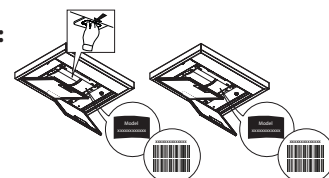

Whirlpool



400011310942