




GB

PROGRAMME CHART

- A. "Door open" indication
- B. "Service" indication
- C. "Water tap closed" indication
- D. "Clean pump" indication

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

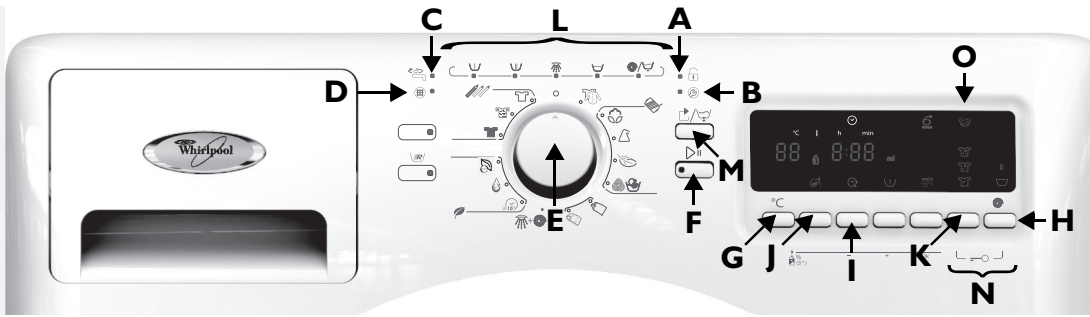

- E. Programme selector
- F. "Start/Pause" button
- G. "Temperature" button
- H. "Spin" button (incl. "Rinse hold")
- I. "Start delay" button
- J. "Dosing Aid" button
- K. "Soil level" button
- L. Programme sequence indicator
- M. "Reset/Drain" button
- N. Child lock button combination
- O. Detergent overdose indication

| Programme | Temperature °C | Care Labels | Max. Load kg | Type of wash/Notes <i>- Respect the manufacturer's recommendations on the care label</i> | Detergents and additives | | | Selectable options | | | | | Dosing aid | Start delay | Spin | |
|-------------------------|----------------------|--------------|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------|-----------|----------|--------------------|-------|----------|-----------------|------------|------------|-------------|------|---------------------|
| | | | | | Pre-wash | Main wash | Softener | Colours 15° | Rapid | Pre-wash | Intensive rinse | Soil level | | | Spin | Max. Spin Speed rpm |
| Mixed | cold - 60 °C | | 6.0 | Lightly to normally soiled robust laundry made of cotton, linen, artificial fibres and their blends. Effective one-hour programme. Make sure to wash only similar colours together in one wash load. | — | Yes | * | * | — | — | * | * | * | * | * | max. |
| Fabrics | Cotton | cold - 95 °C | 9.0 | Normally to heavily soiled towels, underwear, table and bed linen etc. made of cotton and linen. | * | Yes | * | * | * | * | * | * | * | * | * | max. |
| | Synthetics | cold - 60 °C | 3.5 | Normally soiled blouses, shirts, overalls, etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton. | * | Yes | * | * | * | * | * | * | * | * | * | max. |
| | Delicates | cold - 40 °C | 2.5 | Curtnains and delicate clothing, dresses, skirts, shirts and blouses. | * | Yes | * | * | — | * | — | * | * | * | * | 1000 ¹⁾ |
| | Wool/Handwash | cold - 40 °C | 2.0 | Woolens, labelled with the Woolmark and identified as machine washable, as well as textiles made of silk, linen, wool and viscose marked as handwashable. This programme is tested and approved by The Woolmark Company for machine- and handwashable wool. Select spin speed according to the manufacturer's recommendations on the care label. | — | Yes | * | * | — | — | — | * | * | * | * | 1000 ¹⁾ |
| Colours | White | cold - 60 °C | 9.0 | Normally to heavily soiled and robust white cotton laundry. Save energy by selecting a lower wash temperature and adding an oxygen-based bleach product, in addition to your detergent. | — | Yes | * | * | — | — | * | * | * | * | * | max. |
| | Light colours | cold - 60 °C | 6.0 | White and pastel shaded garments made of delicate fabrics. Gentle wash programme to avoid graying or yellowing of your laundry. Use heavy duty detergent, if necessary also stain removers or bleaches on oxygen basis. Do not use liquid detergent. | * | Yes | * | * | — | * | — | * | * | * | * | 1000 ¹⁾ |
| | Dark | cold - 60 °C | 6.0 | Black and dark garments made of cotton, cotton blends and polyester. Special programme to reduce colour fading and local discolouration. Prefer to use a special liquid detergent for dark garments with this programme. | * | Yes | * | * | * | * | * | * | * | * | * | 1000 ¹⁾ |
| Eco | SuperEco | cold - 60 °C | 9.0 | Heavily soiled and robust laundry, made of cotton, synthetics and their blends. Economical energy consumption by prolonged washing duration - Ideal to be run overnight to profit from more favourable energy rates. Avoid noise of spinning at night by setting the spin speed to "0" and start spin programme in the morning, or by defining programme start with "Start delay" accordingly. For garments with a high share of synthetic fibres, we recommend to use a laundry net. | — | Yes | * | * | — | — | * | * | * | * | * | max. |
| | AquaEco | cold - 40 °C | 3.0 | Lightly soiled laundry made of synthetic fibres, or synthetics mixed with cotton garments. Saving programme with a very low water consumption. Use liquid detergent and the lowest recommended amount for 3kg laundry. Do not use softener. | — | Yes | — | * | — | — | — | * | * | * | * | max. |
| | Speed 15 | cold - 30 °C | 3.0 | Briefly worn clothing made of cotton, artificial fibres and blends with cotton. Refresh programme. Use lowest recommended detergent amount. | — | Yes | * | * | — | — | — | * | * | * | * | max. |
| Specials | Bedlinen | cold - 95 °C | 3.5 | White and coloured bedlinen made of cotton and synthetic fibres, or blends of both. Reduces microbes and gently cleans, also delicate bedlinen. A thorough rinse phase helps to prevent detergent and pollen residues. Prefer powder detergent for this programme. | * | Yes | * | * | — | * | * | * | * | * | * | max. |
| | Big Items | cold - 60 °C | 3.0 | Blankets made of synthetic fibres; bedcovers filled with feathers, polyester or other artificial fibres; sleeping bags, bathmats and similar items. | * | Yes | * | * | — | * | * | * | * | * | * | 1000 ¹⁾ |
| Rinse & Spin | — | — | 9.0 | Rinse and intensive spin programme. Same as the last rinse and the final spin in the "Cotton" programme. | — | — | * | — | — | — | * | — | * | * | max. | |

*: optional / Yes : dosing required
¹⁾ For improved garment care, spin speed is restricted in these programmes.

The wool/handwash cycle of this machine has been tested and approved by The Woolmark Company for the washing of Woolmark garments labelled as "machine wash" or "hand wash" provided that the garments are washed according to the instructions on the garment label and those issued in this programme chart. M0702



CONSUMPTION DATA

| Programme | Temperature (°C) | Load (kg) | Water (l) | Energy (kWh) | Approx. Programme Duration (hours : minutes) ☹ | |
|---------------|---------------------|--------------|--------------|-----------------|---------------------------------------------------|--------------|
| | | | | | without "Rapid" | with "Rapid" |
| Mixed | 40 | 6.0 | 70 | 0.60 | 1:00 | — |
| Cotton | 95 | 9.0 | 87** | 2.60 | 2:20 | — |
| Cotton* | 60 | 9.0 | 64 | 1.17 | 4:00 | 2:30 |
| Cotton* | 60 | 4.5 | 44 | 0.90 | 3:10 | *** |
| Cotton | 40 | 9.0 | 64 | 1.00 | 3:30 | 2:15 |
| Cotton* | 40 | 4.5 | 44 | 0.85 | 3:15 | *** |
| Synthetics | 60 | 3.5 | 48** | 0.85 | 1:35 | 1:14 |
| Synthetics | 40 | 3.5 | 45 | 0.50 | 1:20 | 0:59 |
| Delicates | 30 | 2.5 | 60 | 0.40 | 0:45 | — |
| Wool/Handwash | 40 | 2.0 | 45 | 0.60 | 0:40 | — |
| White | 40 | 9.0 | 85 | 0.85 | 2:20 | — |
| Light colours | 40 | 6.0 | 70 | 0.50 | 1:20 | — |
| Dark | 40 | 6.0 | 49 | 0.60 | 1:40 | 1:15 |
| SuperEco | 60 | 9.0 | 75 | 0.95 | 4:00 | — |
| AquaEco | 40 | 3.0 | 19 | 0.45 | 1:00 | — |
| Speed 15 | 30 | 3.0 | 30 | 0.20 | 0:15 | — |
| Bedlinen | 60 | 3.5 | 60 | 1:30 | 2:00 | — |
| Big Items | 40 | 3.0 | 75 | 0.75 | 1:30 | — |

Consumption values were measured in normalized conditions, in compliance with IEC/EN 60456. In the home, they may vary depending on the individual water supply pressure and temperature, the load and the type of wash. The consumption data indicated are based on an inlet water temperature of approx. 15°C through the cold fill valve as well as the hot fill valve (if available). If your washing machine has a hot fill valve, connection of this valve to hot water supply will lower the energy consumption by reduced heating times, depending on the individual hot fill inlet water temperature. Water and energy consumptions refer to the default setting of the programmes, with temperature and load as indicated in the table; selecting any options or changing the spin speed will also change the consumption data.

☹ The programme duration may differ from the values indicated above as it depends on the operation conditions applicable at that time (see also "Troubleshooting Guide" in your Instructions for Use).

** Reference programmes for Energy Label.

To reduce the water temperature, some cold water is added at the end of the main wash cycle before the water is drained.

*** Automatic adaptation of programme duration after detection of wash load.

ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add detergent as indicated on the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use. Turn the programme selector to the desired programme; the light of the "Start/Pause" button ▷|| blinks. The temperature and spin speed indicated on the display can be altered by pressing the "Temperature" button °C or the "Spin" button ☹.

SELECT ANY DESIRED OPTION

If the combination of programme and additional option(s) is not possible, the indication switch off automatically. Unsuitable combinations of options are deselected automatically. For certain programmes, an option may already be preset; if you want you can deselect it.

"Colours 15" button ✨15°

- Saves energy used for water heating while maintaining a good wash result.
- Supports colour maintenance when washing coloured laundry.
- Recommendable for lightly soiled laundry without stains.
- Use special cold wash detergents with this option to enable a good wash result.
- Not selectable for Cotton 70 - 95°C.

"Rapid" button ⚡

- Enables quicker washing by shortening the programme duration.
- Recommendable for only lightly soiled laundry.
- Not selectable for Cotton 70 - 95°C.

"Prewash" button ☹

- Adds a prewash cycle to the wash programme selected; prolongs the programme by about a quarter of an hour.
- Recommended for heavily soiled laundry (e.g. containing sand or granular dirt).
- Do not use liquid detergent for the main wash when activating the "Prewash" option.

"Intensive rinse" button ☹

- More water is added and rinse cycle is prolonged.
- This option is particularly suitable for areas with very soft water or for washing baby linen, and helps people with allergies.

"Soil level" button ☹

- Adapts the programme duration to the soil level of your laundry. Also influences the detergent quantity recommendation when using the "Dosing Aid" button.

☹ = lightly soiled - ☹ = normally soiled - ☹ = heavily soiled
Not all soil levels are selectable for each programme.

"Spin" button ☹ (incl. "Rinse Hold" ☹)

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If you select spin speed "0", the final spinning is cancelled and the water is drained out only. However, intermediate spin phases remain during the rinse.
- If you select "Rinse hold" ☹, the laundry remains in the last rinse water without progressing to the final spin cycle, to avoid creasing and prevent colours from changing. To activate the "Rinse hold", press the "Spin" button repeatedly until the "Rinse hold" symbol ☹ on the display lights up.

- The wash programme stops to "Rinse hold" when the "Rinse hold" ☹ light in the programme sequence indicator is on; the light of "Start/Pause" button blinks.
- To terminate the "Rinse hold" by draining the water, without any spinning, press the "Start/Pause" button.
- To terminate the "Rinse hold" by spinning the laundry, press the "Spin" button to select the desired spin speed and then "Start/Pause" to start the spin cycle.
- Do not leave the laundry to soak for too long in the "Rinse hold".

SET A START DELAY ☹

The "Start delay" ☹ allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper.

- Select programme, temperature, spin speed and options.
- Press the Start delay button to select a delay time up to 23 hours.
- Press the "Start/Pause" button ▷||. The countdown of the delay time begins; the start delay symbol and the colon between hours and minutes blink.
- The time delay indication disappears when the programme starts and it is replaced by the remaining programme time.
- If you use the "Dosing Aid" button: select the delay time BEFORE pressing the "Dosing Aid" button. The countdown of the selected delay time begins after having pressed the "Start/Pause" button ▷|| for the second time (see separate Instructions for Use concerning the "Dosing Aid").

To cancel the "Start delay"

...before you press the "Start/Pause" button:

- Press the "Reset/Drain" button ↵/☹, or set the start delay time to "0:00" - the delay time disappears after a few seconds.

...after having started the programme:

- Press the "Start/Pause" button ▷|| - the delay time disappears from the display. Press "Start/Pause" again if you want to start the selected programme immediately.

DETERGENT DOSING RECOMMENDATION ☹

With the "Dosing Aid" button, you can make your washing machine indicate you the recommended detergent quantity for your wash load, depending on the soil level selected and the size of the load.

- Helps to save detergent and protect the environment and also sensitive skin by avoiding detergent overdosing.
- Before you use this function, you must adapt the washing machine to the dosing amounts which are recommended for the detergents you use. Also check if your region's water hardness corresponds with the water hardness level "soft" of your washing machine - if not adapt it.
- Select programme, options and start delay BEFORE using the "Dosing Aid" button.

For any details, refer to the separate "Dosing Aid" Instructions for Use.

"DOOR OPEN" INDICATION ☹

Before starting and after end of a programme, the lamp lights to show that the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Reset a running programme before the end".

PROGRAMME START ▷||

Open the tap and press the "Start/Pause" button ▷||. The indication lamp next to the "Start/Pause" button ▷|| lights

up. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Drain/Spin.

CHILD LOCK ☹

Activating the child lock prevents children from starting a wash cycle or changing the settings of a running programme. The child lock cannot be activated or deactivated when the programme selector is in the "Off/O" position. To activate the child lock:

- Turn the programme selector to a programme position, or run a programme as usual.
- Press the 2 buttons marked with the key symbol ☹ simultaneously for at least 3 seconds. A key-like symbol will shortly appear on the display to indicate that the child lock is active.

Any time you try to change a programme setting with active child lock, the display will briefly show the key-like symbol. The programme setting cannot be changed anymore. The only change possible is to switch the washer off by turning the programme selector to the "Off/O" position. To deactivate the child lock:

- Press again the 2 buttons marked with the key symbol ☹ simultaneously for at least 3 seconds.

FAILURE INDICATIONS

If one of the failure indications on the display lights up, refer to the "Troubleshooting Guide" in your "Instructions for Use".

PROGRAMME END

- All the lights of the programme sequence indicator are off and the "Door open" indication ☹ lights up.
 1. Turn the programme selector to the "Off/O" position.
 2. Close the water tap.
 3. Open the door and unload the machine.
 4. Leave the door ajar to allow the drum to dry.

DETERGENT OVERDOSAGE INDICATION ☹

The symbol will light up at the end of the programme if you used too much detergent. Use less detergent next time. If the symbol lights up and the display shows "Fod", too much foam interrupted the wash process; refer to the "Troubleshooting Guide" in your Instructions for Use.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the "Start/Pause" button ▷|| to pause the programme. The light blinks.
2. Select the new programme, temperature, any options and another spin speed if you want.
3. Press the "Start/Pause" button ▷|| again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

RESET A RUNNING PROGRAMME BEFORE THE END ↵/☹

The "Reset/Drain" button ↵/☹ cancels a programme before the end.

- Press and hold the "Reset/Drain" button ↵/☹ for a few seconds; an animation appears on the display. The water is drained out; it may last some time until you can open the door.