




# QUICK GUIDE

GB

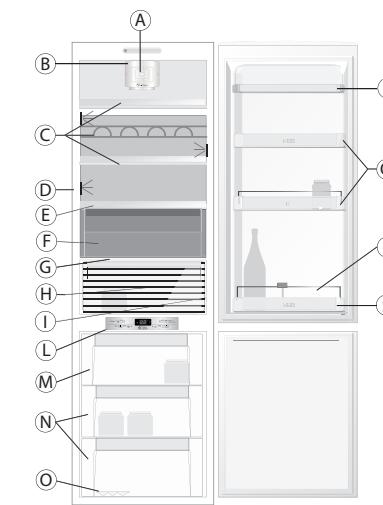

## Refrigerator Compartment

- A. Fan and anti-bacterial and anti-odour filter (depending on model)
- B. Bulb or LED light (depending on the model)
- C. Shelves
- D. LED lights (depending on the model)
- E. Special Compartment ("Meat & Fish" or "Zero Degrees") (if available) cover
- F. Special Compartment ("Meat & Fish" or "Zero Degrees") (if available)
- G. Crisper cover
- H. Crisper(s)
- I. Rating plate (located at side of crisper)
- L. Control panel
- P. Dairy compartment
- Q. Door trays
- R. Bottle holder (if provided)
- S. Bottle shelf



## Freezer Compartment

- M. Top drawer or door (freezing zone)
- N. Middle and bottom drawers (frozen and deep-frozen food storage zone)
- O. Ice cube tray (if provided)

**Note:** All shelves, door trays and racks are removable.  
The ideal food storage temperatures are already factory set

**Read the instructions carefully before using the appliance.**

**Features, technical data and images may vary according to the model.**

### Freezer compartment temperature

A different temperature can be set using the "Freezer °C" button.

### Fast Freezing

To be activated 24 hours before placing large quantities of food to be frozen in the freezer compartment. Press the "Freezer °C" button repeatedly until the message "FF" appears on the display. The function is automatically disabled after 48 hours, or can be switched off manually by pressing the button again. Make sure food to be frozen is not touching already frozen food. When freezing large quantities of food, the temperature alarm may occur (depending on the model).

### Stop Cooling


Press for 3 seconds to activate/deactivate appliance cooling. The indicator lights up in Stop Cooling mode.  
Notes: This operation will not disconnect the appliance from the power supply. This function does not deactivate the inside light, which can be switched off by pressing the button on the base of the fan.



The display can alternately show the refrigerator compartment temperature (2°C to 8°C) or the freezer compartment temperature (-17°C to 24°C). When the message "FF" appears on the display, the "Fast Freezing" function is on.

### Temperature or Malfunction Alarm

See table below

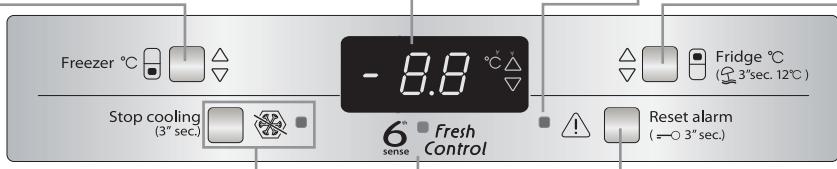

### 6th Sense Fresh Control

This function allows optimum storage conditions (regarding temperature and humidity) to be quickly reached inside the appliance. The fan must also be switched on for it to work properly. The function can be deactivated/reactivated (see Fan description).

**Fan.** The fan is preset to ON. To deactivate the fan, press the "Freezer °C" and "Fridge °C" buttons together for 3 seconds. When the 6th Sense Fresh Control indicator is off, the fan is switched off and therefore the 6th Sense Fresh Control is deactivated. Repeat the same procedure to reactivate the fan and 6th Sense Fresh Control function. If the ambient temperature exceeds 27°C, the fan must be on in order to ensure the proper preservation of foods. Deactivation of the fan allows energy consumption to be optimised.

### Refrigerator compartment temperature

A different temperature can be set using the "Fridge °C" button.

### Vacation (Vacation Mode)

This function can be used during a prolonged absence. Press the "Fridge °C" button for 3 seconds to activate/deactivate the function. The display shows the refrigerator compartment temperature (+12°C). After activating the function, remove the food from the refrigerator compartment and keep both doors closed: the refrigerator will maintain a suitable temperature to prevent odours. The freezer remains switched on.

### Switching off acoustic alarms

To deactivate acoustic alarms, press the "Reset Alarm" button.

### Key Lock

The key lock can be activated/deactivated by keeping the "Reset Alarm" button pressed for 3 seconds, until a confirmation beep sounds: "LO" will appear on the display for a few seconds. A beep will sound and "LO" will appear on the display for a few seconds if any key is pressed while the Key Lock is on.

## What to do if...

## Possible causes:

## Solutions:

The control panel is off and the appliance is not working.

There might be a problem with the electric power supply to the appliance.

### Check:

- There isn't a power supply failure.
- If the plug is inserted properly into the power socket and the bipolar mains switch is in the right position (i.e. power supplied to the appliance).
- The electric circuit safety devices installed in the house are fully functional.
- The power cable isn't broken.

Only for the version with double display: the control panel remains lit up (even with the door closed), the internal light is not working (or flashes) and a beep sounds (if not previously disabled).

### Refrigerator door open alarm

This activates when the refrigerator door is left open at length.

### To switch off the acoustic alarm,

press the mute alarm button and to remove an alarm completely, close the refrigerator door. On re-opening the door, check the light is working properly.

The internal light is not working.

If the control panel has 2 displays, check for a refrigerator door open alarm (see previous line). In all other cases, you may need to replace the light.

Models with standard lights: unplug the appliance from the mains power supply, check the bulb and replace it if necessary with a new one (see section entitled "Changing bulb or LED").  
Models with LED lights: contact an authorized After-Sales Service.

It is not cold enough inside the compartments.

There could be various causes (see "Solutions" column).

### Check:

- The doors close properly.
- The appliance is not placed near a heat source.
- The right temperature has been set.
- The circulation of air through the fan grilles at the bottom of the appliance is not obstructed.

Water collects at the bottom of the refrigerator compartment.

The defrost water drain is obstructed.

Clean the defrost water drain hole (see "Maintenance and Cleaning" section).

The front edge of the appliance near where the door seal strikes is warm.

This is not a defect. It is a design feature to prevent condensation from forming.

No action is required.

The control panel won't do anything. Every time a key is pressed, "CL" or "LO" appear on one or both displays.

The "Key Lock" function has been enabled.

Disable the function as explained in the Quick Start Guide.

The red indicator lamp will light up and a beep will sound (if not previously disabled).

### Temperature Alarm Freezer Compartment

The temperature alarm indicates that the temperature in the compartment is not ideal. This can happen: When it is first used after defrosting and/or cleaning, when freezing large quantities of food or when the freezer door doesn't close properly.

Press the **mute acoustic alarm** button to switch off the sound signal. The red indicator lamp goes off automatically when an optimal temperature has been reached. If the temperature alarm persists, contact an authorized After-Sales Service.

The red indicator lamp is flashing, there are letters on the single display, and a buzzer is sounding (if not previously disabled).

### Malfunction Alarm

The alarm indicates that a technical component has malfunctioned.

Call an authorized After-Sales Service. Press the **mute acoustic alarm** button to switch off the sound signal.

A buzzer sounds, and the freezer temperature display and the red indicator lamp (if installed) flash.

### Blackout Alarm (where provided)

This alarm activates when there has been an extended power failure causing the freezer compartment temperature to rise. The value flashing on the freezer display is the highest temperature reached during the power failure.

Press the mute alarm button to switch off the acoustic signal. Check the state of foodstuffs before consuming them.

A buzzer sounds. The red indicator lamp flashes or the letters "Af" appear on the display (depending on the model).

### Antibacterial and anti-odour filter exhausted (if installed)

Replace the antibacterial filter.

After replacing the filter, press and hold the mute alarm button for at least three seconds: The red indicator lamp will go off.