

Refrigerator Compartment

- A. Fan and antibacterial and anti-odour filter (depending on the model)
- B. Lamp or LED light (depending on the model)
- C. Shelves
- D. LED lights (depending on the model)
- E. Crisper drawer cover
- F. Crisper(s)
- G. Rating plate (located at side of crisper)
- H. Control panel
- N. Dairy compartment
- O. Door trays
- P. Bottle holder (if provided)
- Q. Bottle bin

- Least cold zone
- Intermediate zone
- Coldest zone
- Fruit and vegetable zone

Freezer Compartment

- I. Top drawer (freezing area)
- L. Middle and bottom drawers (storage area for frozen and deep frozen food)
- M. Ice cube tray (if provided)

Note: All shelves, door trays and racks are removable.

The ideal temperatures for preserving foods are already factory-set.

Carefully read the user handbook provided before using the appliance.
The characteristics, technical data and images may vary according to the model.

Eco night function

The Eco night function enables the appliance's energy consumption to be concentrated in the hours that correspond to the cheapest electricity tariff (generally at night), when electricity is freely available and costs less compared to daytime (only in countries that utilize a multi-tariff system based on time of day - check your energy tariff with your local electricity utility company). To activate the function, press the button for 3 seconds at the time the cheap tariff begins (depending on your specific tariff). For example, if the cheap rate begins at 8 pm, press the button for 3 seconds at that time. When the Eco night LED is ON, the function is active. Once the function has been activated, the appliance automatically adapts energy consumption based on the time selected, i.e. consuming less energy during the day than at night.

IMPORTANT: To operate properly, the function must be active during both night and day.

The function remains active until deactivated (or it deactivates in the event of a blackout or appliance switch-off). To deactivate the function, press the button again for 3 seconds. When the Eco night LED is OFF, the function is not active.

Note: the appliance's declared energy consumption refers to operation with the Eco night function deactivated.

Fast freeze

Six hours before placing large quantities of fresh food in the freezer compartment, set a suitable temperature using the "Temperature" button. The temperature should be set as follows:




After placing food in the freezer, leave the temperature setting shown in the figure for at least 24 hours.

Note: Do not place fresh food to be frozen in direct contact with already frozen food.

On / Off

Press to activate/deactivate the appliance.


Note: This operation does not disconnect the appliance from the power supply.

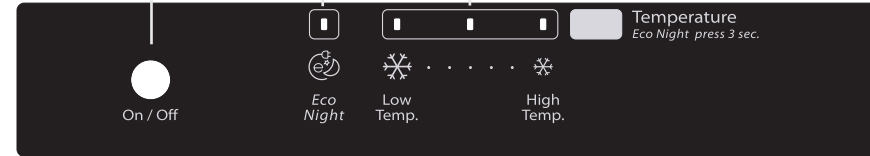

Fan (where provided)

The fan is factory set to ACTIVE.

The fan can be deactivated by pressing the button on the base (as shown in the figure). If the room temperature exceeds 27°C or if water droplets form on the glass shelves, the fan must be on in order to guarantee the correct preservation of food. Deactivation of the fan enables energy consumption to be optimised.

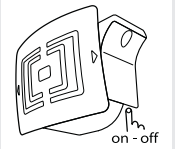

Refrigerator compartment temperature

The three green lights indicate the set refrigerator compartment temperature.

A different temperature can be set using the "Temperature" button.

The following adjustments are possible:

LED's on	Set temperature
	High (least cold)
	Medium-high
	Intermediate
	Medium-low
	Low (coldest)

What to do if...	Possible causes:	Cures:
The control panel is switched off, the appliance does not work.	The appliance could be in off mode. There may be an appliance power supply problem.	Activate the appliance with the On/Off button Make sure: - there is not a power outage - the plug is properly inserted in the power socket and the mains double-pole switch (if present) is in the correct position (i.e. allows the appliance to be powered) - the household electrical system protection devices are efficient - the power cable is not broken.
The inside light does not work.	The light may need replacing.	Models with lamp: disconnect the appliance from the power supply, check the lamp and, if necessary, replace it with a new one (see the section "Lamp or LED replacement"). Models with LED lights: contact the authorised Service Centre.
The temperature inside the compartments is not low enough.	There could be various causes (see "Cures")	Make sure: - the doors close properly - the appliance is not installed near a heat source - the set temperature is adequate - the circulation of air through the vents at the bottom of the appliance is not obstructed
There is water on the bottom of the refrigerator compartment.	The defrost water drain is blocked.	Clean the defrost water drain hole (see the section "Appliance Maintenance and Cleaning")
The front edge of the appliance, at the door striker seal, is hot.	This is not a defect It prevents condensation from forming.	No remedy is necessary.
One or more indicator lights flash.	Malfunction alarm The alarm indicates a fault in a technical component.	Call the authorised Service Centre. The appliance continues to maintain minimum preservation conditions.