 

**Refrigerator Compartment**

- A.** Fan and antibacterial and antiodour filter (depending on the model)
- B.** Lamp or LED light (depending on the model)
- C.** Shelves
- D.** LED lights (depending on the model)
- E.** Crisper drawer cover
- F.** Crisper(s)
- G.** Rating plate (located at side of crisper)
- H.** Control panel
- N.** Dairy compartment
- O.** Door trays
- P.** Bottle holder (if provided)
- Q.** Bottle bin


**Freezer Compartment**

- I.** Top drawer (freezing area)
- L.** Middle and bottom drawers (storage area for frozen and deep frozen food)
- M.** Ice cube tray (if provided)

**Note:** All shelves, door trays and racks are removable.

The ideal temperatures for preserving foods are already factory-set.

**Carefully read the user handbook provided before using the appliance.**  
**The characteristics, technical data and images may vary according to the model.**

**Eco night function**

The Eco night function enables the appliance's energy consumption to be concentrated in the hours that correspond to the cheapest electricity tariff (generally at night), when electricity is freely available and costs less compared to daytime (only in countries that utilize a multi-tariff system based on time of day - check your energy tariff with your local electricity utility company). To activate the function, press the Eco night button at the time the cheap tariff begins (depending on your specific tariff). For example, if the cheap rate begins at 8 pm, press the button at that time. When the Eco night LED is ON, the function is active. Once the function has been activated, the appliance automatically adapts energy consumption based on the time selected, i.e. consuming less energy during the day than at night.

**IMPORTANT:** To operate properly, the function must be active during both night and day.

The function remains active until deactivated (or it deactivates in the event of a blackout or appliance switch-off). To deactivate the function, press the button again. When the Eco night LED is OFF, the function is not active.

**Note:** the appliance's declared energy consumption refers to operation with the Eco night function deactivated.

**Stop Alarm**

To deactivate acoustic signals, press the "Stop Alarm" button.

**Fast Freeze**

Press the "Freezer" button for 3 seconds 24 hours before placing large quantities of fresh food in the freezer compartment. When the function is active, the sequence shown in the figure will appear on the display. This function is automatically deactivated after 48 hours, or manually by pressing the "Freezer" button again.

**Note:** Do not place fresh food to be frozen in direct contact with already frozen food.


**Refrigerator compartment temperature**

A different temperature can be set using the "Fridge" button. Five adjustments can be made,

from warmer temperatures  (left)

to the coldest temperature  (right)


**On/Standby**

Press for 5 seconds to deactivate the appliance. In Standby mode, no icons are lit on the display and the light in the refrigerator compartment does not come on. To switch the product back on, simply press the button briefly again.

**Note:** this operation does not disconnect the appliance from the power supply.

**Fan (where provided)**

The fan is factory set to ACTIVE.

The fan can be deactivated by pressing the button on the base (as shown in the figure). If the room temperature exceeds 27°C or if water droplets form on the glass shelves, the fan must be on in order to guarantee the correct preservation of food. Deactivation of the fan enables energy consumption to be optimised.


**6th Sense Fresh Control function**

Can be used to quickly achieve optimal storage conditions in terms of the temperature and humidity inside the appliance. The fan must also be active for it to work properly.

**Freezer compartment temperature**

A different temperature can be set using the "Freezer" button. Five adjustments can be made,

from warmer temperatures  (left)

to the coldest temperature  (right).

**What to do if...**
**Possible causes:**
**Cures:**

The appliance could be in On/Standby mode.  
There may be an appliance power supply problem.

Activate the appliance with the On/Standby button.  
Make sure:  
- there is not a power outage  
- the plug is properly inserted in the power socket and the mains double-pole switch (if present) is in the correct position (i.e. allows the appliance to be powered)  
- the household electrical system protection devices are efficient  
- the power cable is not broken.

The control panel is switched off, the appliance does not work.

The light may need replacing.

Models with lamp: disconnect the appliance from the power supply, check the lamp and, if necessary, replace it with a new one (see the section "Lamp or LED replacement").  
Models with LED lights: contact the authorised Service Centre.  
Activate the appliance with the On/Standby button.

The inside light does not work.

The appliance could be in On/Standby mode.

Make sure:  
- the doors close properly  
- the appliance is not installed near a heat source  
- the set temperature is adequate  
- the circulation of air through the vents at the bottom of the appliance is not obstructed.

The temperature inside the compartments is not low enough.

There could be various causes (see "Cures").

Clean the defrost water drain hole (see the section "Appliance Maintenance and Cleaning").

There is water on the bottom of the refrigerator compartment.

The defrost water drain is blocked.

No remedy is necessary.

The front edge of the appliance, at the door striker seal, is hot.

This is not a defect. It prevents condensation from forming.

To deactivate the acoustic alarm temporarily, press the alarm deactivation button; to eliminate it completely, close the refrigerator door again.

The red light  flashes and an acoustic alarm sounds.

**Door open alarm**  
Activated when a door remains open for a long period of time.  
**Malfunction alarm**  
The alarm indicates a fault in a technical component.

Call the authorised Service Centre. Press the "Stop Alarm" button to deactivate the acoustic signal.

The red light  comes on and the refrigerator compartment temperature indicators flash, as indicated in the figure: 

**Blackout alarm**  
Activated when the power is cut off for an extended period of time, causing the freezer compartment temperature to rise.

Press the stop alarm button to deactivate the acoustic signal. If the freezer compartment has not yet reached its optimal food storage temperature, the temperature alarm may be activated (see temperature alarm). Check the condition of the food before consuming it.

The red light comes on (without flashing) , an acoustic alarm sounds and the freezer compartment temperature indicators flash.

**Freezer compartment temperature alarm**  
The temperature alarm indicates that the temperature of the compartment is not at its optimum level. This may happen: when it is first used, after defrosting and/or cleaning, if large amounts of food are placed inside the freezer or when the freezer door has not been shut properly.

Press the Stop Alarm button to deactivate the acoustic signal. When the optimal temperature conditions have been reached, the red light switches off automatically. If the temperature alarm persists, contact the Authorised Service Centre.