

**Refrigerator Compartment**

- A.** Fan and antibacterial and antiodour filter (if available)
- B.** Lamp or LED light (depending on the model)
- C.** Shelves
- D.** LED lights (depending on the model)
- E.** Special Compartment cover ("Meat & Fish" or "Zero Degrees") (if available)
- F.** Special Compartment ("Meat & Fish" or "Zero Degrees") (if available)
- G.** Crisper cover
- H.** Crisper(s)
- I.** Rating plate (located at side of crisper)
- L.** Control panel
- P.** Dairy compartment
- Q.** Door trays
- R.** Bottle holder (if provided)
- S.** Bottle shelf

-  **Least cold zone**
-  **Intermediate zone**
-  **Coldest zone**
-  **Fruit&veg zone**

**Freezer Compartment**

- M.** Top drawer or door (freezing zone)
- N.** Middle and bottom drawers (frozen and deep-frozen food storage zone)
- O.** Ice cube tray (if provided)

**Note:** All shelves, door trays and racks are removable. The ideal food storage temperatures are already factory-set.

**Before using the appliance, also carefully read the instructions provided with it. The characteristics, technical data and images may vary according to the model.**


**On/Off**

Press to activate/deactivate the appliance.

**Note:** This operation does not disconnect the appliance from the power supply

**Super Cooling**



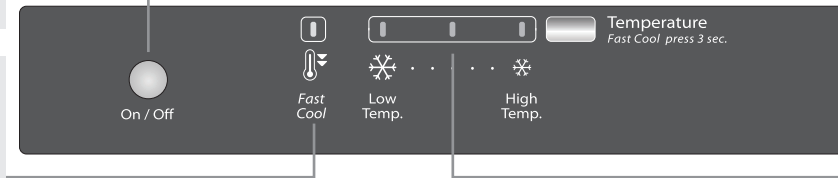


Press the "Temperature Fast Cool" button for 3 seconds before putting large amounts of fresh food in the refrigerator compartment. When the function is active, the yellow light is on and the three green lights are off. This function is automatically deactivated after 6 hours, or manually by pressing the button again for 3 seconds. When the function is not active, the yellow light is off and the indication of the set temperature is shown by the green lights.





**Refrigerator compartment temperature**

The three green lights indicate the set refrigerator compartment temperature. A different temperature can be set using the "Temperature Fast Cool" button.

The following adjustments are possible:

LED's on	Set temperature
	High (least cold)
	Medium-high
	Intermediate
	Medium-low
	Low (coldest)

 . . . . . 

What to do if...	Possible causes:	Solutions:
The control panel is switched off, the appliance does not work.	There may be an appliance power supply problem.	Make sure: - there is not a power outage - the plug is properly inserted in the power socket and the mains double-pole switch (if present) is in the correct position (i.e. allows the appliance to be powered) - the household electrical system protection devices are efficient - the power cable is not broken.
The inside light does not work.	The appliance could be in off mode.  The light may need replacing.	Activate the appliance with the On/Off button  Models with lamp: disconnect the appliance from the power supply, check the lamp and, if necessary, replace it with a new one (see the section "Lamp or LED replacement"). Models with LED lights: contact the authorised Service Centre.
The temperature inside the compartments is not low enough.	There could be various causes (see "Cures")	Make sure: - the doors close properly - the appliance is not installed near a heat source - the set temperature is adequate - the circulation of air through the vents at the bottom of the appliance is not obstructed
There is water on the bottom of the refrigerator compartment.	The defrost water drain is blocked.	Clean the defrost water drain hole (see the section "Appliance Maintenance and Cleaning")
The front edge of the appliance, at the door striker seal, is hot	This is not a defect It prevents condensate from forming.	No cure is necessary.
One or more green lights flash continuously.	Malfunction alarm The alarm indicates a fault in a technical component.	Call the authorised Service Centre.