

- 1.2.3. Top oven runner positions
- 11.12.13.14. Bottom oven runner positions
- 4. Control panel
- 5. Top oven cooling fan (not visible)*
- 6. Top oven light
- 7. Top oven grill heating element
- 8. Top oven bottom heating element (not visible)
- 9. Top oven door hinges
- 10. Top oven door
- 15. Bottom oven light
- 16. Bottom oven fan
- 17. Bottom oven round heating element
- 18. Bottom oven door hinges
- 19. Bottom oven cool door

 
Accessories

- 2 wire shelves
- 2 drip trays
- Kit "Grill Pan Set"


ACCESSORIES



Drip tray




Wire shelf

 

Grill Pan Set


CONTROL PANEL

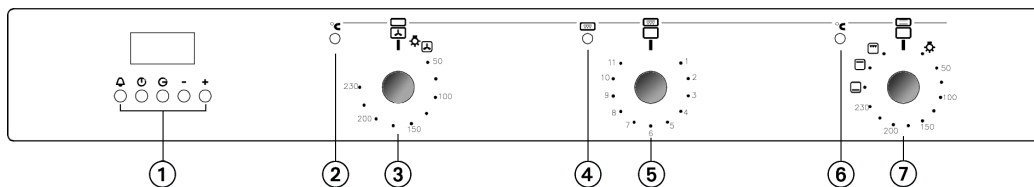




- 1. Programmer (for bottom oven only)
- 2. Bottom oven temperature light
- 3. Bottom oven function selector
- 4. Top oven grill control light
- 5. Top oven grill control knob
- 6. Top oven temperature light
- 7. Top oven function selector

***Warning: The cooling fan (not visible) still works for a few minutes after the oven is switched off to allow an optimal cooling of the appliance.**

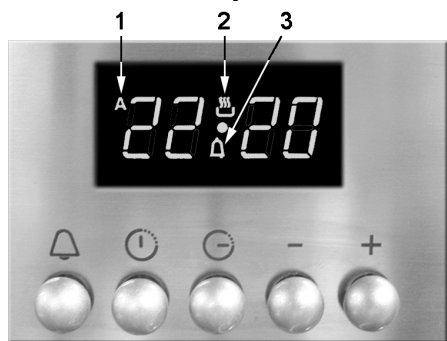ELECTRONIC PROGRAMMER (FOR BOTTOM OVEN ONLY)



-  Timer
-  Cooking time with automatic operation
-  End of cooking time
- Decreases the current value (all functions)
- +** Increases the current value (all functions)
- 1** Automatic operation
- 2** Cooking time and manual mode
- 3** Minute minder

Settings

If a function button is briefly pressed and released, the selected function is displayed for 5 seconds. Within this time, it is possible to select a function. Five seconds after the function button is released or after setting is completed, the display returns to the time of the day. When a programme has been set, it automatically starts immediately. The selection of a function is accompanied by an acoustic signal.

Digital clock

- The programmer is complete with a digital clock which has an illuminated display showing the hours and minutes. When the appliance is first connected to the power supply, and after any power failures or disconnections, the time can be set with the +/- buttons.
- The counting-up/counting-down speed increases/decreases when the buttons are held down.
- Select the time of the day function by pressing the cooking time and end of cooking time buttons simultaneously, and set the time of day with the +/- buttons. When you set the clock, all previously set programmes are cancelled.

Semi-automatic operation with cooking time

- Turn the oven on and set the desired temperature.
- Press the cooking time button and set the required time with the + button (e.g. for 30 minutes cooking time, enter 30 minutes). The "A" indicator and cooking pot symbol come on. When the cooking time has elapsed, the oven switches off, the acoustic signal sounds and the "A" indicator starts blinking. To mute the alarm, press the cooking time and end of cooking time buttons simultaneously. The oven will then return to manual mode.

Semi-automatic operation with end of cooking time

- Turn the oven on and set the desired temperature.
- Press the end of cooking time button and set the required end time with the + button (e.g. if the actual time of the day is 14.00 and you require 30 minutes cooking, enter 14.30). The "A" indicator and cooking pot symbol will come on. When the time of the day reaches the end of cooking time, the oven switches off, the acoustic signal sounds and the "A" indicator starts blinking. To mute the alarm, press the cooking time and end of cooking time buttons simultaneously. The oven will then return to manual mode.

Fully automatic operation

- Turn the oven on and set the desired temperature.
- Press the cooking time button and set the required time with the +/- buttons (e.g. for 30 minutes cooking, enter 30 minutes). The "A" indicator comes on.
- Select the end of cooking time. The earliest possible end time is displayed. Set the required end of cooking time with the + button (e.g. to finish cooking at 14.00, enter 14.00). The oven switches on at the specified time (e.g. if the end of cooking time is 14.00 and the cooking time 30 minutes, the cooking cycle will start at 13.30) and switches off when the established cooking time has elapsed. After the automatic cooking cycle has ended, the "A" indicator starts blinking accompanied by the acoustic signal. To mute the alarm, press the cooking time and end of cooking time buttons simultaneously. The oven will then return to manual mode.

Minute minder

Press the minute minder button and set the required time with the +/- buttons.

As the set time elapses the bell symbol remains alight. When the set time has elapsed, the acoustic signal sounds. To mute the alarm press the timer button. The minute minder does not control any oven function.

Acoustic signal

The acoustic signal sounds at the end of a minute minder cycle or a cooking cycle for a period of 7 minutes. Once you have set the clock on the time of day (with all the other functions cancelled), you can set the level of the acoustic alarm by pressing the - button. Three levels are available (low - medium - high).





 
Setting error

This will be indicated by the acoustic signal and by the blinking auto symbol. The faulty setting can be corrected by resetting either the cooking time or the end of cooking time or by cancelling the programme.

Cancelling a programme

To cancel a programme press the cooking time and end of cooking time buttons simultaneously. This will select the manual function. Every programme will be automatically cancelled, once it has come to an end.

OVEN FUNCTIONS





| Top oven functions table | |
|--|---|
| Function | Description of function |
| I OVEN OFF | - |
|  LAMP | <ul style="list-style-type: none"> To switch on the oven light. |
|  STATIC | <ul style="list-style-type: none"> To cook meat, fish and poultry in the oven. Preheat the oven to the required cooking temperature and place the food inside as soon as the red thermostat light turns off. It is advisable to use the second or third level. Turn the selector knob "7" clockwise and set the desired cooking temperature between 50°C and 230°C. The thermostat light "6" switches on. The oven light switches on. When the required temperature has been reached, the thermostat light will switch off. At the end of cooking. Turn the selector knob "7" anticlockwise to position "1". |
|  BOTTOM HEATING ELEMENT | <ul style="list-style-type: none"> To finish cooking fruit or cheese cakes or to thicken sauce. Use this function for the last 10/15 minutes of cooking time. |
|  TOP HEAT ONLY | <ul style="list-style-type: none"> For browning food. Use the upper heating element for the last 10 or 15 minutes of cooking time. |
|  DOUBLE GRILL | <ul style="list-style-type: none"> To cook meat (smoked bacon, steaks, sausages, etc.) and for making toast. Preheat the oven for 5 min. with the door closed. For best results, leave the oven door open when grilling. Arrange food on the wire shelf. When cooking meat, to avoid spatters of fat and smoke, pour a little water into the drip tray. Turn the food during grilling. Once the function has been selected, turn the power knob "5" clockwise to the required power level (I-II). The thermostat indicator light switches on; when the required cooking power is reached it will turn off. |

SWITCHING ON THE OVEN






Please operate as follows:

- Turn the selector knob "7" clockwise to the symbol of the required function.
- The oven light switches on.
- When the required temperature has been reached, the light will switch off.
- At the end of cooking turn the selector knob "7" anti-clockwise to Position "1".

COOKING TABLES



| FOOD | Function | Preheating | Level (from the bottom) | Temperature (°C) | Cooking time min. |
|------------------------|---|------------|-------------------------|------------------|-------------------|
| Chicken |  | yes | 1 | 200 | 55 - 65 |
| Steak and kidney pie |  | yes | 1 | 180 | 110 - 120 |
| Victoria sandwich cake |  | yes | 2 | 180 | 25 - 35 |
| Semi-rich fruit cake |  | yes | 2 | 140 | 170 - 200 |

COOKING TABLE FOR GRILL FUNCTION

| FOOD | Function | Preheating | Grill power level | Cooking time min. |
|--------------|---|------------|-------------------|-------------------|
| Toast |  | yes | 11 | 1 - 3 |
| Pork chops |  | yes | 11 | 30 - 35 |
| Spits |  | yes | 11 | 35 - 40 |
| Bacon rasher |  | yes | 11 | 15 - 20 |
| Sausages |  | yes | 11 | 25 - 35 |

N.B.: Cooking times are indicative.

OVEN FUNCTIONS

| Bottom oven functions table | |
|---|---|
| Function | Description of function |
| I OVEN OFF | - |
|  LAMP | <ul style="list-style-type: none"> To switch on the oven light. |
|  FORCED AIR FUNCTION | <ul style="list-style-type: none"> To cook (without preheating) foods that require the same cooking temperature on one or more levels (e.g.: fish, vegetables, sweets), without transferring odours from one foodstuff to the other. |






SWITCHING ON THE OVEN

- Turn the knob “3” clockwise to the required temperature. The thermostat light switches on. When the required temperature has been reached, the light will switch off.
- The oven light switches on.

At the end of cooking time:

- Turn the knob to “1” position.

COOKING TABLES

| FOOD | Function | Preheating | Level (from the bottom) | Temperature (°C) | Cooking time min. |
|-----------------------------------|---|------------|-------------------------|------------------|-------------------|
| Apple pie |  | no | 2 | 180 | 35 - 45 |
| Small cakes |  | no | 1 + 3 | 175 | 35 - 40 |
| Scones |  | yes | 1 + 3 | 200 | 10 - 15 |
| Roast beef + potatoes + fruit pie |  | no | 1 | 190 | 60 - 70 |
| | | | 3 | | 35 - 40 |
| Yorkshire pudding (12 buns) |  | no | 2 | 200 | 25 - 30 |

N.B.: Cooking times are indicative.