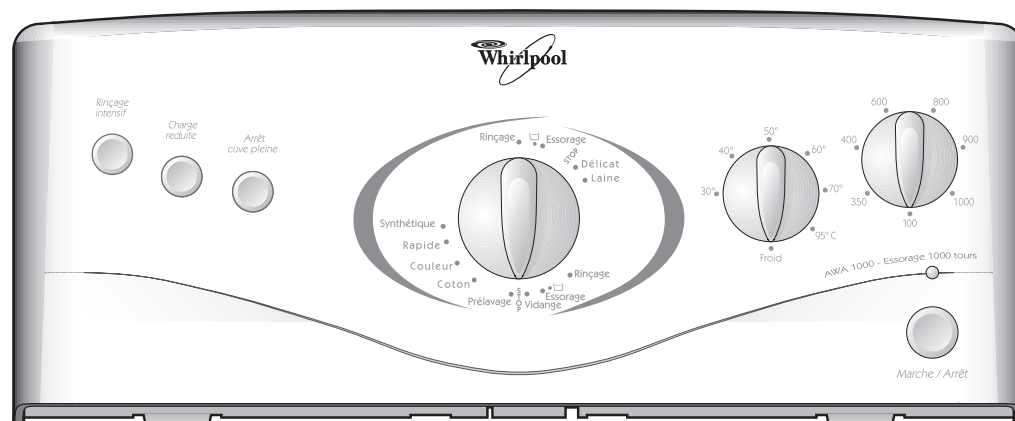


**GB AWA 1000**


“Froid” Cold  
 “Marche/Arrêt” On/Off

Programme duration figures (guideline) are valid for maximum temperature wash with no special functions.

\* : option / Yes: dosing required

- 1) Do not use liquid detergents.
- 2) For improved garment care spin speed is restricted to 500 rpm in this programme.
- 3) For improved garment care spin speed is restricted to 400 rpm in this programme.

Programme	Type of wash / Notes	Max. load kg	Detergents and additives				Options			Temperature Selector °C	Maximum Spin Speed rpm	Programme time approx. min.
			Prewash	Main Wash	Softener	Bleach	Rinçage Intensif Intensive Rinse	Charge Réduite Half Load	Arrêt cuve pleine Rinse Hold			
Pré-lavage Cotton with Prewash	Heavily soiled sheets, tablecloths, underclothes, shirts etc. in hard wearing and high temperature resistant cotton. <i>The maximum load for heavily soiled washing is 3.5 kg.</i>	5.0	Yes <sup>1)</sup>	Yes	*	*	*	*	*	from “Froid” to 95	1000	130
Coton Cotton	Moderately soiled sheets, tablecloths, underclothes, towels etc. in hard wearing and high temperature resistant cotton.	5.0	— <sup>1)</sup>	Yes	*	*	*	*	*	from “Froid” to 95	1000	115
Couleur Coloured	Averagely soiled blouses, shirts etc. made of polyester (Diolen, Trevira); polyamide (Perlon, Nylon), or cotton blends.	2.0	— <sup>1)</sup>	Yes	*	—	*	*	*	from “Froid” to 60	1000	100
Rapide Quick Wash	Blouses, shirts, cotton blouses, dark coloured terry towelling, jeans, etc. lightly soiled.	5.0	— <sup>1)</sup>	Yes	*	—	*	*	*	from “Froid” to 40	1000	85
Synthétique Synthetics	Lightly soiled shirts, blouses etc., made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or cotton blends.	2.0	— <sup>1)</sup>	Yes	*	—	*	*	*	from “Froid” to 40	500 <sup>2)</sup>	70
Rinçage Rinse + Spin	This programme allows starch or softener to be added. It is followed by an intensive spin cycle.	5.0	— <sup>1)</sup>	—	*	—	*	*	*	“Froid”	1000	20
Essorage Spin	Programme for intensive spin cycle.	5.0	— <sup>1)</sup>	—	—	—	—	—	—	—	1000	15
Délicat Delicate	Delicate fabrics and curtains (dresses, skirts, shirts, blouses, etc.).	1.5	— <sup>1)</sup>	Yes	*	—	—	—	*	from “Froid” to 40	400 <sup>3)</sup>	55
Laine Wool	Machine washable woollens with pure new wool label. <i>If the “Rinse Hold” option is selected don’t leave the wash to soak for too long.</i>	1.0	— <sup>1)</sup>	Yes	*	—	—	—	—	from “Froid” to 40	400 <sup>3)</sup>	45
Rinçage Rinse + Spin	This programme allows starch or softener to be added. It is followed by a gentle spin cycle.	1.5	— <sup>1)</sup>	—	*	—	—	—	*	“Froid”	400 <sup>3)</sup>	15
Essorage Spin	Programme for gentle spin cycle.	1.5	— <sup>1)</sup>	—	—	—	—	—	—	—	400 <sup>3)</sup>	10
Vidange Drain	Drain only, without spin cycle. <i>Alternative way to end programmes after a “Rinse Hold”.</i>	—	— <sup>1)</sup>	—	—	—	—	—	—	—	—	5

N.B. This machine is controlled by sensors. Please avoid excessive detergent dosing.

### ENERGY AND WATER CONSUMPTION DATA







Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Programme time (min)
Cotton + Intens. Rinse	95	5.0	72	1.80	115
Cotton	60	5.0	62	1.15	115
Coloured	60	2.0	60	0.80	100
Coloured	40	2.0	60	0.40	100
Quick Wash + Half Load	40	2.5	54	0.50	85
Synthetics + Half Load	40	2.0	54	0.40	70
Delicate	40	1.5	70	0.65	55
Wool	40	1.0	70	0.55	45

Prewash cycle increases programme duration approximately 15 min. Consumption values were measured in normalized conditions in compliance with standard IEC 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash. The data on the "Energy Label" refer to the programme "Cotton 60°C".

\* The remaining time indicator can similarly deviate from the values in the table, because it takes into account the household conditions applicable at that time.

\*\*To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

### PREPARATION OF WASH CYCLE

- Close the drum flaps and check that they are properly locked.
- Add detergents and additives into the dispenser to no more than the "MAX" level mark, as follows:
  - Programme with pre and main wash 
  - Main wash programme without prewash 
  - Fabric softeners and conditioners 
  - Chlorine bleach 
  - Stain remover agents 
  - Anti-scale agents (if necessary) 
- Turn the **programme selector knob** clockwise to the desired programme.
- Turn the **temperature knob** to the required temperature.
- Turn the **spin speed knob** to the required spin speed.

### PRESS ANY DESIRED OPTION BUTTON(S)

#### Intensive Rinse button "Rinçage Intensif"


- The water level increases for improved rinsing efficiency.
- This option is particularly suitable for areas with very soft water when washing baby linen and helps people with skin allergies.
- For improved garment care it is advised to use the option for the Cotton 90° C and the Coloured 60° C programme.

#### "Half Load" button "Charge Réduite"

- Reduces the water consumption in the "Cotton" and "Synthetics" programmes especially during the rinse.
- Especially suitable for lightly soiled or small loads (reduces the quantity of detergent).
- Not suitable for high temperature programmes.

#### Rinse Hold button "Arrêt Cuve Pleine"

- The laundry remains in the last rinse water, without progressing to the spin cycle to avoid creasing and prevent colours from changing.
- This option is especially recommended for the "Synthetics" or "Delicate" programmes.
- This option is perfectly suitable if you wish to postpone the spin or you don't wish to spin the clothes.

**Note:** the programme selector stops on .

#### Terminate the "Rinse Hold" option.

- Press the "Rinse Hold" button again; the programme will terminate automatically with the spin cycle corresponding to the previously selected wash programme.
- If you do not wish to spin the clothes, switch off the appliance by pressing the "On/Off" button. The pilot light goes out. Turn the programme selector to the "Drain" position and switch on the appliance.

### PROGRAMME START

Open the water inlet tap and press the "On/Off" button. The pilot lamp lights up.

### DOOR LOCK

During the running programme, the door cannot be opened.

The door locks automatically in all programmes. If the programme is stopped or if an electrical power failure occurs, the door unlocks automatically after about 1 minute.

### PROGRAMME END

- The programme selector knob is at "STOP", the pilot lamp lights.
- Press the "On/Off" button. The pilot light goes out.
  - Cancel the options by pressing the appropriate buttons.
  - Turn the water supply tap off.
  - Wait for the door to unlock (about 1 minute).
  - Open the door and the drum flaps and unload the machine.

### SELECTING A NEW PROGRAMME, SPIN SPEED, OPTIONS AFTER PROGRAMME START

- Press the "On/Off" button to switch off the appliance. The pilot light goes out.
- Select the new programme, temperature, spin speed and options.
- Press the "On/Off" button to switch on the appliance. The pilot light lights.

### TO STOP, RESET A PROGRAMME BEFORE THE END

- Press the "On/Off" button to switch off the appliance. The pilot light goes out.
- Set the programme selector on "Drain".
- Press the "On/Off" button to start the "Drain" programme. Only open the door when the programme selector is at "STOP" and the door is unlocked (after approximately 1 minute).

### NOTES AND INDICATIONS FOR USE

- After switching your washing machine on, it does not start immediately: it needs some seconds in order to lock the door, fill water and then drum starts turning.
- Spinning has an interrupted start-up: the drum starts and stops running several times, to improve spin efficiency and to better balance the laundry.
- At the end of the spinning cycle the drum goes on reversing for some minutes: this helps you unloading the laundry.
- Do not exceed in detergents dosage: excessive foam formation may prevent spinning.
- Your imbalance detection and correction system reduces spin speed or interrupts the spin automatically in case of imbalance load - see "troubleshooting guide".
- Your machine has a new, electronically-controlled motor: don't be surprised by its sound.
- If you want to change the programme during the wash cycle, remember to switch the machine off before turning the programme selector knob.