
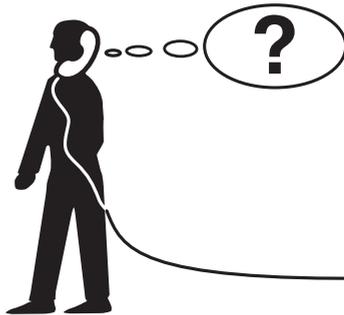
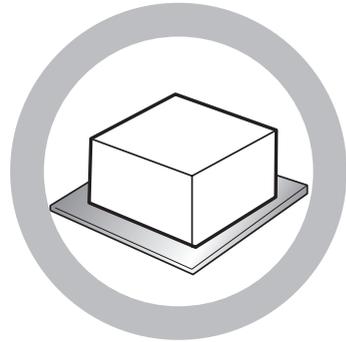
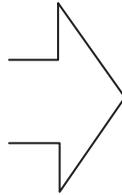
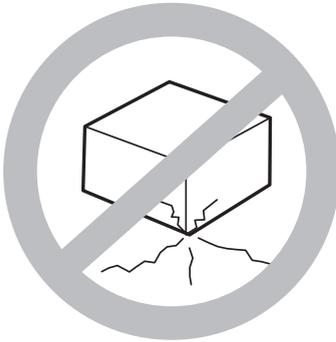
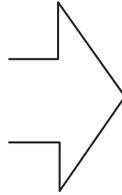
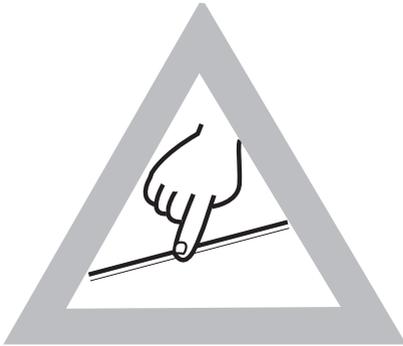
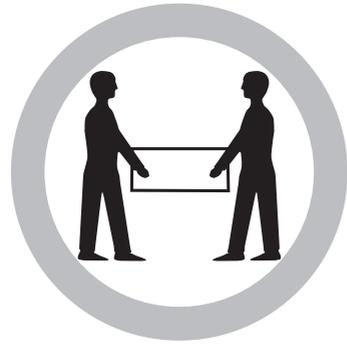




## **GB** INSTALLATION AND USE

**For installation:** The minimum distance between the support surface of the recipients on the cooking device and the lowest part of the hood must not be less than 60 cm in the case of electric cookers and 70 cm for gas or combination cookers. If the installation instructions for the gas cooker specify a greater distance, this must be taken into account. It is advisable to contact a qualified technician for installation.



**⚠ WARNING:** Very heavy product; hood handling and installation must be carried out by at least two persons.

**Note on installation and use:** Read this manual before installing or using the hood. The Manufacturer declines all liability for any faults, damage or fires caused by the appliance as a result of failure to observe the instructions and recommendations given in this manual.


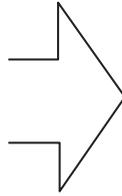


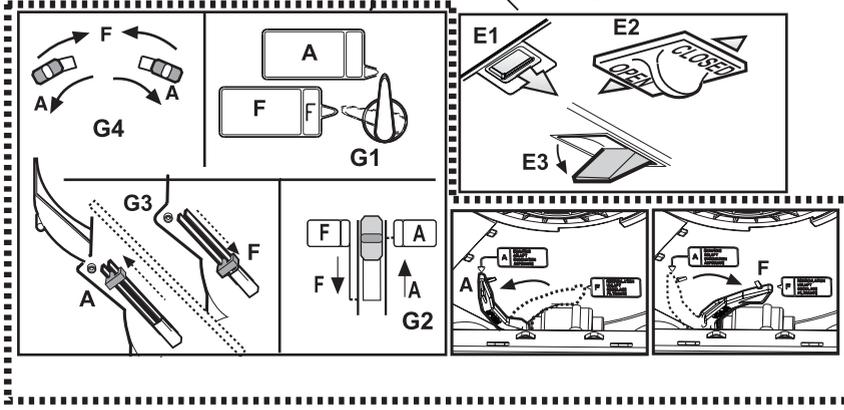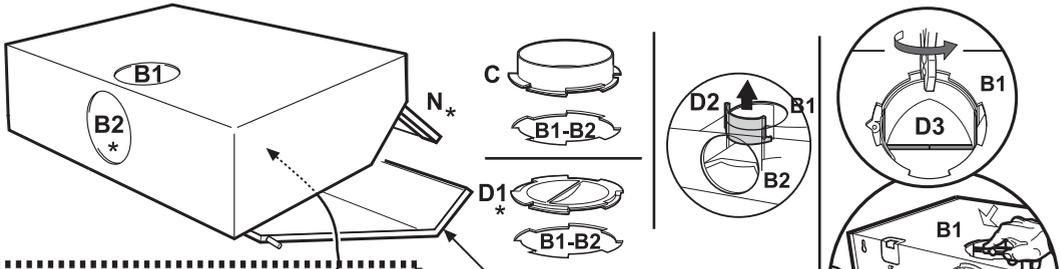




\* only present on some models

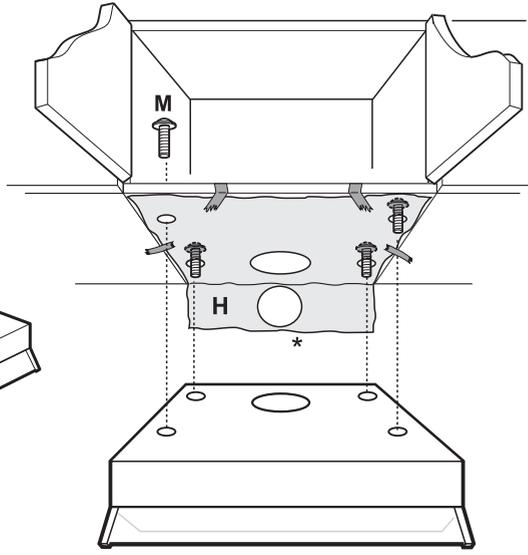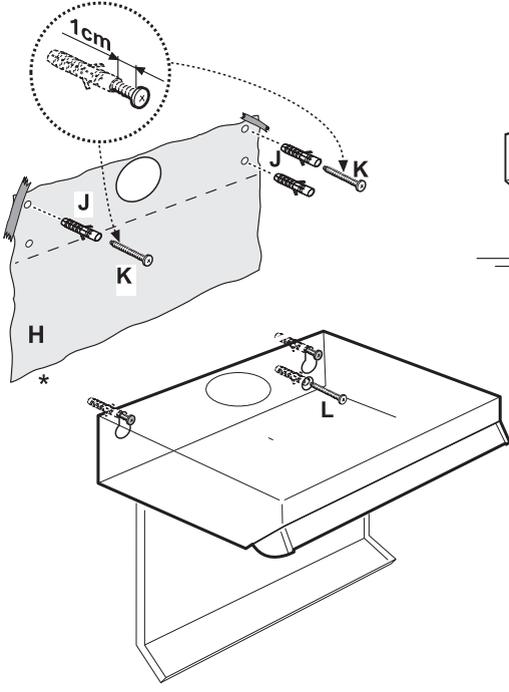

### Grease filter

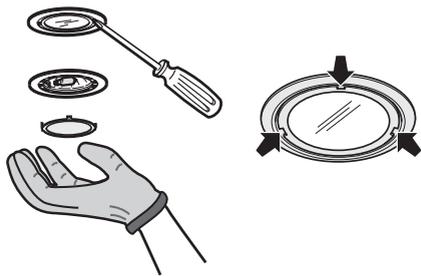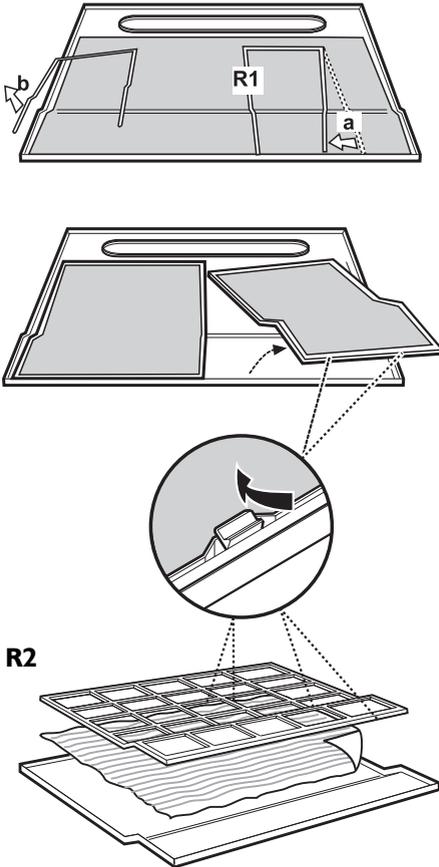

### Carbon filter

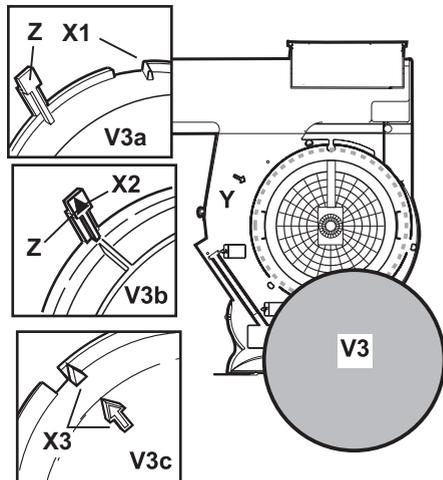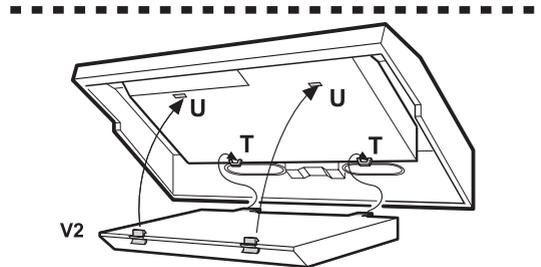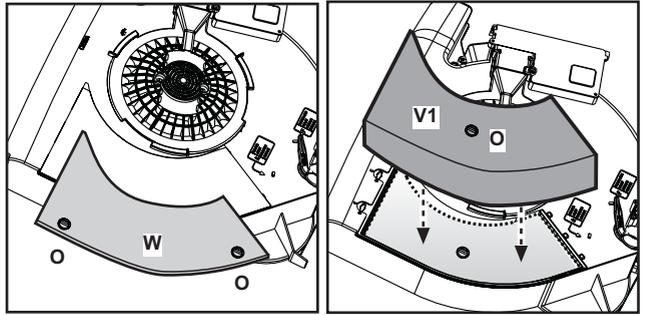

## SAFEGUARDING THE ENVIRONMENT

### 1. Packing

Packing materials are 100% recyclable and are marked with the recycling symbol ♻️. Comply with the local regulations for disposal. The packing materials (plastic bags, polystyrene, etc.) are a potential source of danger and must be kept out of the reach of children.

### 2. Product

This appliance is marked in compliance with European Directive 2002/96/EC, Waste Electrical and Electronic Equipment (WEEE). By ensuring that this appliance is correctly scrapped, the user can help prevent potentially harmful consequences for the environment and the health of people.

The symbol  on the product or the accompanying documentation indicates that this product should not be treated as domestic waste but must be taken to a suitable collection centre for the recycling of electrical and electronic equipment. Disposal must be carried out in compliance with local regulations on waste disposal.

For further information on the treatment, recovery and recycling of this product, contact the competent local office, the household waste collection service or the shop where you purchased the appliance.



## IMPORTANT INSTRUCTIONS FOR SAFETY

**⚠️ WARNING:** To reduce the risk of accidents, electric shock, injury or damage, when using the hood comply with the basic precautions, including the following.

1. Always disconnect the hood from the power supply before carrying out any installation or maintenance operation on the appliance.
2. Installation must be carried out by a specialised technician, in compliance with the manufacturer's instructions and local safety regulations.
3. Earthing of the appliance is compulsory. (Not possible for Class II hoods).
4. Never use multisockets and extension leads.
5. The electrical components must no longer be accessible to the user after installation.
6. Do not touch the hood with wet parts of the body or use it when barefoot.
7. Do not pull the appliance power cable to unplug it.
8. After-sales service – do not repair or replace any part of the hood unless specifically indicated in the manual. All other maintenance services must be carried out by a specialised technician.
9. When drilling the wall, make sure not to damage the electrical connections and/or pipes.
10. The ventilation ducts must always discharge to the outside.
11. The Manufacturer declines any liability for improper use or incorrect setting of the controls.

12. The appliance is not intended for use by children or persons with limited physical, sensory or mental abilities or without experience and knowledge of it, unless they are under the supervision of or instructed in its use by a person responsible for their safety.
13. Keep children away.
14. To reduce the risk of fire, only use a metal inlet duct.
15. Children must be supervised so that they do not play with the appliance.
16. The product must be disposed of in compliance with local regulations on waste disposal.
17. For further information on the treatment, recovery and recycling of this product, contact the competent local office, the household waste collection service or the shop where you purchased the appliance.
18. Regular cleaning and maintenance is essential for correct hood operation and good performance. Frequently clean all encrustations from dirty surfaces to prevent the accumulation of grease. Regularly clean or replace filters.
19. Do not “flambé” food under the hood. Naked flames could cause a fire.
20. The room must have adequate ventilation when the hood is used at the same time as appliances operating on gas or other fuels.
21. The discharge air must not be eliminated in a duct used to remove fumes produced by appliances operating on gas or other fuels, but must have a separate outlet. All the national regulations on air discharge envisaged by art. 7.12.1 of CEI EN 60335-2-31 must be observed.
22. If the hood is used together with other appliances operating on gas or other fuels, the negative pressure in the room must not exceed 4 Pa ( $4 \times 10^{-5}$  bar). Therefore, make sure the room is adequately ventilated.
23. Do not leave pans unattended when frying, since the cooking oil could catch fire.
24. Make sure the lamps are cold before touching them.
25. The hood is not a shelf, therefore do not overload or place objects on it.
26. Do not use or leave the hood without its lamps correctly installed - risk of electric shock.
27. Wear work gloves for all installation and maintenance operations.
28. The product is not suitable for outdoor use.
29. The air sucked by the hood must not be eliminated through the same flue of the heating system or other appliances using gas or other fuels.

## Electrical connection

The mains voltage must match that given on the rating plate located inside the hood. If provided with a plug, connect the hood to a socket complying with the current regulations and located in an accessible area. If it does not have a plug (direct connection to the power supply) or if the plug is not in an accessible place, fit a suitable double-pole switch that ensures complete disconnection from the power supply in category III overvoltage conditions, complying with the installation rules.

**⚠ WARNING:** Power cable replacement must be carried out by an authorised Service Centre or a qualified person.

**⚠ WARNING:** Before reconnecting the hood circuit to the power supply and checking correct operation, always make sure the power cable is correctly fitted and that it was NOT crushed in its housing during installation. Make sure to have this operation carried out by a specialised technician.

## Cleaning the hood

**⚠ WARNING!** Failure to remove oil/grease (at least once a month) could result in fire.

Use a soft cloth with a neutral detergent. Never use abrasive substances or alcohol.

## Before using the hood

Please read these instructions carefully and keep them for future reference, in order to ensure best use of your hood.

The packing materials (plastic bags, polystyrene, etc.) are a potential source of danger and must be kept out of the reach of children.

Make sure the hood has not been damaged during transport.

## Declaration of conformity

This product has been designed, manufactured and put on the market in conformity with:

- safety objectives of the "Low Voltage" Directive 2006/95/EC (which replaces 73/23/EEC as amended)
- protection requirements of "EMC" Directive 89/336/EEC amended by Directive 93/68/EEC.

## Troubleshooting guide

If the hood does not work:

- Is the plug properly inserted in the power socket?
- Is there a power failure?

If the hood is not extracting enough:

- Is the right speed selected?
- Do the filters need cleaning or replacing?
- Are the air outlets blocked?

If the lamp does not work:

- Does the lamp need replacing?
- Is the lamp correctly fitted?

## AFTER-SALES SERVICE

Before calling the After-Sales Service

1. Check to see if you can fix the problem yourself (see "Troubleshooting Guide").
2. Switch the appliance off and then on again to check if the problem has been eliminated.
3. If the problem persists, contact the After-Sales Service.

### Specify:

- the type of fault,
- the product model given on the dataplate inside the hood, visible on removing the grease filters,
- your full address,
- your telephone number and area code,
- the Service code (the number under the word SERVICE on the dataplate inside the hood, behind the grease filter).

If any repairs are necessary, contact an authorised Service Centre (to ensure the use of original spare parts and correct repair).

Failure to comply with these instructions can compromise the safety and quality of the product.

**SERVICE**



0000 000 00000

**Extractor hood installation (A):** fumes are extracted and expelled to the outside through an exhaust duct fixed to the flange **C** (bayonet coupling). Always shut off the unused exhaust outlet with the plug **D1** provided (if provided- bayonet coupling).

**Important!** In some models, in order to use the rear exhaust outlet **B2** the plastic part **D2** or **D3** must be removed first. Use pliers and a cutter to remove it.

**Filter version installation (F):** If it is not possible to duct fumes and steam to the outside, the hood can be used in the **filter version** by fitting a carbon filter/s (not supplied). In this way, fumes and steam are recycled through the front grille section positioned above the control panel.

Check the position of the **extraction/filter selector** (inside the hood) **G**.

**Fixing to the wall** - Place the hood against the wall (or use the template **H**, if provided) and, using a pencil, mark the holes (3 or 4 Ø 8mm holes), drill them, insert the raw/plugs **J** in the holes and 2 screws **K** in the top holes. Remove the grille and hang the hood on the 2 screws. Next, from inside, insert the third (and fourth) screws **L** and screw them all down.

**Fixing to the wall unit** - Position the hood (or use the template **H**, if provided) and, using a pencil, mark the 4 Ø 6 mm holes to be drilled on the bottom of the wall unit.

Fix the hood in place with 4 screws **M** from inside the wall unit.

### Control panel

 Light: move the switch to the right or press the next button to switch on.

 Extraction speed: move the switch to the right or press the next button to increase extraction speed.

**Grease filter** - can be one of the following types:

**Paper filter:** must be replaced once a month or, if the top side is coloured, when the colour shows through the holes in the grille.

**Metal filter:** must be washed once a month by hand or in a dishwasher, using a quick wash cycle with a low temperature.

To access the grease filter **open the grille** using the spring release catches **E1** or **E2** or **E3** and release it from the retainers **R1** or **R2**.

**The self-supporting metallic filter** has no support grille. To remove it, pull the spring release handles **E1** backwards and remove the filter downwards.

**Warning!** Over time, the **metallic filter** may become opaque; this in no way affects its filtering capacity.

**Carbon filter** - can be one of the following types:

**Shaped V1:** Remove the cover **W** by turning the knobs **O** through 90°.

Insert the carbon filter inside the special housing and secure it in place by turning the knob **O** through 90°, then close the cover.

**Replace every 4 months.**

**Rectangular V2:** insert the rear edge first **T** and then the front (**U**) - **replace every 6 months.**

**Circular V3: Bayonet coupling.** Position the filter in the centre so that it covers the motor-protection grille, make sure that the reference mark **X1** or **X2** or **X3** on the carbon filter is aligned with the the reference mark **Y** on the fan shroud, then turn clockwise; to remove, turn anti-clockwise, if provided with a tab **Z** remember to lift it up slightly first. **Replace every 4 months.**

### Replacing the bulb/s

Disconnect the hood from the mains power supply.

 **WARNING:** Wear gloves.

Remove the filters then remove the burnt-out bulb (E14 incandescent bulb, 40 W max). Refit the filters.

**G4 halogen bulb, 20 W max:** use a small screwdriver or similar suitable tool to press off.

Replace the bulb cover so that it clicks into position.

### Cleaning the hood

**Warning!** Failure to remove oil and grease at least once a month could lead to fire.

Use a soft cloth dampened in a neutral detergent. Never use abrasives or alcohol.

### Before using the hood

Please read these instructions carefully in order to get the best out of your new hood.

Packaging materials can be dangerous for children. Keep packaging materials (plastic bags, polystyrene, etc.) well out of their reach.

Make sure the hood has not been damaged during transport. Installation, electrical connections and replacement of the mains lead with a plug or new flexible cable must be carried out by a qualified technician in compliance with local safety regulations.