


Read the Instructions for Use carefully before using the appliance.

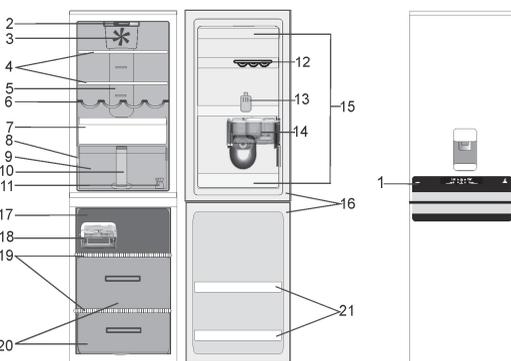

1. Control panel
- Refrigerator Compartment**
2. Refrigerator compartment light (LED system)
3. Fan
4. Shelves / Shelf area
5. Multi-flow cold air system
6. Bottle rack*
7. Cooler compartment (best for meat and fish) *
8. Rating plate with commercial name
9. Fruits and vegetables crisper
10. Crisper divider*
11. Doors reversibility kit
12. Egg tray
13. Bottle holder
14. Water tank
15. Door trays
16. Door seals
- Freezer Compartment**
16. Door seals
17. Upper zone with flap (freezing zone or storing frozen food)
18. Twist Ice Maker
19. Shelves
20. Storage baskets for frozen food items
21. Freezer door trays for frozen products with a short storage time (*** storage compartment)

Anti-bacterial protection:

- Antibacterial filter* in the fan (3)
- Antibacterial additives* in the material of Crisper (9)
- Door seals are made of material able to inhibit bacterial growth (15)

* Available on selected models

HOW TO CHANGE DOOR SWING
- see enclosed instructions (Model Version_1)

Specifications, technical data and images may vary from model



SMART DISPLAY

This optional function can be used to save energy. To activate the Smart Display, press Fridge °C and Freezer °C buttons at the same time for 3 seconds until an audible signal sounds. To deactivate this function repeat the same procedure. Remember that this function does not disconnect the appliance from the power supply, but only reduce the power consumed by external display (see the Instructions for Use).

ON/STAND-BY

To put the product in Stand-by, press and hold for 3 seconds. All the icons turn off except On/Standby indicator . Press again to reactivate the appliance. (see the Instructions for Use)

6th SENSE FRESH CONTROL

This function automatically works to ensure the optimal conditions to preserve the stored food. To activate the 6th SENSE FRESH CONTROL, press Eco Night and Freezer °C buttons at the same time for 3 seconds until an audible signal sounds. To deactivate this function repeat the same procedure.
Note: Remember that deactivation function “6th Sense Fresh Control” switch off the FAN.

FAN


The Fan improves temperature distribution inside the refrigerator compartment, allowing better preservation of stored food. By default, the fan is switched on. The fan automatically stops working when the fridge door is open (see the Instructions for Use).
To switch off the FAN press and hold the Eco Night and Freezer °C buttons for 3 sec.: you will hear an acoustical signal and “6th Sense Fresh Control” icon will switch off again as confirmation that the fan has been switched off.
To switched on the FAN repeat the same procedure.

ECO NIGHT FUNCTION (NIGHT TIME RATE)

Press to activate/deactivate the Eco Night function. The Eco Night function enables appliance energy consumption to be concentrated in the reduced rate hours, generally at night (see the Instructions for Use)

FRIDGE TEMPERATURE LEDs

To adjust the Fridge Temperature, press the Fridge °C button. The Fridge Temperature can be adjusted between +2°C and + 8°C, as shown by the Fridge Temperature LEDs.

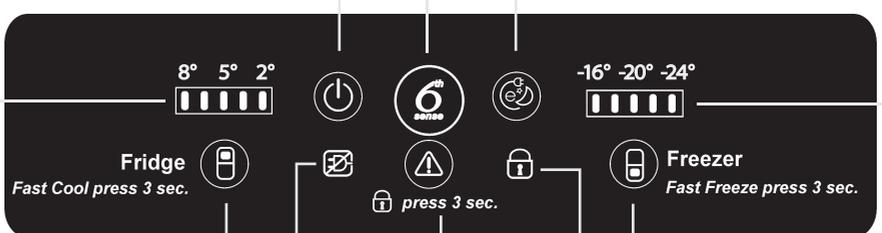


FREEZER TEMPERATURE LEDs

To adjust the Freezer Temperature, press the Freezer °C button. The Freezer Temperature can be adjusted between -16°C and -24°C, as shown by the Freezer Temperature LEDs.

FRIDGE TEMPERATURE / FAST COOL button

Using Fast Cool function it is possible to increase the cooling in the refrigerator compartment. The use of this function is recommended when placing a very high quantity of food in the refrigerator compartment. Press & hold for 3 sec. the Fridge °C button to activate Fast Cool function. When activated, the Fast Cool indication will be displayed by the Fridge Temperature LEDs as shown in the beside sequence. The function is automatically disabled after 6 hours, or can be manually disabled by pressing Fridge °C button.

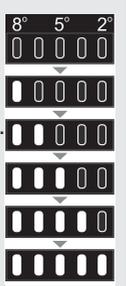

BLACK OUT ALARM

Long Black-out Alarm indicator. (see the Instructions for Use)

KEY LOCK indicator

(see the Instructions for Use)

STOP button / ALARM icon

Press in case of alarm (see the below Alarms Table). To lock/unlock the keys of the Control Panel, press the Stop Alarm button for 3 seconds: the Key Lock Indicator will be displayed for a short time and an acoustical signal will be played.

FREEZER TEMPERATURE / FAST FREEZE button

The use of this function is recommended when placing a very high quantity of food to be frozen in the freezer compartment. 24 hours before freezing fresh food, press & hold for 3 sec. the Freezer button to activate the Fast Freeze function. When activated, the Fast Freeze indication will be displayed by the Freezer Temperature LEDs as shown in beside sequence. After 24 hours place the food to be frozen in the upper basket of freezer compartment. The function is automatically disabled after 48 hours, or can be manually disabled by pressing Freezer °C button.



HOW TO START THE APPLIANCE

After plugging the appliance to the mains, it starts the operation automatically. After starting the appliance, wait at least 4-6 hours before placing food into the appliance. When the appliance is connected to the power supply, the display lights up and all the icons appear on the display for approximately 1 second. The default (factory) values of the freezer and refrigerator compartments settings light-up.

ALARMS TABLE	Signal	Cause	Cure
Door open alarm	The acoustical alarm is activated and the alarm icon blinks	The door has remained open for more than 2 minutes	Close the door
Temperature alarm	The acoustical alarm is activated, 5 Freezer Temperature LEDs blinks and the red light remains on	The inside temperature is not adequate	Press the button ; the acoustical alarm stops, 5 Freezer Temperature LEDs blinks and the red light remains on until a temperature < -10°C is reached.
Long black-out alarm	The acoustical alarm is activated, the light remains on and the light blinks.	Prolonged power failure, able to cause the inside temperature to increase to 0°C	Press the button ; the acoustical alarm stops.
Malfunction	3 central LEDs in the Fridge Temperature LEDs blinks on the display	Product malfunction	Contact the After-sales Service