

Before using the dishwasher, read the user instructions!

ADG 7952

## Quick Reference Guide

GB



On On button

Off Off button

Programme selection button

Start Start button  
Switches "on" when the dishwasher is operating. Flashes when a fault occurs.  
Switches off at the end of the programme.

### Options



**Time and failure display <sup>3)</sup>**  
Indicates in hours the time remaining until the start of the wash cycle. Switches off when the programme has started. Toward the end of the programme, during the drying cycle, the display will indicate the time remaining in minutes.  
**"F..." Identification of faults for service technician**

**"Delayed start" buttons**  
The wash cycle can be programmed to start after 1 - 24 hours. With each successive touch of the button, the delayed start indicator increases by 1 hour, and after 24 returns to 00. Then press the Start button. The dishwasher will start at the set time.

### Indicators



Add rinse aid



Add regeneration salt  
Only add regeneration salt immediately before starting a wash programme.

Programme chart			Detergent <sup>2)</sup>		Consumption <sup>3)</sup>		
Programmes	Loading instructions		A	B	Litres	kWh	Minutes
Sensor Normal	40-55°C	Automatic programme recommended for routine washes, with no dried-on or burnt food (not for EN 50242).	X	X	13.0-16.0	0.80-1.05	50-110
Sensor Intensive	60-70°C	Automatic programme recommended for heavily soiled crockery with dried-on or burnt food, for example pans and saucepans.	X	X	16.0-23.0	1.10-2.00	90-140
Pre-Rinse	cold	Crockery to be washed later.	-	-	5.0	0.02	10
Glass	40°C	Light soiling, for example glasses and cups.	X	-	13.0	0.90	55
Quickwash	40°C	Lightly soiled crockery, with no dried-on food.	X	-	13.0	0.70	30
Eco-Normal <sup>1)</sup>	50°C	Normally soiled crockery.	X	X	16.0	1.24	133

1) Reference programme for energy label in compliance with EN 50242 regulations;

2) Refer to "User instructions";

3) Program data obtained in conformity with European standard EN 50242. Values may vary in relation to usage, e.g.: different loads, water temperatures - above or below 15°C - as well as water hardness and power supply voltage, etc.

Important information for Test Laboratories:

For detailed information on the EN/Standard loading comparison test, contact the following address:  
"nk\_customer@email.whirlpool.com".

Whirlpool is a registered trademark of Whirlpool USA

5019 396 91257

(We reserve the right to make technical modifications)

## How to use the appliance

Further indications are given in the single chapters and in the user instructions.

Open the door,  
switch on the appliance

Press the **ON** button.


How to fill the  
detergent dispenser

Large compartment **A**:

With each wash cycle.

Small compartment **B**:

For programmes with pre-wash only.

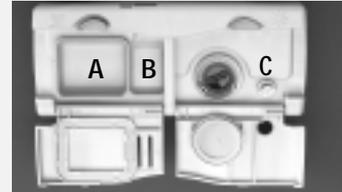

Check the rinse aid level

Mechanical indicator lamp **C**.

Electric indicator on control panel (if provided).

Check the regeneration  
salt level

**On models with water softener system only.**

Mechanical indicator lamp **D**. Electric indicator on control panel (if provided).



Load the racks

Refer to the dishwasher loading instructions.

Select a programme

The last programme selected will light up.

Press the button until the desired programme lights up.

Select options

If necessary (and if provided) the corresponding indicator lamp lights up.

Press the Start button

The selected programme is then memorised (even in the event of power failure).

### "Change programme"

- Press the **START** button for 2 sec. until the Start indicator lamp switches off;
- Select another programme and press the **START** button again.

Turn on the water tap  
close the dishwasher door

Wash cycle

- Only open the dishwasher if necessary (Warning: beware of hot steam).
- If the appliance is switched off during a wash cycle, when switched on again it will resume the cycle from where it was interrupted.

Switch off the appliance

At the end of the programme an acoustic signal will sound.

Only after the **START** button has switched off: **press the OFF button.**

All the indicator lamps switch off.

Turn off the water tap,  
unload the racks

**Warning: when the door is opened steam comes out!**

Unload the appliance, starting from the lower rack.

## Dishwasher loading instructions and racks provided

### Upper rack:

depending on the model

#### Multi-purpose support (A): <sup>1)</sup>

Depending on the position, for long-handles utensils, cups and glasses. May be used in three different positions.

#### Crockery holders (B):

Depending on the position, for example plates, cups and long-stemmed glasses.

#### Revolving glass support (C): <sup>2)</sup>


Depending on the position, for example small or long-stemmed glasses.



### Half Load:

Load the upper rack **only**.


Place the cutlery basket (D) in the upper rack.

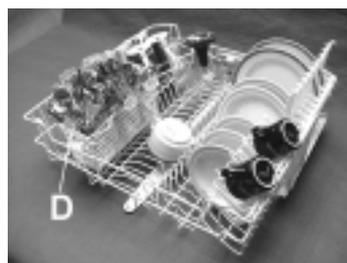

### Rack height adjustment (also when loaded):

- **Lower adjustment:** pull out the two rack handles outwards (E) and lower the rack.
- **Upper adjustment:** pull the two handles (E) upwards until the rack clicks into place (Factory setting).

The rack must be level on both sides.

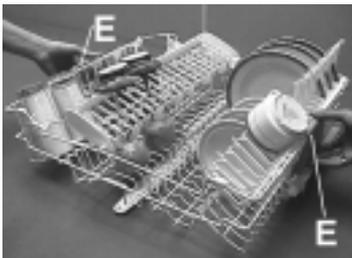


### Lower rack:

Depending on the model with fixed or tilting plate holders (F).

### Half Load:

Load the lower rack **only**.

Greater washing power, particularly for plates and saucepans.

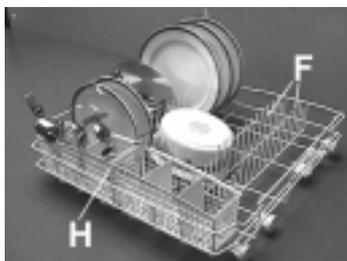




### Cutlery basket (G) or (H):

Some models are provided with a grid (I) that can be fitted onto the cutlery basket to keep items separated. Cutlery basket (D) for appliances with half load only. Sharp knives and forks that might cause injury must be placed in the cutlery basket with the handles positioned upwards.

**Only use dishwasher-proof crockery and dishes. Do not use the appliance for items not suitable for washing in a dishwasher, for example wooden items, aluminium, plastic utensils, tin, hand-decorated crockery (unglazed), silver cutlery.**

Spare parts which are sold separately:

- 1) Multi-purpose support (A) - N. AMH 369 series.
- 2) Revolving glass support (C) - N. WGH 1000 series.

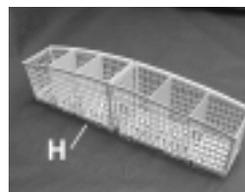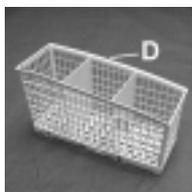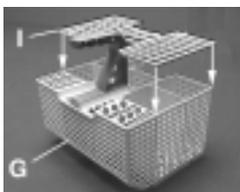

## What to do if...

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem (\* see also the corresponding chapter in the user instructions).

Problem	Cause	Remedy	
<b>The appliance is not working</b>	<ul style="list-style-type: none"> <li>• No water supply.</li> <li>• The appliance does not load sufficient water.</li> <li>• There is a power failure.</li> <li>• Starting the selected programme.</li> </ul>	<ul style="list-style-type: none"> <li>• Open the tap.</li> <li>• Clean the water supply tap filter.</li> <li>• Ensure there are no kinks in the water hose.</li> <li>• Insert the plug into the mains socket.</li> <li>• Press the Start button.</li> <li>• Close the door.</li> <li>• Check the domestic circuit fuse.</li> <li>• The programme can be set to "0" to start.</li> </ul>	
<b>If crockery is not perfectly dry</b>	<ul style="list-style-type: none"> <li>• Insufficient rinse aid.</li> <li>• Residual water in cavities.</li> </ul>	<ul style="list-style-type: none"> <li>• Increase dosage *.</li> <li>• Load crockery at an angle.</li> </ul>	
<b>If crockery is not perfectly clean</b>	<ul style="list-style-type: none"> <li>• The water jet does not reach the crockery.</li> <li>• Insufficient detergent.</li> <li>• Unsuitable programme.</li> <li>• Spray arms blocked.</li> <li>• Spray arm nozzles clogged.</li> <li>• Incorrect detergent/detergent too old.</li> </ul>	<ul style="list-style-type: none"> <li>• Arrange crockery so that items do not touch each other. Load crockery upside down.</li> <li>• Follow recommended detergent dosage.</li> <li>• Select a more intense wash cycle.</li> <li>• The spray arms must be able to turn freely.</li> <li>• Remove any impurities obstructing the water flow *.</li> <li>• Use a good quality detergent.</li> </ul>	
<b>Sandy or grainy residues</b>	<ul style="list-style-type: none"> <li>• Clogged filters.</li> <li>• Filters incorrectly assembled.</li> </ul>	<ul style="list-style-type: none"> <li>• Check filters regularly/if necessary clean *.</li> <li>• Insert the filter correctly *.</li> </ul>	
<b>Colour of plastic parts faded</b>	<ul style="list-style-type: none"> <li>• Tomato/carrot juice,...</li> </ul>	<ul style="list-style-type: none"> <li>• Depending on the material, if necessary use a detergent with a greater whitening power.</li> </ul>	
<b>Deposits on crockery</b>	<ul style="list-style-type: none"> <li>• removable</li> <li>• not removable</li> </ul>	<ul style="list-style-type: none"> <li>• Streaks on the crockery/glasses.</li> <li>• Streaks on glasses.</li> <li>• Layer of salt on crockery/glasses.</li> <li>• Insufficient water softening, calcium deposits.</li> </ul>	<ul style="list-style-type: none"> <li>• Increase the rinse aid dosage *.</li> <li>• Reduce the rinse aid dosage *.</li> <li>• Close the salt container lid properly *.</li> <li>• Change water hardness setting, if necessary add salt *.</li> </ul>
<b>Opaque glasses/ glasses not sparkling</b>	<ul style="list-style-type: none"> <li>• Cannot be washed in the dishwasher.</li> </ul>	<ul style="list-style-type: none"> <li>• Use suitable glasses.</li> </ul>	
<b>Rust on cutlery</b>	<ul style="list-style-type: none"> <li>• Not made of stainless steel.</li> </ul>	<ul style="list-style-type: none"> <li>• Use suitable cutlery.</li> </ul>	
<b>Identifying appliance faults</b>	<ul style="list-style-type: none"> <li>• The START indicator lamp flashes.</li> <li>• Indicator F... (if provided).</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure that the filter assembly is not clogged and if necessary clean it *. Start the programme again. Press the Start button for 2 seconds, until the Start indicator lamp switches off. Select a new programme and press the Start button again.</li> <li>• Call the After-Sales Service.</li> </ul>	

If after carrying out the above checks the malfunction persists or appears again, turn the appliance off and turn off the water supply tap, then call our After-Sales Service (see guarantee).

Before contacting our After-Sales Service, take note of the following:

- The nature of the fault.
- The appliance type and model.
- The service code (the number indicated on the adhesive rating plate) inside the door on the right-hand side.

