

## A. Refrigerator Compartment

1. Crisper drawer
2. Shelves / Shelf area
3. LED indicators (depending on the model)
4. Upper door tray
5. Door trays
6. Bottle rack
7. Bottle restrainer (if present)
8. Rating plate (at the side of crisper drawer)
9. Electronic control unit.
10. Fan with filter (if present), see specific instructions for filter.

## B. Freezer compartment (if present)


1. Ice cube tray (inside the compartment)
2. Freezer compartment inner door
3. Grille (inside compartment)

**Note:** The number of shelves and type of accessories may vary, depending on the model. All shelves, door trays and racks are removable.

**Important:** Refrigerator accessories must not be washed in a dishwasher.

---

# CONTROL PANEL DESCRIPTION

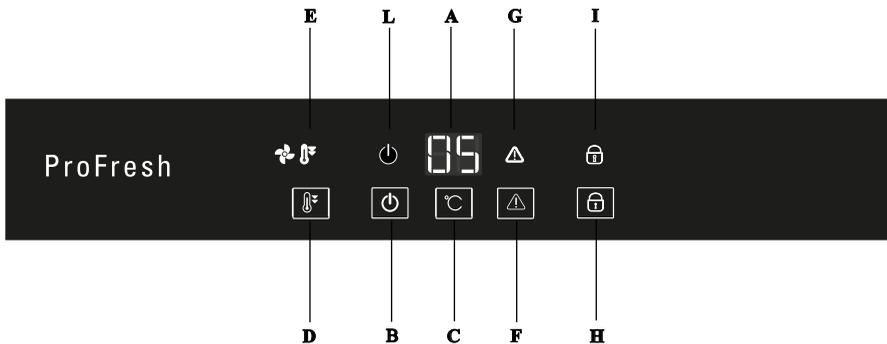

- A.** Display indicating the set temperature. If the letter "F" flashes on the display, contact the After-sales Service.
- B.** Stand-by "ON" button.
- C.** Temperature Selection Button (+3, +4, +5, +6, +7 °C)
- D.** Fast Freeze button, for appliances with a Freezer compartment  (the Fast Freeze function should be activated at least 3 hours before freezing fresh food. It deactivates automatically after 26 hours)
- D.** Fast Cool button, for appliances without a Freezer compartment (the function deactivates automatically after approx. 6 hours).
- E.** The LED stays on while the Fast Freeze function (or Fast Cool) is active.
- F.** Button for muting the acoustic alarm (the alarm sounds if the door is left open for more than two minutes)
- G.** The red LED flashes when the door open alarm is activated
- H.** "Child Lock": to activate the function press button for 3 seconds and the led "I" confirm the activation for few seconds. This prevents other people (e.g. children) from changing the temperature or selected functions. To deactivate the "Child Lock" function repeat the same procedure.
- L.** Stand by "OFF" led

## Pro Fresh

Enables the appliance to rapidly reach optimal storage conditions in terms of internal temperature. In order to function correctly, the fan must also be turned on.

## FAN (if present)

The fan is pre-set to ON.

You can turn the fan on/off by pressing the buttons "C" and "H" at the same time for 3 seconds.

"E" fan symbol indicates that the function is on.

If the ambient temperature exceeds 27°C, or if drops of water are present on the glass shelves, it is essential that the fan is on to ensure the proper preservation of the food.

Deactivation of the fan allows energy consumption to be optimised.

**Note:** the fan restarts automatically after a power cut or after turning off the appliance.

Do not place food in front of the air inlets.

---

# REFRIGERATOR COMPARTMENT TEMPERATURE ADJUSTMENT

The appliance is normally factory set for operation at the recommended temperature of +5°C.

To adjust the internal temperature between +3°C and +7°C, proceed as follows:

- Press button **C** once to adjust the internal temperature: the digital display will show the set temperature.

- Each time the button is pressed, the temperature setting is changed by 1°C: the value (between +3°C and +7°C) flashes in sequence on the display.
- The temperature of the freezer compartment **\* \*\* \*** (approx. -18/-24 °C) cannot be selected but is automatically set by the electronic controller.

**N.B.:** In the event of a power failure, selected functions remain stored in the memory.