


GB WAB 1210, WAB 1210SW

PROGRAMME CHART

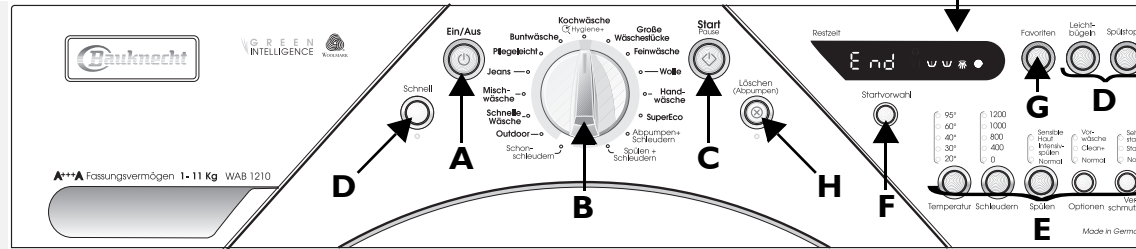

- A. "On/Off" button
- B. Programme selector
- C. "Start (Pause)" button
- D. Option buttons
- E. Modifiers
- F. "Start delay" button
- G. "Favourites" button
- H. "Reset (Drain)" button



I. Programme sequence indicator



J. Detergent overdosage indication

Selecting any option the indication lights up. When the combination of programme, additional options/modifiers and temperature is not possible, the indication lights switch off automatically and a signal sounds.
 ✱ : optional / Yes: dosing required.

Programme	Care labels ²⁾	Type of wash/Notes <i>- Respect the manufacturer's recommendations on the care label.</i>	Max. Load kg	Detergent and additives			Special Options and Modifiers							Start delay	Max. Spin Speed rpm	Temperature °C	
				Pre-wash	Main wash	Softener	Rapid	Easy ironing	Rinse hold	Rinse sensitive skin	Intensive rinse	Pre-wash	Clean +				Soiled Heavy soil
Cotton / (Antibacterial)		Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. At a temperature of 95°C, this programme eliminates bacteria, ensuring sanitization of your laundry.	11.0	*	Yes	*	*	*	*	*	*	*	*	*	*	1200	20 to 95
Coloured		Lightly to normally soiled bed linen, table linen, shirts, trousers etc. made of cotton and linen.	10.0	*	Yes	*	*	*	*	*	*	*	*	*	*	1200	20 to 40
Synthetics		Lightly to normally soiled blouses, shirts etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	5.5	*	Yes	*	*	*	*	*	*	*	*	*	*	1000 ¹⁾	20 to 60
Jeans		Normally soiled cotton jeanswear and garments made of robust jeanslike material such as trousers and jackets.	11.0	*	Yes	*	—	—	*	*	*	*	*	*	*	1200	20 to 60
Daily		Programme for lightly to normally soiled fabrics made of cotton and/or synthetic fibres.	6.0	—	Yes	*	—	*	*	*	*	—	*	—	*	1200	20 to 60
Quick wash		Lightly soiled overalls and sports wear made of cotton, polyester, polyamide and blends with cotton.	6.0	—	Yes	*	—	—	—	*	*	—	*	—	*	1200	20 to 30
Outdoor		Normally soiled and sweaty sportswear made of cotton jersey or microfibres. Use a special detergent for garments made of microfibres. Do not add any softener.	5.5	*	Yes	—	—	—	*	*	*	*	—	—	*	1000 ¹⁾	20 to 60
Big items		Blankets made of synthetic fibres, bedcovers filled with polyester or other artificial fibres, sleeping bags, bathmats and similar items.	4.0	*	Yes	*	—	—	*	*	*	*	—	*	*	1000 ¹⁾	20 to 95
Delicates		Curtains and delicate dresses, skirts, shirts and blouses.	4.0	*	Yes	*	—	*	*	*	*	*	*	—	*	1000 ¹⁾	20 to 40
Wool		Only woollens, labelled with the Woolmark and identified as machine washable. This programme (40°C) is tested and approved by The Woolmark Company for machine washable wool.	3.0	—	Yes	*	—	—	*	*	*	—	—	—	*	1000 ¹⁾	20 to 40
Handwash		Textiles made of silk, linen, wool and viscose marked as "handwashable". A very gentle spin is used in this programme.	3.0	—	Yes	*	—	—	*	*	*	—	—	—	*	800 ¹⁾	20 to 30
SuperEco		Heavily soiled and robust bed linen, table linen and underwear, towels, shirts etc. made of cotton and/or linen. Economical energy consumption by prolonged wash duration. Ideal to be run overnight to additionally profit from the more favourable energy rates. To avoid noise of spinning at night, select "Rinse hold" option and start spinning in the morning, or define programme start with "Start delay" accordingly.	11.0	—	Yes	*	—	—	*	*	*	—	—	*	1200	20 to 60	
Gentle Spin	—	In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.	3.0	—	—	—	—	—	—	—	—	—	—	*	1000 ¹⁾	—	
Rinse & Spin	—	Same as the last rinse and the final spin in the "Coloured" programme.	11.0	—	—	*	—	—	—	*	*	—	—	*	1200	—	
Drain & Spin	—	Use this programme to drain your washer or to drain and spin your wash load. Delicate fabrics, handwashables and woollens should be drained with no spin or low spin speed to avoid fabric stress.	11.0	—	—	—	—	—	—	—	—	—	—	*	1200	—	

¹⁾ For improved garment care, spin speed is restricted in these programmes.
²⁾ In this column are indicated the most appropriate care labels, but not all which are possible to be treated with the programme.

The wool cycle of this machine has been tested and approved by The Woolmark Company for the washing of Woolmark garments labelled as "machine wash" provided that the garments are washed according to the instructions on the garment label and those issued in this programme chart. M0805

For any failures or irregularities, consult the “Troubleshooting Guide” in your Instructions for Use.

CONSUMPTION DATA							
Programme	Temperature (°C)	Load (kg)	Water (l)	Energy cold water supply (kWh)	Energy hot water supply (kWh)	Approximate programme duration (hours : minutes)	
						without “Rapid”	with “Rapid”
Cotton*	60	11.0	82	1.38	0.99	4:00	2:15
Cotton*	60	5.5	54	1.15	0.67	3:45	**
Cotton*	40	5.5	54	0.81	0.43	3:40	**
Coloured	40	11.0	96	1.03	0.35	2:30	2:05
Coloured	40	5.5	61	0.80	0.33	1:40	**
Coloured	40	1.0	30	0.41	0.25	1:05	**
Synthetics	40	5.5	65	0.75	0.34	2:00	1:45
Synthetics	40	3.0	58	0.70	0.28	1:50	**
Jeans	40	11.0	125	1.08	0.56	2:15	—
Daily	40	6.0	55	0.75	0.50	1:00	—
Quick wash	30	6.0	45	0.33	0.15	0:30	—
Outdoor	30	5.5	60	0.50	0.40	1:30	—
Big items	40	4.0	86	0.95	0.42	1:20	—
Delicates	30	4.0	80	0.50	0.50	0:55	—
Wool	40	3.0	69	0.78	0.78	0:45	—
Handwash	30	3.0	97	0.49	0.49	0:40	—
SuperEco	60	11.0	94	1.51	0.81	5:10	—

Consumption values were measured in normalized conditions in compliance with Standard EN 60 456. They are based on an inlet water temperature of approximately 15° C through both the cold and the hot fill valve; the energy consumption values “with hot water” are based on an inlet water temperature of approximately 60° C through the hot fill valve. In the home the consumption data may vary as they depend on the individual water supply temperature and pressure, the load and the type of wash. - Water and energy consumption refer to the default setting of the programmes, with the temperatures indicated in the table; changing the options or modifiers setting will also change the consumption data.

The programme duration can deviate from the values in the table, because it takes into account the individual operation conditions (see also “Troubleshooting Guide” in your Instructions for Use).

* Reference programmes for Energy Label.

Automatic adaptation of programme duration after detection of wash load.

Recommended programmes for comparative tests at test institutes

ADD DETERGENT, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add the detergent as described in the programme table or in the chapter “Detergent and Additives” in your Instructions for Use.

- Press “On/Off” to switch on the washer. The light of the selected programme is on, and the “Start (Pause)” button blinks.
- Turn the programme selector to the desired programme - it is marked by a light.
- The predefined temperature and spin speed can be altered by pressing the “Temperature” and the “Spin speed” modifier.

SELECT ANY DESIRED OPTION OR MODIFIER

Selecting any option or modifier, the indication lights up. If the combination of programme, options or modifiers is not possible, the indication lights switch off automatically and a signal sounds.

“Rapid” button

- Enables quicker washing by shortening the programme duration.
- Recommendable for lightly to normally soiled laundry.

“Easy ironing” button

- Reduces creasing by increased water quantity and a very gentle spin.

“Rinse hold” button

- The laundry remains in the last rinse water without being spun: this prevents creasing and colours from changing.
- Particularly useful if you want to postpone spinning to a later time, or if you want to drain only.
- Do not leave the laundry to soak in the rinse hold for too long.

Note: The programme starts to “Rinse hold” when the “Rinse hold” button light blinks; the “Start (Pause)” button light also blinks.

Terminate the “Rinse hold” option:

- Press the “Rinse hold” or the “Start (Pause)” button ; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, press and hold the “Reset (Drain)” button for a few seconds. The water is drained out then, before the door can be opened.

“Spin speed” modifier

- Every programme has an automatic predefined spin speed.
- Press the button to set another spin speed.
- Spin speed “0” is only selectable for programme “Drain & Spin”; the final spinning is cancelled in this case - the water is drained out only at the end of the programme.

“Rinse” modifier

- “Sensitive skin”: maximum amount of rinse water is added, and rinse cycle is prolonged.
- “Intensive rinse”: more rinse water is added, and rinse cycle is prolonged.
- Particularly suitable for areas with very soft water, for baby clothes or to help people with skin allergies.

“Options” modifier

➔ Prewash:

- Adds a prewash cycle to the programme selected.
- Use only for heavily soiled loads (e.g. sand, granular dirt).
- Increases the cycle time by approx. 15 minutes.
- Do not use liquid detergent for the main wash when activating “Prewash”.

➔ Clean +

- Choose this option if you use an in-wash additive for stain removal (powder, for example “Vanish”) - it will optimize the additive’s efficiency to get better wash performance and stain removal.
- Use with maximum load.
- Add an appropriate amount of in-wash additive for stain removal (powder) to the main wash chamber, together with your detergent (only use powder detergent with this option). Respect the manufacturer’s dosing instructions.
- May prolong the programme by up to 15 minutes.
- Appropriate for use of stain removers and bleaches on oxygen basis. **Chlorine or perborate bleaches must not be used!**

➔ Normal

“Soil level” modifier

- Adapts the programme duration to the soil level of your laundry. Normal / Soiled / Heavy soil

SAVE YOUR FAVOURITE PROGRAMMES

If there is a programme setting which you use frequently, the washing machine offers the possibility to save one setting for each programme so that it can be used again by just pushing one button.

- Select the desired programme, temperature, spin speed and options/modifiers.

Press and hold the “Favourites” button for some seconds; the light goes on and a signal sounds when the programme setting is saved. Next time you want to use your individual programme setting, turn the programme selector to the desired programme, briefly push the “Favourites” button and start by pressing “Start (Pause)” .

If you want to replace the saved setting by another one:

- Select the programme desired and the new temperature, spin, options/modifier setting.
- Press and hold the “Favourites” button some seconds; the previously saved setting is replaced by the new one.

START DELAY

The “Start delay” allows to run the machine at the consumer’s convenience, for example at night when electricity is cheaper.

- Select programme, temperature and options/modifiers as desired.
- Press the “Start delay” button to select a delay time up to 24 hours.
- Press and hold the “Start (Pause)” button ; the countdown of the delay time begins. The light of the “Start delay” button will keep blinking until the programme starts.
- The time delay indication disappears when the programme starts and it is replaced by the remaining programme duration.

To cancel the “Start delay”:

- Press “Start (Pause)” , or press and hold “Reset (Drain)” - the delay time will disappear from the display.

PROGRAMME START

Turn on the tap and press and hold the “Start (Pause)” button - the blinking “Start (Pause)” button light becomes constant; it will take some time until water enters into the washing machine.

The programme sequence indicator on the display shows the sequence reached in the programme. After starting the programme, the indication runs from left to right through prewash,

wash, rinse, spin. When a programme sequence is finished, the corresponding symbol goes off.

The display shows the remaining programme time. Due to variations in load and temperature of inlet water, the remaining time is newly calculated in certain programme phases. If this is the case, an animation appears on the display and the “6th Sense” symbol lights up.

ADD WASHING/DOOR LOCK

As soon as a programme starts, the “Door locked” symbol lights up on the display.

You can interrupt the programme by pressing “Start (Pause)” - the light blinks. The “Door locked” symbol on the display goes off and you can open the door. In certain programme phases, the “Door locked” symbol remains lit to show that the door cannot be opened in the present programme phase, e.g. when the water level is too high.

To continue the programme, just close the door and press “Start (Pause)” again.

PROGRAMME END

“End” appears on the display, and a signal sounds.

- Switch the machine off by pressing “On/Off” (if you do not, the machine will switch off automatically about 5 minutes after programme end).
- Turn off the tap and open the door to unload your washing. Leave the door open for some time so that the washer’s inside can dry.

DETERGENT OVERDOSAGE INDICATION

The symbol will light up if you used too much detergent. Use less detergent next time. If the symbol lights up and the display shows “Fod”, too much foam interrupted the wash process; refer to the “Troubleshooting Guide” in your Instructions for Use.

CHANGE THE PROGRAMME, TEMPERATURE, OPTIONS AFTER PROGRAMME START

- Press the “Start (Pause)” button to interrupt the programme. The light blinks.
- Select the new programme, temperature and options/modifiers as desired.
- Press and hold the “Start (Pause)” button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

RESET A RUNNING PROGRAMME BEFORE THE END

Press and hold the “Reset (Drain)” button for a few seconds; the light blinks. It will take some time until the water is drained out and the door can be opened (up to 10 minutes). Caution, the washing might still be hot!

HOW TO CONNECT YOUR HOT FILL WASHING MACHINE TO THE WATER SUPPLY

Both inlet valves of the washing machine have to be connected to the water supply. There are two alternative ways of doing this:

Connect hot and cold water supply (Fig. 1):

1. Fix one water inlet hose to the cold water valve ("C") on the washing machine's back, and to the cold water tap.
2. Fix the other inlet hose to the hot water valve ("H") on the washing machine's back, and to the hot water tap.

To get the optimum performance you should use both the hot and cold water supplies.

Make sure:

- the connections are tight (but do not overtighten by using a tool).
- you did not invert their position (for example: cold fill into inlet valve "H" and viceversa).
- you observed the instructions in paragraph "Connect the water supply hose" in your Instructions for Use.

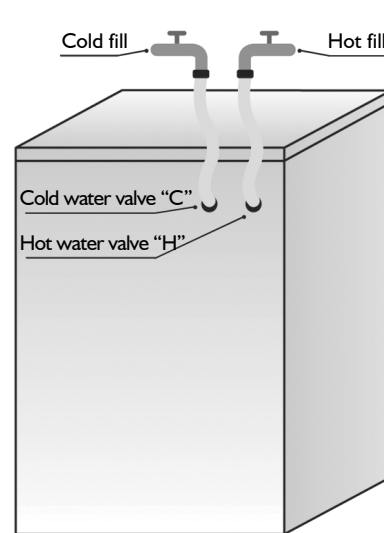


Fig. 1

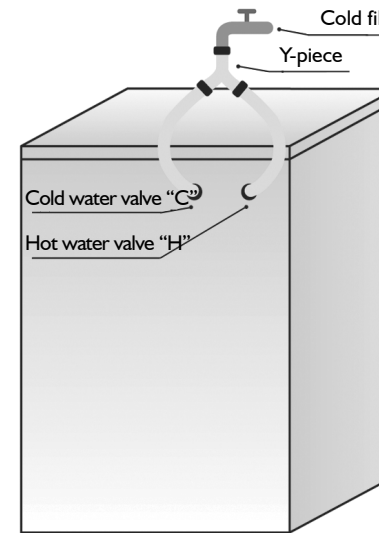


Fig. 2

Do not use a tool to tighten the screw connections of the hoses on the valves.

Connect cold water supply only (Fig. 2):

1. Screw a Y-adapter to the cold fill tap.
2. Connect the water inlet hoses to the valves on the back of the washing machine as well as to the Y-adapter.

Make sure:

- all connections are tightly fixed (but do not overtighten by using a tool).
- you observed the instructions in paragraph "Connect the water supply hose" in your Instructions for Use.

The Y-adapter must not be connected to a hot fill water tap.