

# PROGRAMMER DESCRIPTION SHEET

GB IE

## Symbol description

Cooking time	Cooking end time	Time of day
"Browning" special function	"Heat Maintenance" special function	°C Scale for heat

- The flashing indicators ▼▼▼, located in the lower side of the display, show the functions that can be selected or modified at the time.

## OVEN FAST START

### NOTE: TO CANCEL ANY SELECTION, SIMPLY TURN KNOB 1 TO "0".

When the oven is connected to the power supply for the first time, or re-connected after a power failure, the display will show "STOP".

### To start the oven:

- Turn **knob 1** to "0".
- Press **button 2**. The display shows "--:--".
- Select the function.

## SELECTING A FUNCTION

- Turn **knob 1** to the chosen function: the preset temperature or grill level will flash on the display. If the displayed value is correct, press **button 2** to confirm, or with the exception of function P1, wait 10 seconds to have the value accepted automatically.

### To change temperature or grill level:

- Turn **knob 3**: the preset temperature or grill level will flash on the display.
- Press **button 2** to confirm or wait 10 seconds to have the value accepted automatically.

The oven starts: the indicators ▲▲▲▲▲ will light up in sequence on the display showing on the scale °C---- the temperature increase.

### N.B.:


10 seconds after the function has been selected, the oven will start: this does not prevent selecting or changing the temperature or grill level.

### Once the food is cooked:

- Switch off the oven by turning **knob 1** back to "0".

### General remarks:

- If the position of **knob 1** is changed while cooking is in progress, all selected options are cancelled.
- Keeping **button 2** down for 5 seconds deactivates the audio signal associated with the manipulation of knobs and buttons. The acoustic signal is enabled again by pressing **button 2** for 5 seconds.
- For safety reasons, after 5 hours of continuous operation the oven will switch off automatically (except for the oven light and MLTF functions).

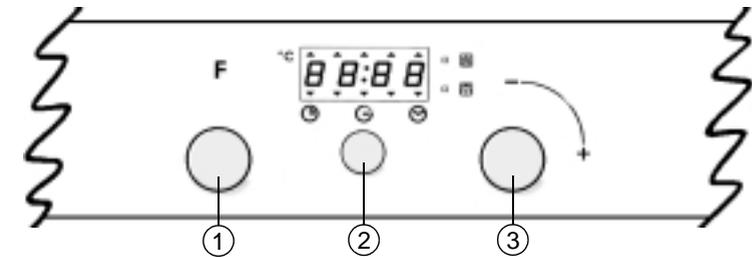

- The indicators ▲▲▲▲▲ located on the upper portion of the display, corresponding to the scale °C ----, show the gradual increase of the temperature. When all the indicators are on, the selected temperature is close to being reached.
- The indicators located on the right side of the display next to the symbols , show the selection of the 2 special functions.

## USING THE PROGRAMMER

### To select the time of day:

- Turn **knob 1** to "0".
- Press **button 2** twice: "12:00" or the time of day will flash on the display ▼. Will appear next to the symbol .
- Turn **knob 3** to set time of day: the display will show the time of day (flashing).
- Press **button 2** or wait 5 seconds to have the value accepted automatically.

### To modify the time of day:

Turn **knob 1** to "0" and repeat the steps above.

## SELECTING A COOKING TIME

Select the cooking time (available with any function) to start the oven on for a specified period of time. At the end of the specified time the oven will switch off automatically.

(The maximum programmed cooking time is 3 hours and 59 minutes for all functions, with the exception of the MLTF function (Heat Maintenance) for which it is 9 hours and 59 minutes).

After selecting a function and a temperature or grill level:

- Press **button 2** until the display shows a flashing ▼ next to the symbol and "0:00" appears.
- Turn **knob 3** clockwise: the display will show the selected time (flashing). The symbol "-" in front of the selected value indicates that the time will count down to "0".
- Wait 30 seconds to have the value automatically accepted. The oven will start. To display the previously selected temperature, turn the **knob 3** by one click.

### To change the preset temperature or grill level:

- Turn **knob 3** and confirm by pressing **button 2**, or wait 10 seconds to have the value accepted automatically.

### Once the food is cooked:

An audio signal begins, the display shows "End" and the oven will switch off automatically. The oven light will remain on for 10 minutes.

- Press **button 2** to stop the audio signal and switch off the oven light.
- Turn **knob 1** back to "0".

## SELECTING A TIME BY WHICH THE COOKING MUST BE COMPLETED

(Using this function it is possible to **program** the oven to switch on at a specified time and have it **switched off** automatically at another defined time.)

**For example:** if the time is 9:00 am, it is possible to switch on the oven for 45 minutes in such a way that it will switch off at 12:30 pm; the maximum programmed time is 23 hours and 59 minutes).

### After selecting a function and a temperature or a grill level:

1. Press **button 2** until *the display shows a flashing ▼ next to the symbol  and "0:00" appears.*
2. Select the cooking time by turning **knob 3**: *the display will show the selected time (flashing) (e.g.: 45 minutes).*
3. Press **button 2** to confirm the selection: *the indicator ▼ will flash next to the symbol  and the display will show the time of the day (e.g.: 9:00 + 45 minutes = 9:45).*
4. Select the time at which the oven should switch off, turning **knob 3** (e.g.: 12:30).
5. Press **button 2** until the time of day is shown again (in the case of the example, 9:00), or wait 30 seconds to have the value automatically accepted.
6. The oven will switch on at a time that is the switch-off time minus cooking time: (in the case of the example: 11.45).

*The display will show the indicators ▼▼▼ flashing next to the symbols    together with the time of day.*

- To **verify** the chosen temperature or grill level, turn **knob 3 by one click**.
- To verify or modify both the cooking time (45 minutes) and the switch-off time (12:30), press **button 2**.
- When the oven switches on: *the indicators ▼▼ are shown on the display next to symbols   and the set cooking time is shown.*

### Once the food is cooked:

*An audio signal begins. The display shows "E n d", the oven switches off automatically and the oven light stays on for 10 minutes.*

1. Press **button 2** to stop the audio signal and switch off the oven light.
2. Turn **knob 1** back to "0".

## SPECIAL FUNCTION

### • Browning

This function allows the browning of food **while** it is cooked. It is possible to choose one of three levels of browning **1-2-3**.

### • Heat Maintenance function

This function keeps the temperature in the oven at **60°C** at the end of the cooking cycle, for a maximum of 5 hours. To cancel the function, turn **knob 1** to "0".

### Programming the special functions

These functions are available **only** when programming cooking time or switch-off time.

The two functions can be programmed together or separately.

### N.B.:

- The "Heat Maintenance" special function is available and can be used at the end of the following functions: **Static, Pastry, Turbofan, Fan and Booster**.
- The "Browning" special function is available and can be used after programming **Static, Fan and Booster** functions.

- When pressing **button 2**, if the indicators ► on the display **DO NOT** flash next to symbols  , then for the function selected via **knob 1**, the special functions are **NOT** available.

### After selecting a function, a temperature, a cooking time or the time at which the oven should switch off:

#### To select the "Browning" special function :

1. Press **button 2** until *the display shows the indicator ► flashing next to the symbol  and "0" appears.*
2. Turn **knob 3** to select the degree of browning: **1, 2 or 3**.
3. Press **button 2 twice** or wait 30 seconds to have the value accepted automatically.

#### Once the food is cooked:

*An audio signal begins, the display shows the message "E n d" and the oven switches off automatically. The oven light remains on for 10 minutes.*

- Press **button 2** to stop the audio signal and switch off the light.
- Turn **knob 1** back to "0".

### After selecting a function, a temperature, a cooking time or the time at which the oven should switch off:

#### To select the "Heat Maintenance" special function

1. Press **button 2** until *the display shows the indicator ► flashing next to the symbol  and the message "---C" appears.*
2. Turn **knob 3** to select "60°C".
3. Press **button 2** or wait 30 seconds to have the value accepted automatically.

#### At the end:

*An audio signal begins and the displays shows "60C".*

- Press **button 2** to stop the audio signal and switch the light off.
- The oven will maintain a temperature of 60°C until **knob 1** is turned to "0".

## SELECTING THE TIMER

The oven provides a timer that can be used to control the duration of cooking processes taking place on appliances other than the oven (e.g.: microwave oven, cooktop, toaster).

(The maximum programmed time is 3 hours and 59 minutes, independent of what the oven is used for in the meantime.)

### To set the time:

1. Keep **knob 1** on "0" or . *The display shows the time of day.*
2. Press **button 2** until *the display shows the indicator ▼ flashing next to the symbol .*
3. Turn **knob 3** clockwise. *The selected time will flash on the display. The symbol "-" on the left of the selected time indicates that the time will be counted down to "0".*
4. Press **button 2** or wait 30 second to have the value automatically accepted.

### When the set time has elapsed:

- *An audio signal begins and the display shows "E n d".*
1. Press **button 2**: *The audio signal stops. The display shows the time of day.*