


Before using the dishwasher, read the user instructions!


DWF 405

# Quick Reference Guide

 GB

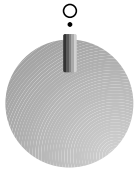

**Program selector knob**  
Mains On / Off



**Start button**  
Switches "on" when the dishwasher is operating. Flashes when a fault occurs. Switches off at the end of the programme.

Programme chart				Detergent <sup>2)</sup>		Consumption <sup>3)</sup>		
Programmes		Loading instructions		A	B	Litres	kWh	Minutes
	<b>Pre-Rinse</b>	<b>cold</b>	Crockery to be washed later.	-	-	8.0	0.02	10
	<b>Rapid</b>	<b>40°C</b>	Lightly soiled crockery with no dried-on food.	X	-	16.0	0.70	30
	<b>Normal<sup>1)</sup></b>	<b>50°C</b>	Normally soiled crockery.	X	X	19.0	1.40	133
	<b>Intensive</b>	<b>70°C</b>	Recommended programme for heavily soiled crockery, especially suitable for pans and saucepans.	X	X	20.0	1.90	125

1) Reference programme for energy label in compliance with EN 50242 regulations;

2) Refer to "User instructions";



3) Program data obtained in conformity with European standard EN 50242. Values may vary in relation to usage, e.g.: different loads, water temperatures - above or below 15°C - as well as water hardness and power supply voltage, etc.

**5019 696 93140**

(We reserve the right to make technical modifications)

## How to use the appliance

Further indications are given in the single chapters and in the user instructions.

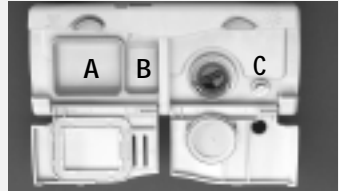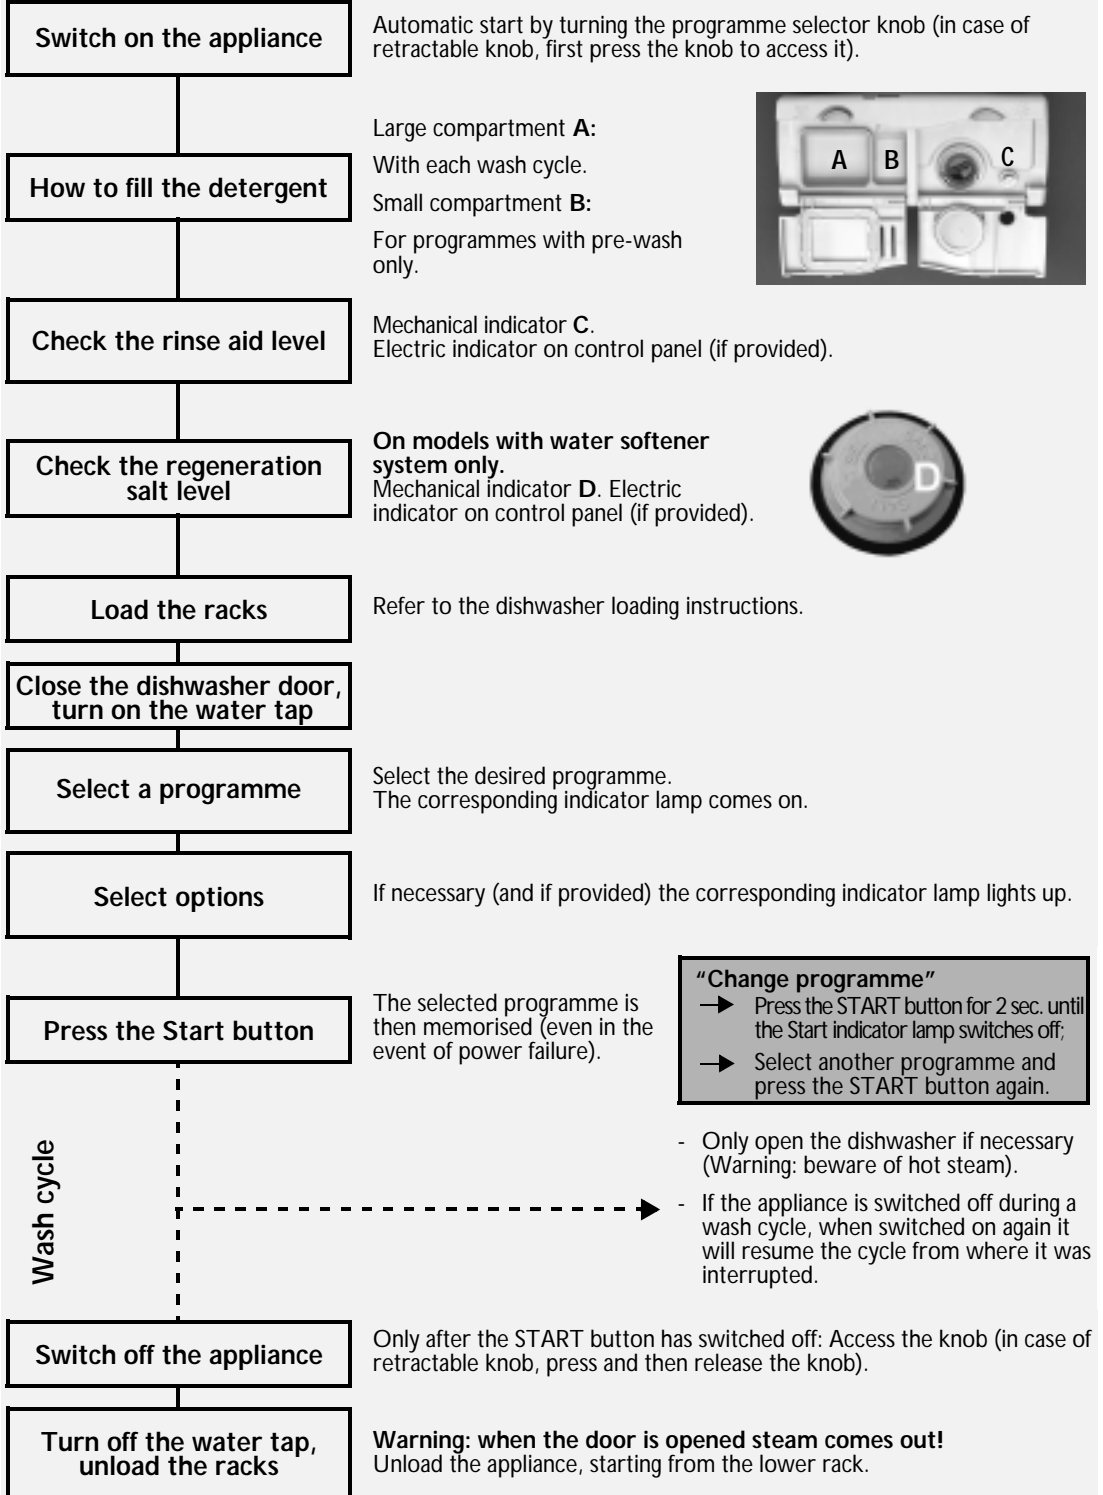

## Dishwasher loading instructions and racks provided


### Upper rack:

#### Revolving glass support (A):

Depending on the position, for example small or long-stemmed glasses.


#### Crockery holders (B):

Depending on the position, for example plates, cups and long-stemmed glasses.

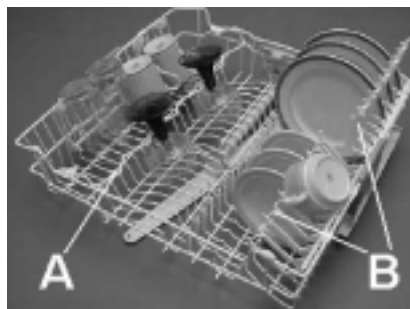

### Lower rack:


Plate holder (C).

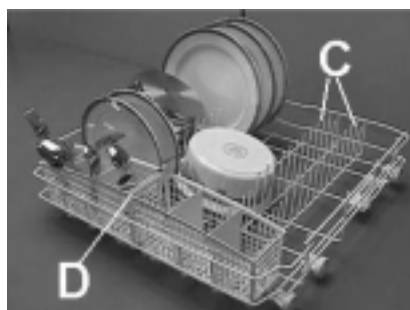

### Cutlery basket (D):

The cutlery basket can be removed to increase available space.

Sharp knives and forks that might cause injury must be placed in the cutlery basket with the handles positioned upwards.

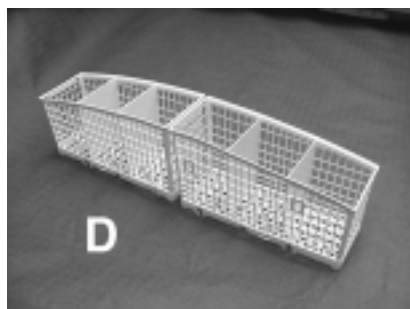

**Only use dishwasher-proof crockery and dishes. Do not use the appliance for items not suitable for washing in a dishwasher, for example wooden items, aluminium, plastic utensils, tin, hand-decorated crockery (unglazed), silver cutlery.**

## What to do if...

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem (\* see also the corresponding chapter in the user instructions).

Problem	Cause	Remedy
<b>The appliance is not working</b>	<ul style="list-style-type: none"> <li>No water supply.</li> <li>The appliance does not load sufficient water.</li> <li>There is a power failure.</li> <li>Starting the selected programme.</li> </ul>	<ul style="list-style-type: none"> <li>Open the tap.</li> <li>Clean the water supply tap filter.</li> <li>Ensure there are no kinks in the water hose.</li> <li>Insert the plug into the mains socket.</li> <li>Press the Start button.</li> <li>Close the door.</li> <li>Check the domestic circuit fuse.</li> <li>The programme can be set to "0" to start.</li> </ul>
<b>If crockery is not perfectly dry</b>	<ul style="list-style-type: none"> <li>Insufficient rinse aid.</li> <li>Residual water in cavities.</li> </ul>	<ul style="list-style-type: none"> <li>Increase dosage *.</li> <li>Load crockery at an angle.</li> </ul>
<b>If crockery is not perfectly clean</b>	<ul style="list-style-type: none"> <li>The water jet does not reach the crockery.</li> <li>Insufficient detergent.</li> <li>Unsuitable programme.</li> <li>Spray arms blocked.</li> <li>Spray arm nozzles clogged.</li> <li>Incorrect detergent/detergent too old.</li> </ul>	<ul style="list-style-type: none"> <li>Arrange crockery so that items do not touch each other. Load crockery upside down.</li> <li>Follow recommended detergent dosage.</li> <li>Select a more intense wash cycle.</li> <li>The spray arms must be able to turn freely.</li> <li>Remove any impurities obstructing the water flow *.</li> <li>Use a good quality detergent.</li> </ul>
<b>Sandy or grainy residues</b>	<ul style="list-style-type: none"> <li>Clogged filters.</li> <li>Filters incorrectly assembled.</li> </ul>	<ul style="list-style-type: none"> <li>Check filters regularly/if necessary clean *.</li> <li>Insert the filter correctly *.</li> </ul>
<b>Colour of plastic parts faded</b>	<ul style="list-style-type: none"> <li>Tomato/carrot juice,...</li> </ul>	<ul style="list-style-type: none"> <li>Depending on the material, if necessary use a detergent with a greater whitening power.</li> </ul>
<b>Deposits on crockery</b>		
<ul style="list-style-type: none"> <li>removable</li> </ul>	<ul style="list-style-type: none"> <li>Streaks on the crockery/glasses.</li> <li>Streaks on glasses.</li> <li>Layer of salt on crockery/glasses.</li> </ul>	<ul style="list-style-type: none"> <li>Increase the rinse aid dosage *.</li> <li>Reduce the rinse aid dosage *.</li> <li>Close the salt container lid properly *.</li> </ul>
<ul style="list-style-type: none"> <li>not removable</li> </ul>	<ul style="list-style-type: none"> <li>Insufficient water softening, calcium deposits.</li> </ul>	<ul style="list-style-type: none"> <li>Change water hardness setting, if necessary add salt *.</li> </ul>
<b>Opaque glasses/glasses not sparkling</b>	<ul style="list-style-type: none"> <li>Cannot be washed in the dishwasher.</li> </ul>	<ul style="list-style-type: none"> <li>Use suitable glasses.</li> </ul>
<b>Rust on cutlery</b>	<ul style="list-style-type: none"> <li>Not made of stainless steel.</li> </ul>	<ul style="list-style-type: none"> <li>Use suitable cutlery.</li> </ul>
<b>Identifying appliance faults</b>	<ul style="list-style-type: none"> <li>The START indicator lamp flashes.</li> <li>Indicator F... (if provided).</li> </ul>	<ul style="list-style-type: none"> <li>Ensure that the filter assembly is not clogged and if necessary clean it *.</li> <li>Start the programme again. Press the Start button for 2 seconds, until the Start indicator lamp switches off. Select a new programme and press the Start button again.</li> <li>Call the After-Sales Service.</li> </ul>

If after carrying out the above checks the malfunction persists or appears again, turn the appliance off and turn off the water supply tap, then call our After-Sales Service (see guarantee).

Before contacting our After-Sales Service, take note of the following:

- The nature of the fault.
- The appliance type and model.
- The service code (the number indicated on the adhesive rating plate) inside the door on the right-hand side.

Service: 0000 000 00000 00 0000 000000

