


Before using the dishwasher, read the user instructions!


DWF 405

Quick Reference Guide



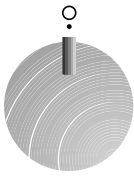

 GB



Program selector knob
Mains On / Off



Start button
Switches "on" when the dishwasher is operating. Flashes when a fault occurs. Switches off at the end of the programme.

Programme chart				Detergent ²⁾		Consumption ³⁾		
Programmes			Loading instructions	A	B	Litres	kWh	Minutes
 Pre-Rinse	cold		Crockery to be washed later.	-	-	8.0	0.02	10
 Rapid	40°C		Lightly soiled crockery with no dried-on food.	X	-	16.0	0.70	30
 Normal ¹⁾	50°C		Normally soiled crockery.	X	X	19.0	1.24	133
 Intensive	70°C		Recommended programme for heavily soiled crockery, especially suitable for pans and saucepans.	X	X	20.0	1.90	135

1) Reference programme for energy label in compliance with EN 50242 regulations;

2) Refer to "User instructions";



3) Program data obtained in conformity with European standard EN 50242. Values may vary in relation to usage, e.g.: different loads, water temperatures - above or below 15°C - as well as water hardness and power supply voltage, etc.

5019 696 93186

(We reserve the right to make technical modifications)

How to use the appliance

Further indications are given in the single chapters and in the user instructions.

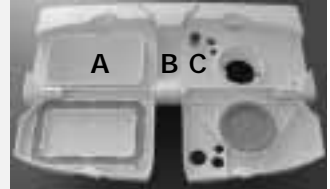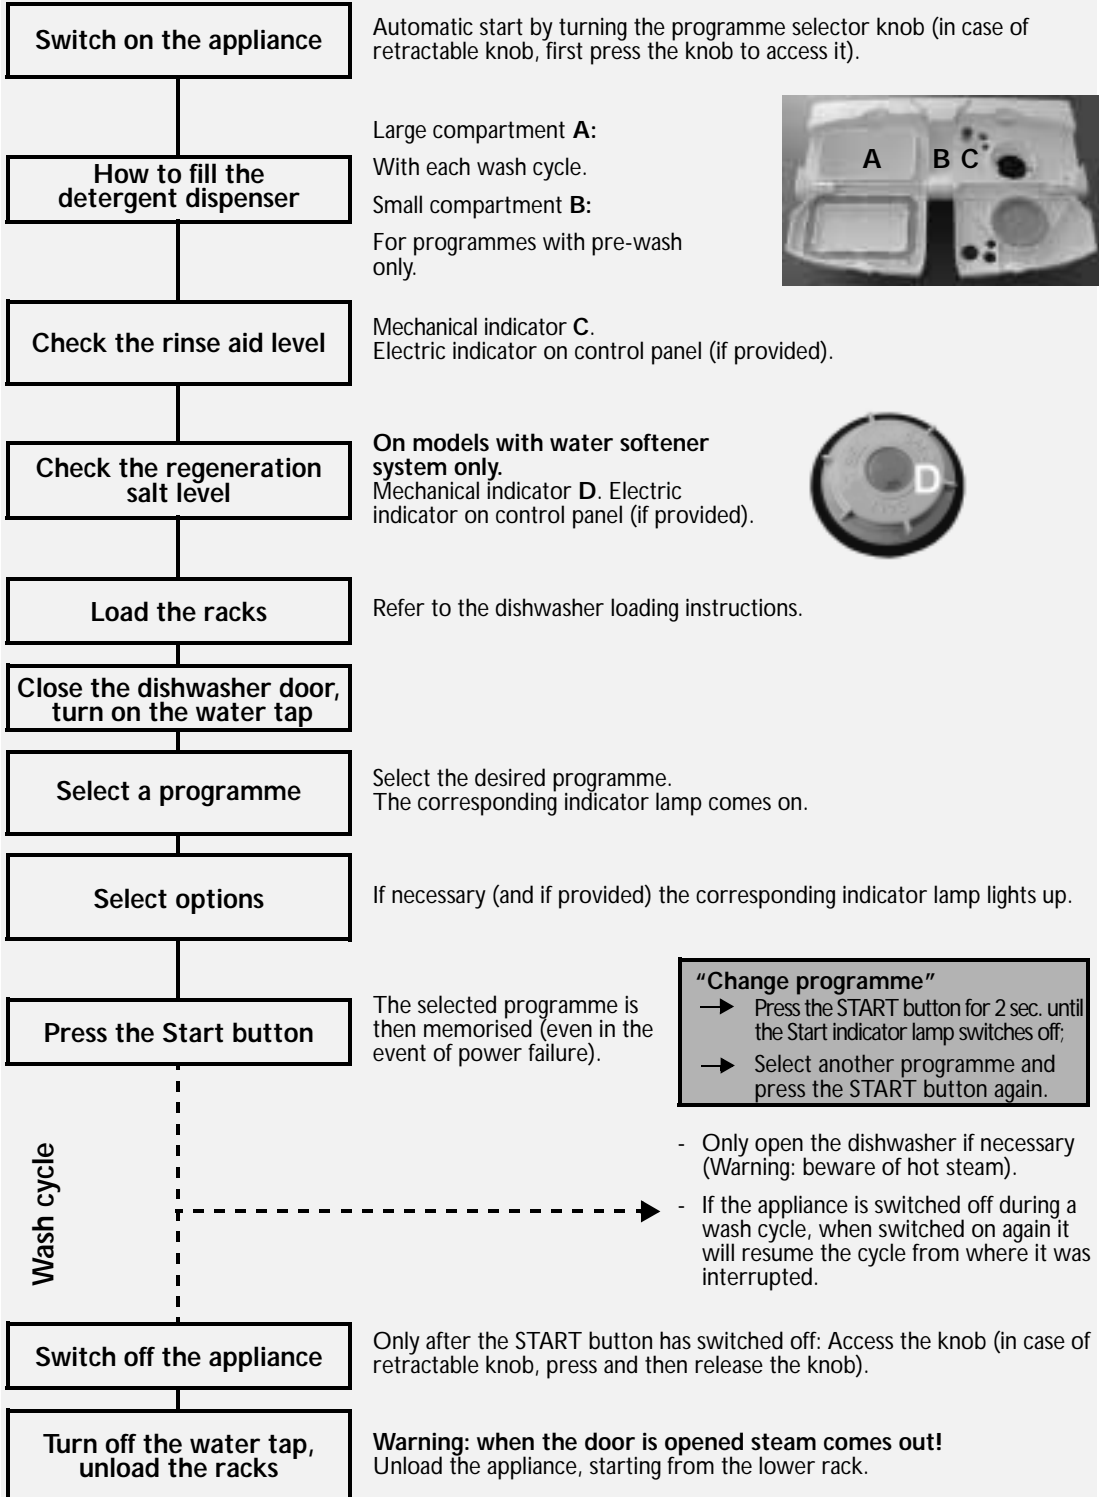

Dishwasher loading instructions and racks provided

Upper rack:


Revolving glass support (A):

Depending on the position, for example small or long-stemmed glasses.

Crockery holders (B):


Depending on the position, for example plates, cups and long-stemmed glasses.

Long-handled utensils (e.g. carving forks, knives) must be arranged with the sharp end facing in towards the appliance.

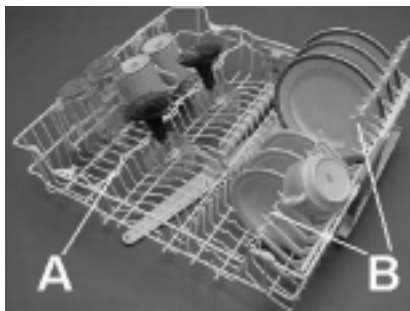

Lower rack:


Plate holder (C).

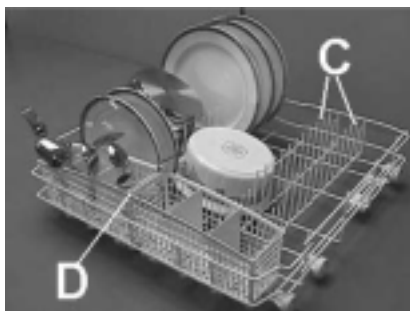

Cutlery basket (D):

The cutlery basket can be removed to increase available space.

Sharp knives and forks that might cause injury must be placed in the cutlery basket with the sharp end facing downwards.

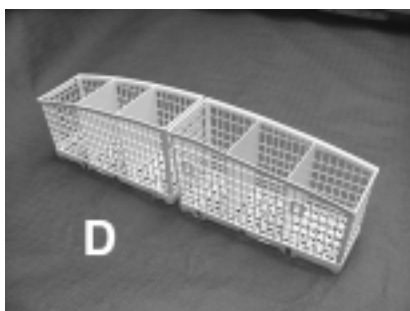

Only use dishwasher-proof crockery and dishes. Do not use the appliance for items not suitable for washing in a dishwasher, for example wooden items, aluminium, plastic utensils, tin, hand-decorated crockery (unglazed), silver cutlery.

What to do if...

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem (* see also the corresponding chapter in the user instructions).

Problem	Cause	Remedy
The appliance is not working	<ul style="list-style-type: none"> No water supply. The appliance does not load sufficient water. There is a power failure. Starting the selected programme. 	<ul style="list-style-type: none"> Open the tap. Clean the water supply tap filter. Ensure there are no kinks in the water hose. Insert the plug into the mains socket. Press the Start button. Close the door. Check the domestic circuit fuse. The programme can be set to "0" to start.
If crockery is not perfectly dry	<ul style="list-style-type: none"> Insufficient rinse aid. Residual water in cavities. 	<ul style="list-style-type: none"> Increase dosage *. Load crockery at an angle.
If crockery is not perfectly clean	<ul style="list-style-type: none"> The water jet does not reach the crockery. Insufficient detergent. Unsuitable programme. Spray arms blocked. Spray arm nozzles clogged. Incorrect detergent/detergent too old. 	<ul style="list-style-type: none"> Arrange crockery so that items do not touch each other. Load crockery upside down. Follow recommended detergent dosage. Select a more intense wash cycle. The spray arms must be able to turn freely. Remove any impurities obstructing the water flow *. Use a good quality detergent.
Sandy or grainy residues	<ul style="list-style-type: none"> Clogged filters. Filters incorrectly assembled. 	<ul style="list-style-type: none"> Check filters regularly/if necessary clean *. Insert the filter correctly *.
Colour of plastic parts faded	<ul style="list-style-type: none"> Tomato/carrot juice,... 	<ul style="list-style-type: none"> Depending on the material, if necessary use a detergent with a greater whitening power.
Deposits on crockery		
<ul style="list-style-type: none"> removable 	<ul style="list-style-type: none"> Streaks on the crockery/glasses. Streaks on glasses. Layer of salt on crockery/glasses. 	<ul style="list-style-type: none"> Increase the rinse aid dosage *. Reduce the rinse aid dosage *. Close the salt container lid properly *.
<ul style="list-style-type: none"> not removable 	<ul style="list-style-type: none"> Insufficient water softening, calcium deposits. 	<ul style="list-style-type: none"> Change water hardness setting, if necessary add salt *.
Opaque glasses/ glasses not sparkling	<ul style="list-style-type: none"> Cannot be washed in the dishwasher. 	<ul style="list-style-type: none"> Use suitable glasses.
Rust on cutlery	<ul style="list-style-type: none"> Not made of stainless steel. 	<ul style="list-style-type: none"> Use suitable cutlery.
Identifying appliance faults	<ul style="list-style-type: none"> The START indicator lamp flashes. Indicator F.. (if provided). 	<ul style="list-style-type: none"> Ensure the filter assembly is not clogged and that there is no interruption to the water supply (if necessary, clean the filters *). Start the programme again. Press the START button for 2 seconds, until the START indicator lamp switches off. Select a new programme and press the Start button again.

If after carrying out the above checks the malfunction persists or appears again, turn the appliance off and turn off the water supply tap, then call our After-Sales Service (see guarantee).

Before contacting our After-Sales Service, take note of the following:

- The nature of the fault.
- The appliance type and model.
- The service code (the number indicated on the adhesive rating plate) inside the door on the right-hand side.

