 
 


KRDD 9010

Product sheet



FOR THE WAY IT'S MADE.®




Product sheet

Carefully read the operating instructions before using the appliance.



Upper drawer

1. Control panel
2. Trays
3. Milk / fruit juice cartons compartment
4. Bottle rack
11. Rating plate

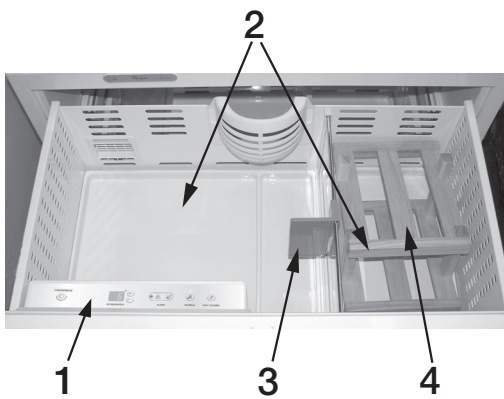

Lower drawer


5. Butter holder
6. Trays
7. Fruit & vegetables compartment
8. Egg tray
9. Tube holder
10. Condensation draining grid

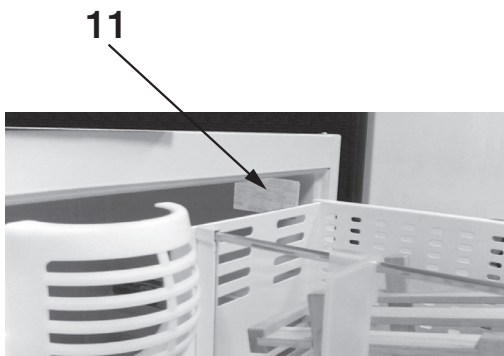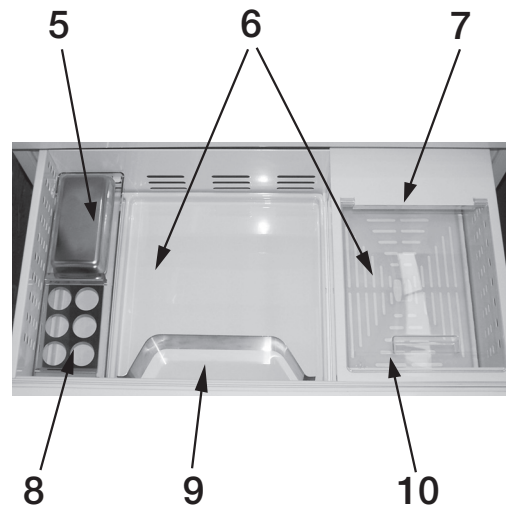

Notes: The number and shape the of accessories may vary according to the model. With the exception of the vertical glass separator, all accessories can be removed.

Caution: The refrigerator accessories must not be placed in a dishwasher.

Control panel

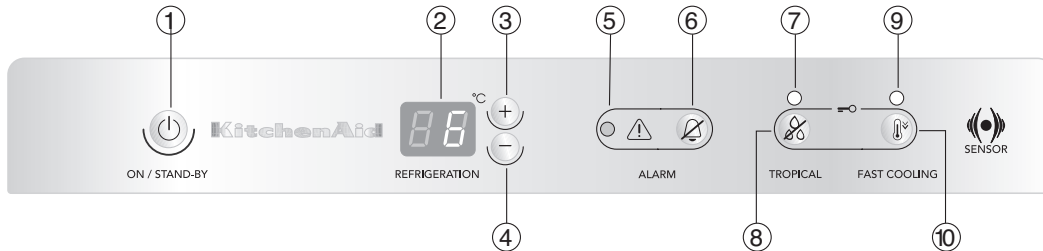

1. On/Stand-by button
2. Refrigerator temperature display
3. Refrigerator temperature increase button
4. Refrigerator temperature decrease button
5. Red alarm light
6. Acoustic Alarm deactivation button
7. "Tropical" function yellow light
8. "Tropical" function button
9. "Fast cooling" or "Party" function yellow light
10. "Fast cooling" or "Party" function button

CONTROL PANEL LOCK

The control panel can be locked after selecting the temperature of the refrigerator compartment. Press the keys (8) and (10) at the same time for at least 3 seconds and an acoustic alarm will signal activation of the function. At this point the entire control panel will remain locked except for the "Acoustic Alarm" key (6); if any key is pressed, an acoustic signal will sound and the message "CL" will appear on temperature display while the key is pressed. To unlock the control panel, proceed as above, pressing the buttons (8) and (10) at the same time, for at least 3 seconds.

Antibacterial filter (if provided):

The product is fitted with an antibacterial filter, placed on the left of the back wall of the upper drawer. It ensures a high level of hygiene inside the refrigeration compartment through a continuous purification of the air. The filter has a life span of 6 months and after this period will need to be replaced. At every opening, the letters "AF" will temporarily appear on the display (2), indicating that the filter is no longer effective. Filter replacements can be obtained from the Customer Service Centre. The procedure to replace the filter is explained on the packing. After replacing the filter press the Acoustic Alarm button (6) for 3 seconds.




The system will be reset to the initial condition and the display (2) indication will not reappear when opening the drawer again. The warning to replace the filter will come on at six month intervals.

 

Replacement of the filter is not covered by warranty.



Important:


The fan will ONLY operate when the compressor is on and the upper drawer is closed. Pay attention not to obstruct the ventopenings on the drawer walls.

Note: ambient temperature, frequency of drawer opening and position of the appliance can affect the temperature inside the refrigerator compartment. These factors should therefore be taken into account when setting temperatures.

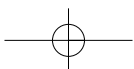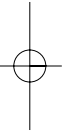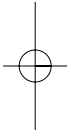

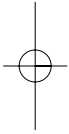

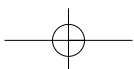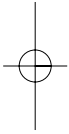

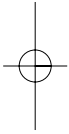

Printed in Italy
01/08

5019 711 01003

GB

