

**MWN 400**

**MWN 410**

**MWN 440**

**Gebrauchsanweisung**

Instructions for use

**Mode d'emploi**

Gebruiksaanwijzing

**Istruzioni per l'uso**



**Brugsanvisning**

Bruksanvisning

**Käyttöohje**

Manual de utilização

**Instrucciones para el uso**



**Οδηγίες χρήσης**

Instrukcje użytkowania

**Használati utasítás**

Инструкция за използване

**הוראות שימוש**



**Návod k použití**

Návod na použitie

**Instrucțiuni de utilizare**

Инструкции по эксплуатации

**تعليمات وكيفية الاستعمال**

for  
**IKEA**<sup>®</sup>  
from  
**Whirlpool**<sup>®</sup>




## INSTALLATION



### MOUNTING THE APPLIANCE



**FOLLOW THE SUPPLIED** separate mounting instructions when installing the appliance.

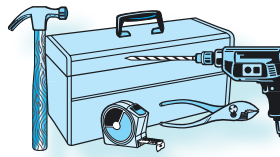

### PRIOR TO CONNECTING



**CHECK THAT THE VOLTAGE** on the rating plate corresponds to the voltage in your home.

**ENSURE** the oven cavity is empty before mounting.

**ENSURE THAT THE APPLIANCE IS NOT DAMAGED.** Check that the oven door closes firmly against the door support. Empty the oven and clean the interior with a soft, damp cloth.



**DO NOT OPERATE THIS APPLIANCE** if it has a damaged mains cord or plug, if it is not working properly, or if it has been damaged or dropped. Do not immerse the mains cord or plug in water. Keep the cord away from hot surfaces. Electrical shock, fire or other hazards may result.

### AFTER CONNECTING

**THE OVEN CAN BE OPERATED ONLY** if the oven door is firmly closed.



**THE EARTHING OF THIS APPLIANCE** is compulsory. The manufacturer will accept no responsibility for injury to persons, animals or damage to objects arising from the non-observance of this requirement.

**The manufacturers are not liable for any problems caused by the user's failure to observe these instructions.**



## IMPORTANT SAFETY INSTRUCTIONS



READ CAREFULLY AND KEEP FOR FUTURE REFERENCE



**DO NOT HEAT, OR USE FLAMMABLE MATERIALS** in or near the oven. Fumes can create a fire hazard or explosion.



**DO NOT USE YOUR MICROWAVE** oven for drying textiles, paper, spices, herbs, wood, flowers, fruit or other combustible materials. Fire could result.



**IF MATERIAL INSIDE / OUTSIDE THE OVEN SHOULD IGNITE OR SMOKE IS OBSERVED**, keep oven door closed and turn the oven off. Disconnect the power cord or shut off power at the fuse or circuit breaker panel.



**DO NOT OVER-COOK FOOD.** Fire could result.




**DO NOT LEAVE THE OVEN UNATTENDED**, especially when using paper, plastic or other combustible materials in the cooking process. Paper can char or burn and some plastics can melt if used when heating foods.



**DO NOT USE** corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.



**ONLY ALLOW CHILDREN** to use the oven without adult supervision after adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use. The appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.

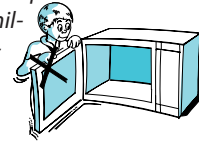

If your oven has a combination mode, children should only use the oven under adult supervision due to the high temperatures generated.



**DO NOT USE YOUR MICROWAVE** oven for heating anything in airtight sealed containers. The pressure increases and may cause damage when opening or may explode.



**THE DOOR SEALS AND THE DOOR SEAL AREAS** must be regularly inspected for damage. If these areas are damaged the appliance should not be operated until it has been repaired by a trained service technician.

### EGGS

**DO NOT USE YOUR MICROWAVE** oven for cooking or reheating whole eggs with or without shell since they may explode even after microwave heating has ended.





## PRECAUTIONS



### GENERAL

***THIS APPLIANCE IS DESIGNED FOR DOMESTIC USE ONLY!***

***THE APPLIANCE SHOULD NOT BE OPERATED without food in the oven when using microwaves. Operation in this manner is likely to damage the appliance.***

**IF YOU PRACTICE OPERATING** the oven, put a glass of water inside. The water will absorb the microwave energy and the oven will not be damaged.

**DO NOT USE THE CAVITY** for any storage purposes.

**REMOVE WIRE TWIST-TIES** from paper or plastic bags before placing bag in the oven.



### DEEP-FRYING

**DO NOT USE YOUR MICROWAVE oven** for deep-frying, because the oil temperature cannot be controlled.



**USE HOT PADS OR OVEN MITTS** to prevent burns, when touching containers, oven parts, and pan after cooking.

### LIQUIDS

**E.G. BEVERAGES OR WATER.** Overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid.



To prevent this possibility the following steps should be taken:

1. Avoid using straight-sided containers with narrow necks.
2. Stir the liquid before placing the container in the oven and let the teaspoon remain in the container.
3. After heating, allow standing for a short time, stirring again before carefully removing the container from the oven.

### CAREFUL

**ALWAYS REFER** to a microwave cookbook for details. Especially, if cooking or reheating food that contains alcohol.

**AFTER HEATING BABY FOOD** or liquids in a baby bottle or in a baby food jar, always stir and check the temperature before serving.



*This will ensure that the heat is evenly distributed and the risk of scalding or burns can be avoided.*

**Ensure the Lid and the Teat is removed before heating!**



## ACCESSORIES



### GENERAL

**THERE ARE** a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use.

**ENSURE THAT THE UTENSILS YOU USE** are oven proof and allow microwaves to pass through them before cooking.



**WHEN YOU PUT FOOD AND ACCESSORIES** in the microwave oven, ensure that they do not come in contact with the interior of the oven.

**This is especially important with accessories made of metal or metal parts.**

 
**IF ACCESSORIES CONTAINING METAL** comes in contact with the oven interior, while the oven is in operation, sparking can occur and the oven could be damaged.

**ALWAYS ENSURE** that the turntable is able to turn freely before starting the oven.

### TURNTABLE SUPPORT

**USE THE TURNTABLE SUPPORT** under the Glass turntable. Never put any other utensils on the turntable support.

☞ Fit the turntable support in the oven.



### GLASS TURNTABLE

**USE THE GLASS TURNTABLE** with all cooking methods. It collects the dripping juices and food particles that otherwise would stain and soil the interior of the oven.

☞ Place the Glass turntable on the turntable support.



### BAKING PLATE

 
 
**USE THE BAKINGPLATE** when cooking in forced air only or when grilling. Never use it in combination with microwaves.



### WIRE RACK

**USE THE WIRE RACK** when cooking and baking with Forced Air, Grill, Forced Air Combi, Auto Forced Air Combi or Turbo Grill Combi.

**WHEN GRILLING WITHOUT MICROWAVES**, place the wire rack on the baking plate in order to elevate the food closer to the grill element in the ceiling.



### BABY BOTTLE HOLDER

**USE THE BABY BOTTLE HOLDER** when heating baby food in bottles that are too tall to stand-alone in the oven.

Please see also, the chapter "Precautions", for more information about heating baby food.



## START PROTECTION / CHILD LOCK



**THIS AUTOMATIC SAFETY FUNCTION IS ACTIVATED ONE MINUTE AFTER** the oven has returned to "stand by mode". (The oven is in "stand by" when the 24-hour clock is displayed or if the clock has not been set, when the display is blank).

 


**THE DOOR MUST BE OPENED AND CLOSED** e.g. putting food into it, before the safety lock is released. Else the display will show "door".

door

## PAUSE OR STOP COOKING

**TO PAUSE COOKING:**  
**THE COOKING CAN BE PAUSED** to check, turn or stir the food by opening the door. The setting will be maintained for 10 minutes.



**IF YOU DON'T WANT TO CONTINUE COOKING:**  
**REMOVE THE FOOD**, close the door and press the STOP button

 


**TO CONTINUE COOKING:**  
**CLOSE THE DOOR** and press the Start button ONCE. The cooking is resumed from where it was paused.



**PRESSING THE START BUTTON TWICE** will increase the time by 30 seconds.

**A BEEP WILL SIGNAL** once a minute for 10 minutes when the cooking is finished. Press the STOP button or open the door to cancel the signal.



**NOTE:** The oven will only hold the settings for 60 seconds if the door is opened and then closed after the cooking is finished.



## DONENESS



**DONENESS IS AVAILABLE IN THE FOLLOWING FUNCTIONS:**

**AUTO REHEAT**

**AUTO COOK**

**AUTO FORCED AIR COMBI**

**IN THE ABOVE** functions, you have the possibility to personally control the end result through the Adjust doneness feature. This feature enables you to achieve higher or lower end temperature compared to the default standard setting.

**WHEN USING** one of these functions the oven chooses the default standard setting. This setting normally gives you the best result. But if the food you heated became too warm to eat at once, you can easily adjust this before you use that function the next time. This is done by selecting a Doneness level with the adjust knob right after you have pressed the Start button.

DONENESS	
LEVEL	EFFECT
<i>H, 2</i>	<b>YIELDS HIGHEST END TEMPERATURE</b>
<i>H, 1</i>	<b>YIELDS HIGHER END TEMPERATURE</b>
- - - -	<b>DEFAULT STANDARD SETTING</b>
<i>Lo 1</i>	<b>YIELDS LOWER END TEMPERATURE</b>
<i>Lo 2</i>	<b>YIELDS LOWEST END TEMPERATURE</b>

**NOTE:**

**THE DONENESS** can only be set or altered during the first 20 seconds of operation.



## COOLING DOWN



**WHEN A FUNCTION IS FINISHED**, the oven carries out a cooling procedure. This is normal. After this procedure the oven switches off automatically.

**THE COOLING PROCEDURE** can be interrupted without any harm to the oven by opening the door.



## KITCHEN TIMER



**USE THIS FUNCTION** when you need a kitchen timer to measure exact time for various purposes such as cooking eggs or letting the dough rise before baking etc.

- 1 **TURN THE MULTIFUNCTION KNOB** to the zero position.
- 2 **TURN THE ADJUST KNOB** to set the time to measure.

**THE TIMER AUTOMATICALLY STARTS** the countdown after 1 second.  
**AN ACOUSTIC SIGNAL** will be heard when the timer has finished to count down.



## CLOCK



**WHEN THE APPLIANCE IS FIRST PLUGGED IN** or after a power failure, the display is blank. If the clock is not set, the display will remain blank until the cooking time is set.

- 1 **TURN THE MULTIFUNCTION KNOB** to the zero position.
- 2 **PRESS THE SELECT BUTTON** (3 seconds) until the left-hand digit (hour's) flicker.
- 3 **TURN THE ADJUST KNOB** to set the hours.
- 4 **PRESS THE SELECT BUTTON** again. (The two right hand digits (minutes) flicker).
- 5 **TURN THE ADJUST KNOB** to set the minutes.
- 6 **PRESS THE SELECT BUTTON** again.

**THE CLOCK IS SET** and in operation.

**IF YOU WISH TO REMOVE THE CLOCK** from the display once it has been set, simply press the Select button again for 3 seconds and then press the Stop button.

**TO REINSTATE THE CLOCK**, follow the above procedure.

**NOTE: KEEP THE DOOR OPEN WHILE SETTING THE CLOCK.** This gives you 10 minutes to complete the setting of the Clock. Otherwise, each step must be accomplished within 60 seconds.



## COOK & REHEAT WITH MICROWAVES



USE THIS FUNCTION for normal cooking and re-heating, such as vegetables, fish, potatoes and meat.

- 1 TURN THE MULTIFUNCTION KNOB to the microwave position.
- 2 TURN THE ADJUST KNOB to set the cooking time.
- 3 PRESS THE SELECT BUTTON to select power level.
- 4 TURN THE ADJUST KNOB to set the preferred power level.
- 5 PRESS THE START BUTTON.



### ONCE THE COOKING PROCESS HAS BEEN STARTED:

The time can easily be increased in 30-second steps by pressing the Start button. *Each press* increases the time with 30 seconds. You may also alter the time by turning the adjust knob to increase or decrease the time.

BY PRESSING THE SELECT BUTTON you may switch between cooking time and power level. Both can be altered during cooking by turning the adjust knob after selection.

## CHOOSING POWER LEVEL

MICROWAVES ONLY	
POWER	SUGGESTED USE:
Jet (900 W)	<b>REHEATING OF BEVERAGES</b> , water, clear soups, coffee, tea or other food with a high water content. If the food contains egg or cream choose a lower power.
750 W	<b>COOKING</b> of fish, meat, vegetables etc.
650 W	<b>COOKING</b> dishes not possible to stir.
500 W	<b>MORE CAREFUL COOKING</b> e.g. high protein sauces, cheese and egg dishes and to finish cooking casseroles.
350 W	<b>SIMMERING STEWS</b> , melting butter.
160 W	<b>DEFROSTING</b> . Softening butter, cheeses.
90 W	<b>KEEP WARM</b>
0 W	<b>SETTING</b> the standing time.





## JET START





**THIS FUNCTION IS USED** for quick reheating of food with a high water content such as clear soups, coffee or tea.

①

②

- ① **TURN THE MULTIFUNCTION KNOB** to the microwave position.
- ② **PRESS THE START BUTTON.**

**THIS FUNCTION AUTOMATICALLY STARTS** with maximum microwave power level and the cooking time set to 30 seconds. *Each additional press* increases the time with 30 seconds. You may also alter the time by turning the adjust knob to increase or decrease the time after the function has started.

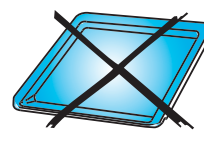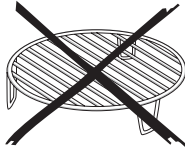

## MANUAL DEFROST



**FOLLOW THE PROCEDURE** for "cook & reheat with microwaves" and choose power level 160 W when defrosting manually.

**CHECK AND INSPECT THE FOOD REGULARLY.** Experience will give you the times needed for various amounts.

**FROZEN FOOD IN PLASTIC BAGS,** plastic films or cardboard packages can be placed directly in the oven as long as the package has no metal parts (e.g. metal twist ties).

**TURN LARGE JOINTS** halfway through the defrosting process.

**THE SHAPE OF THE PACKAGE** alters the defrosting time. Shallow packets defrost more quickly than a deep block.



 
**BOILED FOOD, STEWS AND MEAT SAUCES** defrost better if stirred during defrosting time.

**WHEN DEFROSTING** it is better to under-thaw the food slightly and allow the process to finish during standing time.

**SEPARATE PIECES** as they begin to defrost. Individual slices defrost more easily.

**STANDING TIME AFTER DEFROSTING ALWAYS IMPROVES** the result since the temperature will then be evenly distributed throughout the food.

**SHIELD AREAS OF FOOD** with small pieces of aluminum foil if they start to become warm (e.g. chicken legs and wing tips).





## JET DEFROST




**USE THIS FUNCTION** only if the net weight is between 100 g- 3 Kg.  
**ALWAYS PLACE THE FOOD** on the glass turntable.

- 1 **TURN THE MULTIFUNCTION KNOB** to the Auto position.
- 2 **PRESS THE AUTO BUTTON** to select the desired auto function.
- 3 **TURN THE ADJUST KNOB** to choose desired food class.
- 4 **PRESS THE SELECT BUTTON (DEFAULT WEIGHT IS DISPLAYED).**
- 5 **TURN THE ADJUST KNOB** to set the weight of the food.
- 6 **PRESS THE START BUTTON.**

**MIDWAY THROUGH THE DEFROSTING PROCESS** the oven stops and prompts you to *turn Food*.

- ↻ Open the door.
- ↻ Turn the food.
- ↻ Close the door and restart by pressing the Start button.

**NOTE:** The oven continues automatically after 2 min. if the food hasn't been turned. The defrosting time will be longer in this case.

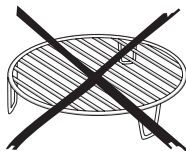



## JET DEFROST



**THIS FUNCTION NEEDS TO KNOW** the net weight of the food.

**FROZEN FOODS:**

**IF THE WEIGHT IS LESSER OR GREATER THAN RECOMMENDED WEIGHT:** Follow the procedure for "Cook & Reheat with microwaves" and choose 160 W when defrosting.




**FROZEN FOODS:**

**IF THE FOOD IS WARMER** than deep-freeze temperature (-18°C), choose lower weight of the food.

**IF THE FOOD IS COLDER** than deep-freeze temperature (-18°C), choose higher weight of the food.



	FOOD	AMOUNT	HINTS
	<b>1 MEAT</b>	<b>100G - 2KG</b>	Minced meat, cutlets, steaks or roasts.
	<b>2 POULTRY</b>	<b>100G - 3KG</b>	Chicken whole, pieces or fillets.
	<b>3 FISH</b>	<b>100G - 2KG</b>	Whole, steaks or fillets.
	<b>4 VEGETABLES</b>	<b>100G - 2KG</b>	Mixed vegetables, peas, broccoli etc.
	<b>5 BREAD</b>	<b>100G - 2KG</b>	Loaf, buns or rolls.
<b>FOR FOOD NOT LISTED IN THIS TABLE</b> and if the weight is lesser or greater than recommended weight, you should follow the procedure for "Cook and reheat with microwaves" and choose 160 W when defrosting.			

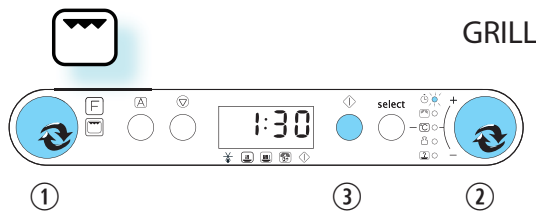



**USE THIS FUNCTION** to quickly give a pleasant brown surface to the food.  
**FOR FOOD LIKE CHEESE, TOAST, STEAKS AND SAUSAGES**, place the wire grid on top of the baking plate.

- 1 **TURN THE MULTIFUNCTION KNOB** to the grill position.
- 2 **TURN THE ADJUST KNOB** to set the cooking time.
- 3 **PRESS THE START BUTTON.**


**IF THE COOKING TIME IS SET TO MORE THAN 90 MINUTES**, the display will show "∞∞∞∞", I.E. the oven will run continuously without any time limit until you turn the oven off.

**DO NOT LEAVE THE OVEN DOOR OPEN** for long periods when the Grill is in operation, as this will cause a drop in temperature.

 **ENSURE THAT THE UTENSILS** used are heat resistant and ovenproof before grilling with them.

 **DO NOT USE PLASTIC utensils** when grilling. They will melt. Items of wood or paper are not suitable either.



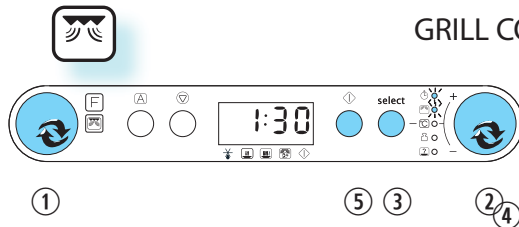

## GRILL COMBI

**USE THIS FUNCTION TO** quickly give a pleasant brown surface to the food at the same time as the food is cooked by the microwaves.

- 1 **TURN THE MULTIFUNCTION KNOB** to the Grill Combi position.
- 2 **TURN THE ADJUST KNOB** to set the power level.
- 3 **PRESS THE SELECT BUTTON** to select cooking time.
- 4 **TURN THE ADJUST KNOB** to set the cooking time.
- 5 **PRESS THE START BUTTON.**



**i** **ENSURE THAT THE UTENSILS** used are heat resistant and ovenproof before grilling with them.

**i** **DO NOT USE PLASTIC utensils** when grilling. They will melt. Items of wood or paper are not suitable either.

**THE MAX. POSSIBLE MICROWAVE POWER LEVEL** when using the Grill is limited to a factory-preset level.

**USE THE WIRE RACK** to put food on to allow the air to circulate properly around the food.

## CHOOSING POWER LEVEL

GRILL COMBI	
POWER	SUGGESTED USE:
650 W	<b>COOKING</b> Vegetables & Gratins
350 - 500 W	<b>COOKING</b> Poultry & Lasagne
160 - 350 W	<b>COOKING</b> Fish & frozen gratins
160 W	<b>COOKING</b> Meat
90 W	<b>GRATINATING</b> fruit



## TURBO GRILL COMBI



USE THIS FUNCTION TO cook such food as Gratin's, Lasagne, Poultry and Baked potatoes. PLACE FOOD ON THE WIRE RACK or on the glass turntable when cooking with this function.


- 1 TURN THE MULTIFUNCTION KNOB to the Turbo Grill position.
- 2 TURN THE ADJUST KNOB to set the power level.
- 3 PRESS THE SELECT BUTTON to select cooking time.
- 4 TURN THE ADJUST KNOB to set the cooking time.
- 5 PRESS THE START BUTTON.

THE MAX. POSSIBLE MICROWAVE POWER LEVEL when using the Grill is limited to a factory-preset level.

### CHOOSING POWER LEVEL


TURBOGRILL COMBI	
POWER	SUGGESTED USE:
650 W	<b>COOKING</b> Vegetables & Gratins
350 - 500 W	<b>COOKING</b> Poultry & Lasagne
160 - 350 W	<b>COOKING</b> Fish & frozen gratins
160 W	<b>COOKING</b> Meat
90 W	<b>GRATINATING</b> fruit
0 W	<b>BROWNING</b> only during cooking



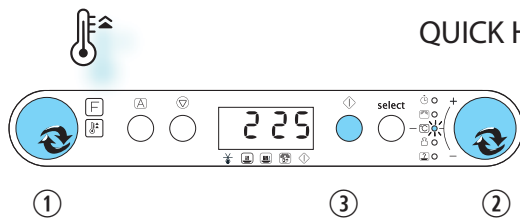

**USE THIS FUNCTION** to preheat the empty oven. **DO NOT PLACE FOOD** before or during preheating in the oven. It will be burned from the intense heat.

- 1 **TURN THE MULTIFUNCTION KNOB** to the Quick heat position.
- 2 **TURN THE ADJUST KNOB** to set the temperature.
- 3 **PRESS THE START BUTTON.**

 **DURING THE HEATING PROCESS** the digits flicker and *PrE-HEAT* is displayed at intervals until the set temperature is reached.

**ONCE THE HEATING PROCESS** has been started the temperature can easily be adjusted by turning the multifunction knob.

**THE OVEN THEN KEEPS** the set temperature for 10 minutes before switching off. During this time, it is waiting for you to, insert food and choose a Forced Air function to begin cooking.

**PREHEATING** is always done with the oven empty.





## FORCED AIR




**USE THIS FUNCTION** to cook meringues, pastry, sponge cakes, soufflés, poultry and roast meats.



- 1 **TURN THE MULTIFUNCTION KNOB** to the Forced Air position.
- 2 **TURN THE ADJUST KNOB** to set the temperature.
- 3 **PRESS THE SELECT BUTTON** to select cooking time.
- 4 **TURN THE ADJUST KNOB** to set the cooking time.
- 5 **PRESS THE START BUTTON.**

**THE DEFAULT SETTING** when selecting Forced Air is 175°C

 **IF THE COOKING TIME IS SET TO MORE THAN 90 MINUTES**, the display will show "CONT", I.E. the oven will run continuously without any time limit until you turn the oven off.

**USE THE WIRE RACK** to put food on to allow the air to circulate properly around the food.

**USE THE BAKING PLATE** when baking small items like cookies or rolls.

**DURING THE HEATING PROCESS** the digits flicker until the set temperature is reached.

**ONCE THE HEATING PROCESS HAS BEEN STARTED THE TEMPERATURE CAN EASILY BE ADJUSTED BY TURNING THE ADJUST KNOB.**







## FORCED AIR COMBI



**USE THIS FUNCTION** to cook roast meats, poultry, and jacket potatoes, frozen convenience foods, sponge cakes, pastry, fish and puddings.



- 1 **TURN THE MULTIFUNCTION KNOB** to the Forced Air Combi position.
- 2 **TURN THE ADJUST KNOB** to set the temperature.
- 3 **PRESS THE SELECT BUTTON** to select microwave power.
- 4 **TURN THE ADJUST KNOB** to set the power level.
- 5 **PRESS THE SELECT BUTTON** to select cooking time.
- 6 **TURN THE ADJUST KNOB** to set the cooking time.
- 7 **PRESS THE START BUTTON.**

**USE THE WIRE RACK** to put food on to allow the air to circulate properly around the food.


**DURING THE HEATING PROCESS** the digits flicker until the set temperature is reached.

**ONCE THE HEATING PROCESS HAS BEEN STARTED** the temperature can easily be adjusted by turning the Adjust knob. Also the microwave power level is possible to change. The Max. possible microwave power level when using the Forced air is limited to a factory-preset level.

## CHOOSING POWER LEVEL

FORCED AIR COMBI	
POWER	SUGGESTED USE:
350 W	<b>COOKING</b> Poultry, Fish & Gratins
160 W	<b>COOKING</b> Roasts
90 W	<b>BAKING</b> Bread & Cakes



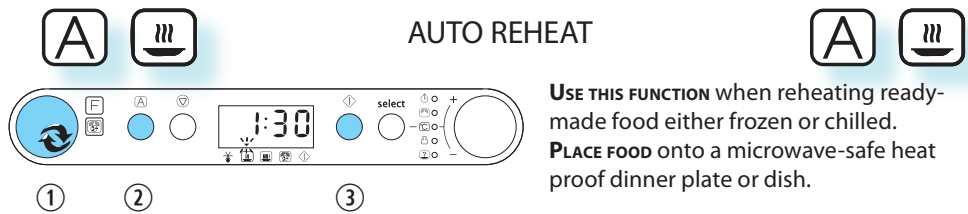


**USE THIS FUNCTION** when reheating ready-made food either frozen or chilled.  
**PLACE FOOD** onto a microwave-safe heat proof dinner plate or dish.

- 1 **TURN THE MULTIFUNCTION KNOB** to the Auto position.
- 2 **PRESS THE AUTO BUTTON** to select the desired auto function.
- 3 **PRESS THE START BUTTON.**

**MIDWAY THRU THE COOKING PROCESS** the oven stops and prompts you to *Stir Food*.

- ☞ Open the door.
- ☞ Stir or turn the food.
- ☞ Close the door and restart by pressing the Start button.

**NOTE: THE OVEN CONTINUES AUTOMATICALLY AFTER 1 MIN** if the food hasn't been turned / stirred.

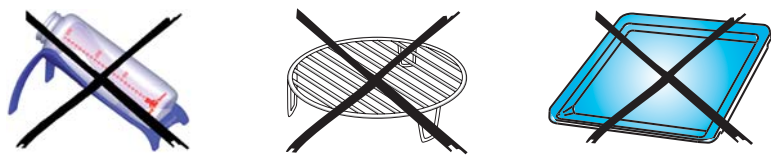


**WHEN YOU ARE SAVING** a meal in the refrigerator or "plating" a meal for reheating, arrange the thicker, denser food to the outside of the plate and the thinner or less dense food in the middle.




**PLACE THIN SLICES** of meat on top of each other or interlace them.  
**THICKER SLICES** such as meat loaf and sausages have to be placed close to each other.

 **1-2 MINUTES STANDING TIME ALWAYS IMPROVES** the result, especially for frozen food.





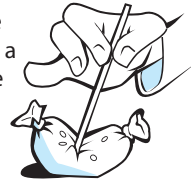


**PLASTIC FOIL** should be scored or pricked with a fork, to relieve the pressure and to prevent bursting, as steam builds-up during cooking.






## AUTO REHEAT




FOOD		HINTS
	<b>1 DINNER PLATE</b> (250g - 600g)	<b>PREPARE FOOD</b> in line with recommendations above. Heat under cover.
	<b>2 SOUP</b> (200g - 800g)	<b>REHEAT UNCOVERED</b> in separate bowls or in a large one.
	<b>3 FROZEN PORTION</b> (250g - 600g)	<b>FOLLOW THE DIRECTIONS ON PACKAGE</b> , I.E. ventilation, pricking and so on.
	<b>4 MILK</b> (100g - 500 g)	<b>HEAT UNCOVERED</b> and use a metal spoon in a mug or cup.
	<b>5 CASSEROLE</b> (200g - 800g)	<b>REHEAT UNDER COVER.</b> Stir when oven beeps.
<b>FOR FOOD NOT LISTED IN THIS TABLE</b> and if the weight is lesser or greater than recommended weight, you should follow the procedure for "Cook & Reheat with microwaves".		

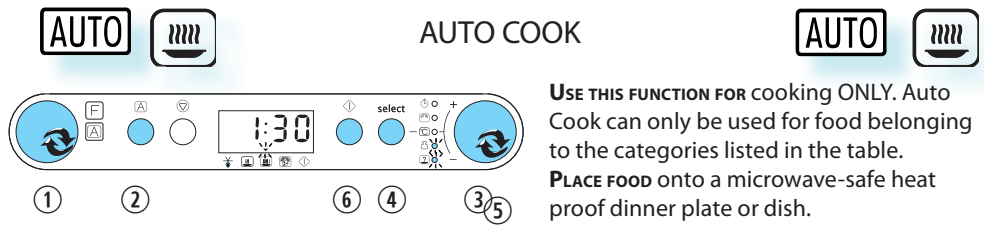

**USE THIS FUNCTION FOR COOKING ONLY.** Auto Cook can only be used for food belonging to the categories listed in the table.  
**PLACE FOOD** onto a microwave-safe heat proof dinner plate or dish.

- 1 **TURN THE MULTIFUNCTION KNOB** to the Auto position.
- 2 **PRESS THE AUTO BUTTON** to select the desired auto function.
- 3 **TURN THE ADJUST KNOB** to choose desired food class.
- 4 **PRESS THE SELECT BUTTON** (default weight is displayed).
- 5 **TURN THE ADJUST KNOB** to set the weight of the food.
- 6 **PRESS THE START BUTTON.**

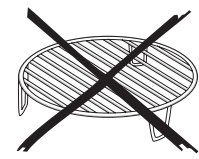

**MIDWAY THRU THE COOKING PROCESS** the oven stops and prompts you to *Stir Food or turn Food.*

- 🌀 Open the door.
- 🌀 Stir or turn the food.
- 🌀 Close the door and restart by pressing the Start button.



**NOTE: THE OVEN CONTINUES AUTOMATICALLY AFTER 1 MIN** if the food hasn't been turned / stirred.

**WHEN YOU ARE SAVING** a meal in the refrigerator or "plating" a meal for reheating, arrange the thicker, denser food to the outside of the plate and the thinner or less dense food in the middle.




**ALWAYS USE A COVER** with this function except when reheating chilled soups in which case the cover is not needed! If the food is packaged in such way that it isn't possible to use a cover, the package should be cut with 2-3 score to allow for excess pressure to escape during reheating.



**PLACE THIN SLICES** of meat on top of each other or interlace them.  
**THICKER SLICES** such as meat loaf and sausages have to be placed close to each other.

**1-2 MINUTES STANDING TIME ALWAYS IMPROVES** the result, especially for frozen food.

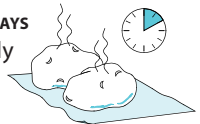






**PLASTIC FOIL** should be scored or pricked with a fork, to relieve the pressure and to prevent bursting, as steam builds-up during cooking.






## AUTO COOK



FOOD		AMOUNT	HINTS
	<b>1 BAKED POTATOES</b>	200g - 1Kg	<b>PRICK THE POTATOES</b> and place them in a microwave safe and oven proof dish. Turn the potatoes when the oven beeps. Please be aware that the oven, dish and food are hot.
	<b>2 FRESH VEGETABLES</b>	200g - 800g	<b>CUT VEGETABLES</b> into even size pieces. Add 2-4 table spoons water and cover. Stir when oven beeps.
	<b>3 FROZEN VEGETABLES</b>	200g - 800g	<b>COOK UNDER COVER.</b> Stir when oven beeps.
	<b>4 CANNED VEGETABLES</b>	200g - 600g	<b>POUR AWAY</b> most of the liquid and cook in a microwave safe dish with cover.
	<b>5 POPCORN</b>	90g - 100g	<b>ONLY COOK ONE BAG</b> at the time. If more popcorn is needed, cook the bags one after another. Doneness is not available in this food class.
<b>FOR FOOD NOT LISTED IN THIS TABLE</b> and if the weight is lesser or greater than recommended weight, you should follow the procedure for "Cook & Reheat with microwaves".			

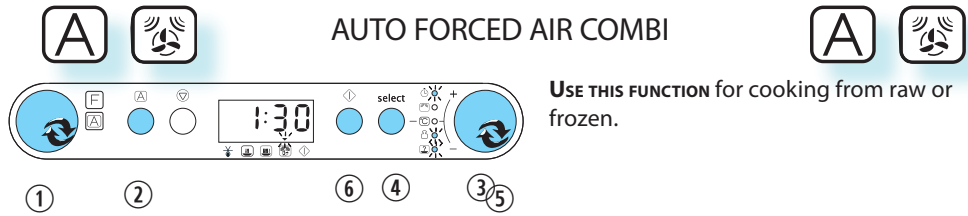

- 1 TURN THE MULTIFUNCTION KNOB to the Auto position.
- 2 PRESS THE **AUTO** BUTTON to select the desired auto function.
- 3 TURN THE **ADJUST** KNOB to choose desired food class.
- 4 PRESS THE **SELECT** BUTTON (DEFAULT WEIGHT IS DISPLAYED).
- 5 TURN THE **ADJUST** KNOB to set the weight of the food.
- 6 PRESS THE **START** BUTTON.



**FOR CHICKEN AND LASAGNE;** ensure that the dish you use, is oven proof and allow microwaves to pass through it before cooking. Else, you may obtain a poor end result.

**ALWAYS USE** the baking plate when making cookies and canned or frozen rolls.

**GREASE THE BAKING PLATE** lightly or cover it with baking paper.



**DURING USE OF THE PROGRAMS** for cookies and canned or frozen rolls the oven needs to pre-heat before you can put food in it. When the correct temperature is reached, the oven will prompt you to put the food in.

- 🌀 Open the door.
- 🌀 Place the baking plate with food on the guides situated on the cavity walls.
- 🌀 Close the door and restart by pressing the Start button.






Add

Food



### AUTO FORCED AIR COMBI




RECOMMENDED WEIGHTS		
	<b>1 CHICKEN (800G - 1½KG)</b>	<b>SPRINKLE THE CHICKEN</b> with salt and spices. Brush with oil if needed. Place on an oven-proof and microwave safe dish. Place the dish on the wire rack.
	<b>2 FROZEN LASAGNE (400G - 1KG)</b>	<b>PLACE IN</b> an ovenproof and microwave safe dish. Place the dish on the wire rack.
	<b>3 COOKIES (9-12 pieces)</b>	<b>PLACE ON</b> the lightly greased baking plate. Put the plate in the oven when it prompts you to <i>"Add Food"</i> .
	<b>4 CANNED BREAD DOUGH</b>	<b>TO BE USED FOR</b> items like croissants and rolls. Place the unbaked bread on the baking plate. Put the plate in the oven when it prompts you to <i>"Add Food"</i> .
	<b>5 FROZEN ROLLS</b>	<b>TO BE USED FOR</b> ready baked frozen rolls. Place the rolls on the baking plate. Put the plate in the oven when it prompts you to <i>"Add Food"</i> .
<b>FOR FOOD NOT LISTED IN THIS TABLE</b> and if the weight is lesser or greater than recommended weight, you should follow the procedure for "Forced air or Forced Air Combi"		

## MAINTENANCE & CLEANING

**CLEANING IS THE ONLY MAINTENANCE** normally required.

**FAILURE TO MAINTAIN THE OVEN** in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

 **DO NOT USE METAL SCOURING PADS, ABRASIVE CLEANSERS, steel-wool pads, gritty washcloths, etc. which can damage the control panel, and the interior and exterior oven surfaces.** Use a sponge with a mild detergent or a paper towel with spray glass cleaner. Apply spray glass cleaner to a paper towel.




**DO NOT SPRAY** directly on the oven.


**AT REGULAR INTERVALS**, especially if spills have occurred, remove the turntable, the turntable support and wipe the base of the oven clean.



**THIS OVEN IS DESIGNED** to operate with the turntable in place.


 **DO NOT** operate the microwave oven when the turntable has been removed for cleaning.

**USE A MILD DETERGENT**, water and a soft cloth to clean the interior surfaces, front and rear of the door and the door opening.

 **DO NOT ALLOW GREASE** or food particles to build up around the door.

**FOR STUBBORN STAINS**, boil a cup of water in the oven for 2 or 3 minutes. Steam will soften the marks.

**ADDING SOME LEMON JUICE** to a cup of water, placing this on the turntable and boiling for a few minutes can eliminate odors inside the oven.


 **DO NOT USE STEAM CLEANING APPLIANCES** when cleaning your microwave oven.

**THE GRILL ELEMENT** does not need cleaning since the intense heat will burn off any splashes, but the ceiling beneath it may need regular cleaning. This should be done with warm water, detergent and a sponge.

If the Grill is not used regularly, it should be run for 10 minutes a month to burn off any splashes, in order to reduce the risk of fire.

**DISHWASHER SAFE:**


**TURNTABLE SUPPORT.**

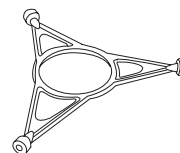

**GLASS TURNTABLE.**



 **WIRE RACK.**



**BAKING PLATE**



**BABY BOTTLE HOLDER**





## TROUBLE SHOOTING GUIDE

**IF THE OVEN DOES NOT WORK**, do not make a service call until you have made the following checks:

- ❏ The Turntable and turntable support is in place.
- ❏ The Plug is properly inserted in the wall socket.
- ❏ The Door is properly closed.
- ❏ Check your Fuses and ensure that there is power available.
- ❏ Check that the oven has ample ventilation.
- ❏ Wait for 10 minutes, then try to operate the oven once more.
- ❏ Open and then close the door before you try again.

**THIS IS TO AVOID** unnecessary calls for which you will be charged.

When calling for Service, please give the serial number and type number of the oven (see Service label). Consult your warranty booklet for further advice.



**IF THE MAINS CORD NEEDS REPLACING** it should be replaced by the original mains cord, which is available via our service organization. The mains cord may only be replaced by a trained service technician.



**SERVICE ONLY TO BE CARRIED OUT BY A TRAINED SERVICE TECHNICIAN.** It is hazardous for anyone other than a trained person to carry out any service or repair operation, which involves the removal of any cover, which gives protection against exposure to microwave energy.

**DO NOT REMOVE ANY COVER.**



Three horizontal light blue lines for writing.



Twenty horizontal light blue lines for writing, stacked vertically.


Three horizontal light blue lines for writing.



Twenty horizontal light blue lines for writing, stacked vertically.


## ENVIRONMENTAL HINTS

**THE PACKING BOX** may be fully recycled as confirmed by the recycling symbol. Follow local disposal regulations. Keep potentially hazardous packaging (plastic bags, polystyrene etc.) out of the reach of children.

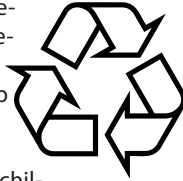

**THIS APPLIANCE** is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

**THE SYMBOL** on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

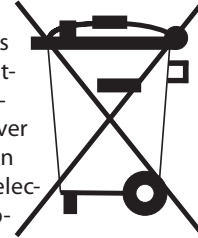

**DISPOSAL** must be carried out in accordance with local environmental regulations for waste disposal.


**FOR MORE DETAILED INFORMATION** about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

**BEFORE SCRAPPING**, cut off the mains cord so that the appliance cannot be connected to the mains.

### IN ACCORDANCE WITH IEC 60705.

**THE INTERNATIONAL ELECTROTECHNICAL COMMISSION** has developed a standard for comparative testing of heating performance of different microwave ovens. We recommend the following for this oven:

Test	Amount	Approx. time	Power level	Container
12.3.1	1000 g	11 min	750 W	Pyrex 3.227
12.3.2	475 g	5 min	750 W	Pyrex 3.827
12.3.3	900 g	15 min	750 W	Pyrex 3.838
12.3.4	1100 g	28-30 min	Forced air 200 °C + 350 W	Pyrex 3.827
12.3.5	700 g	25 min	Forced air 200 °C + 90 W	Pyrex 3.827
12.3.6	1000 g	30-32 min	Forced air 225 °C + 350 W	Pyrex 3.827
13.3	500 g	2 min 12 sec	Jet defrost	

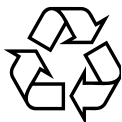

4 6 1 9 - 6 9 4 - 6 2 8 9 1

