



**This is a quick guide for using the glass bowl 5KGB:**

The glass bowl is designed exclusively for use with the tilt-head stand mixers (models 5K45 and 5KSM150PS/5KSM156PS). For complete information on the use of these stand mixers, please read the Instructions and Recipes guide that came with your stand mixer.

---

**GUIDE TO ATTACHING GLASS BOWL**

---

This glass bowl is designed to fit several different tilt-head stand mixers.

It uses a specially designed polymer thread ring between the glass and the metal bowl clamping plate on the mixer to ensure a proper fit. Follow these instructions to attach the glass bowl to your stand mixer.

**To Attach Thread Ring to the Glass Bowl**

1. Turn bowl over.
2. Screw the plastic thread ring clockwise onto the bottom threads of the glass bowl until it is firmly attached.

**To Attach Glass Bowl to Mixer**

1. Turn speed control to "0" (OFF).
2. Unplug stand mixer.
3. Tilt motor head back.
4. Place bowl on bowl clamping plate.
5. Turn bowl gently in the clockwise direction.

**To Remove Glass Bowl from Mixer**

1. Turn speed control to "0" (OFF).
2. Unplug stand mixer.
3. Tilt motor head back.
4. Turn bowl counterclockwise.

**To Remove Thread Ring from the Glass Bowl**

1. Turn bowl over.
2. Rotate the thread ring counterclockwise until it is removed.
3. If the thread ring is too tight, place the bowl back into the bowl clamping plate and turn the bowl counterclockwise until the thread ring is loosened.

---

**BEFORE USING**

---

- Your stand mixer is individually adjusted at the factory for optimal performance. When using the glass bowl, it may be necessary to readjust the beater-to-bowl clearance. Ensure the thread ring is tight enough to avoid beater-to-bowl hits. When correctly positioned, the handle and pour spout should not touch the pedestal of the mixer. Please refer to the Stand Mixer Use and Care Guide (GUIDE TO EXPERT RESULTS) for complete instructions on adjusting the beater-to-bowl clearance page 7.

---

**TIPS FOR USE**

---

- Remove the thread ring before using the bowl in a microwave oven.
- To avoid product damage, do not use the glass bowl in areas of high heat such as an oven or on a stove top.

---

**CARE AND CLEANING**

---

- The bowl and thread ring are dishwasher-safe. The lid is dishwasher-safe, top rack only.
- Or clean them thoroughly in hot sudsy water and rinse completely before drying.

---

**MARKINGS ON THE LID**

---

- Dishwasher-safe top rack only
- Non-sealing cover