


OVEN

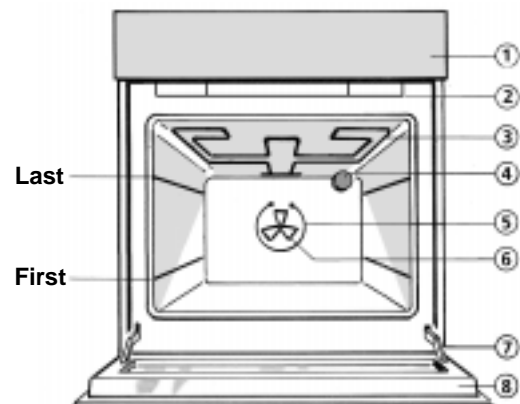


First...Last: Runner positions

1. Panel
2. Ventilation opening
3. Grill
4. Oven interior light
5. Round heating element (not visible)
6. Fan
7. Oven door hinges
8. Oven door

Accessories:

- Grid
- Gril pan set

CONTROL PANEL

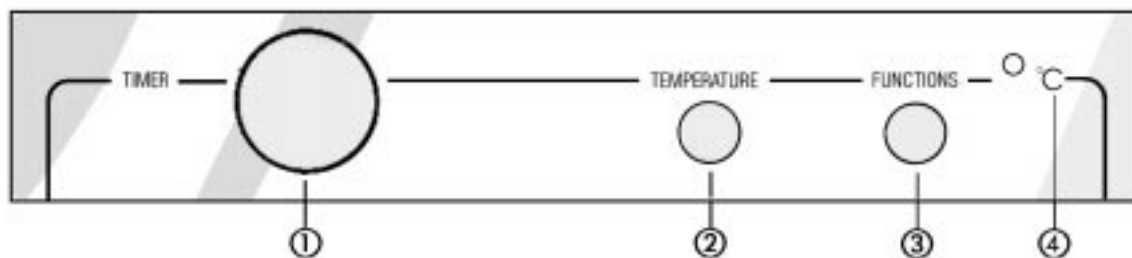

1. Mechanical analog clock
2. Thermostat control knob
3. Functions selector knob
4. Temperature red lamp

Important: An optional kit consisting of an oven door glass and of relevant mounting components, is available by the After-Sales Service. The use of the kit reduces the temperature of the outer oven surface and is strongly recommended if there are kids in the house.

Code N°: 4819 310 39186.

OVEN FUNCTIONS

0 Off

 Oven light

 **GRILL FUNCTION**

Use the grill function to cook small pieces of meat (steaks, sausages) and for making toasts.

- The oven door must be opened during the cooking cycle.
- Preheat the grill for about 5 minutes.
- Arrange the meat on the grid with the drip tray underneath. Pour water in the drip tray to cover the bottom to reduce smoke and fat spatters.
- Turn over the meat about half-way through cooking time.

 **DEFROST FUNCTION**

Ideal for thawing frozen food to room temperature.

- The food should be inserted in the oven in its wrapping to prevent it from drying out.

 **FAN FUNCTION**


Use this function when cooking food on more than one level (e.g.: fish, vegetables, pasta).

- Choose foods that require the same cooking temperature.
- Oven preheating is not necessary.
- Remove the cooked dish and, if necessary, continue cooking the other one for as long as required.

MECHANICAL ANALOG TIMER



This electromechanical programmer allows:

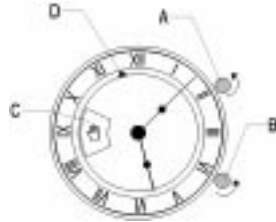- 1) Viewing the time of the day. To adjust the time, press the button **(B)** and turn it anti-clockwise.
- 2) Programming the cooking start time max. 12 hours in advance (e.g. if you wish the cooking process to start at 8.00 p.m. do NOT set it at 7.00 a.m. because the oven would switch on at 8.00 a.m.).
- 3) Programming the duration of the cooking process from min. 5 minutes to max. 180 minutes.





SWITCHING ON THE OVEN



a) MANUAL COOKING

- 1) Turn the button **(B)** anti-clockwise (without pressing), until the symbol is displayed in the window .
- 2) Press the button **(A)** and turn it **anti-clockwise** until the triangle **(D)**  points to the time shown on the clock (hour hand). **The button clicks when turned to the proper position.**
- 3) Turn the selector knob to the required symbol. *The oven light switches on.*
- 4) Turn the thermostat knob clockwise to the required temperature. *The red thermostat indicator light switches on.*
- 5) At the end of cooking, **turn the knobs to OFF (0 - •)** because in manual mode the oven will NOT switch off automatically.



b) MANUAL COOKING WITH COOKING START TIME

- 1) Turn the button **(B)** anti-clockwise (without pressing), until the symbol is displayed in the window .
- 2) Press the button **(A)** and turn it **anti-clockwise** until the triangle **(D)**  points to the time at which cooking is to start (e.g. in figure: 11.30).
- 3) Turn the selector knob to the required symbol.
- 4) Turn the thermostat knob clockwise to the required temperature.
- 5) At the end of cooking, **turn the knobs to OFF (0 - •)** because in manual mode the oven will NOT switch off automatically.

c) PROGRAMMED COOKING WITH COOKING START TIME AND COOKING DURATION

- 1) Turn the button **(B)** **anti-clockwise** (without pressing) until the required cooking duration is displayed in the window **(C)** (5 - 180 min.).
- 2) Press the button **(A)** and turn it **anti-clockwise** until the triangle **(D)**  points to the time at which cooking is to start (e.g. in figure: 11.30).
- 3) Turn the selector knob to the required symbol.
- 4) Turn the thermostat knob clockwise to the required temperature.
- 5) At the end of the set cooking time an acoustic signal will sound and **the oven will switch off automatically.** To exclude the acoustic signal, turn the button **(B)** **anti-clockwise** (without pressing) until the symbol is displayed in the window .
- 6) **At the end of the set cooking time, cooking may be prolonged by following the instructions given above, or by using the manual cooking procedure.**

d) PROGRAMMED COOKING WITH COOKING DURATION

- 1) Turn the button **(B)** **anti-clockwise** (without pressing) until the required cooking duration is displayed in the window **(C)** (5 - 180 min.).
- 2) Press the button **(A)** and turn it **anti-clockwise** until the triangle **(D)**  points to the time shown on the clock (hour hand). **The button clicks when turned to the proper position.**
- 3) Turn the selector knob to the required symbol. *The oven light switches on.*
- 4) Turn the thermostat knob clockwise to the required temperature. *The red thermostat indicator light switches on.*
- 5) At the end of the set cooking time an acoustic signal will sound and **the oven will switch off automatically.** To exclude the acoustic signal, turn the button **(B)** **anti-clockwise** (without pressing) until the symbol is displayed in the window .
- 6) **At the end of the set cooking time, cooking may be prolonged by following the instructions given above, or by using the manual cooking procedure.**