GB

PROGRAMME CHART

A. "Door open" indication

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

B. "Service" indication
C. "Water tap closed" indication
D. "Clean pump" indication

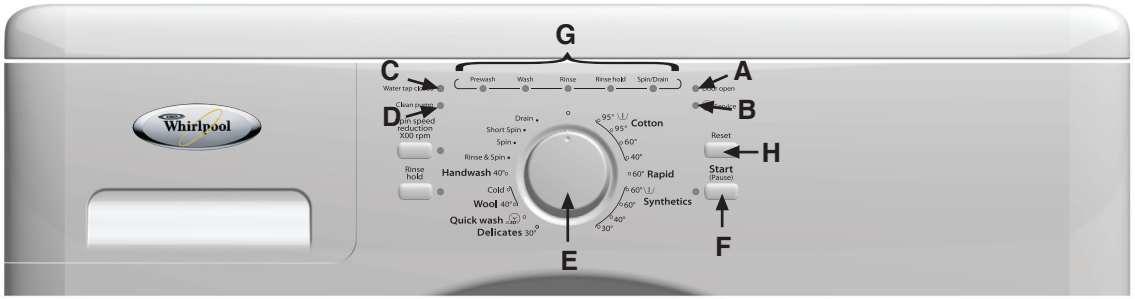

E. Programme selector
F. "Start(Pause)" button
G. Programme sequence indicator
H. "Reset" button

Programme	Care Labels	Max. Load kg	Type of wash / Notes *- respect the manufacturer's recommendations on the care label*	Detergents and Additives: Pre-wash	Detergents and Additives: Main Wash	Detergents and Additives: Softener	Special options: Spin speed reduction X00 rpm	Special options: Rinse hold	Max. Spin Speed rpm
Cotton with prewash *95 °C*	95	6.0	Heavily soiled, long wearing and temperature stable textiles in cotton and linen (bed linen, table linen, underwear, shirts etc.).	Yes	Yes 1)	❊	❊	❊	Max.
Cotton *95 °C*	95	6.0	Normally to heavily soiled and robust white cotton laundry. In case of heavy soiling or stains, you can add an oxygenbased bleach additive which can be used at 95°C. *This programme eliminates bacteria, ensuring sanitization of your laundry.*	–	Yes	❊	❊	❊	Max.
Cotton *40 - 60 °C*	40 60	6.0	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	–	Yes	❊	❊	❊	Max.
Rapid *60 °C*	60	6.0	Normally to heavily soiled cotton laundry washable at 60°C. *Faster alternative to "Cotton" programme for washing your cotton laundry at 60°C.*	–	Yes	❊	❊	❊	Max.
Synthetics with prewash *60 °C*	60	3.0	Heavily soiled laundry made of artificial fibres (like polyester, polyacryl, viscose etc.) or their blends with cotton.	Yes	Yes 1)	❊	❊	❊	Max.
Synthetics *30 - 40 - 60 °C*	60 50 40 30	3.0	Normally soiled garments made of artificial fibres (like polyester, polyacryl, viscose etc.) or their blends with cotton.	–	Yes	❊	❊	❊	Max.
Delicates *30 °C*	30	1.5	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	–	Yes	❊	❊	❊	1000 2)
Quick wash *30 °C*	30	3.0	Shortly worn clothing made of cotton, polyester, polyamide and blends with cotton. *Brief programme to refresh your laundry.*	–	Yes	❊	❊	❊	Max.
Wool *Cold - 40 °C*	Woolmark 40	1.0	Only woollens, labelled with the Woolmark and identified as machine washable. *This programme (40°C) is tested and approved by The Woolmark Company for machine washable wool.*	–	Yes	❊	❊	❊	1000 2)
Handwash *40 °C*	Woolmark	1.0	Textiles made of silk, linen, wool and viscose marked as "handwashable". *This programme (40°C) is tested and approved by The Woolmark Company for handwashable wool.*	–	Yes	❊	❊	❊	400 2)
Rinse & Spin	–	6.0	*Same as the last rinse and the final spin in the "Cotton" programme.*	–	–	❊	❊	❊	Max.
Spin	–	6.0	*In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.*	–	–	–	❊	–	Max.
Short Spin	–	1.0	*In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.*	–	–	–	❊	–	1000 2)
Drain	–	–	*Drain only - no spinning. Alternative method of terminating programme after "Rinse hold"*	–	–	–	–	–	–

❊ : option / Yes : dosing required
1) Do not use liquid detergents.
2) For improved garment care spin speed is restricted in these programmes.

The wool and handwash cycles of this machine have been tested and approved by The Woolmark Company for the washing of Woolmark garments labelled as "machine wash" or "hand wash" provided that the garments are washed according to the instructions on the garment label and those issued in this programme chart. M0619

Whirlpool is a registered trademark of Whirlpool USA.

5019 301 01315

Whirlpool

CONSUMPTION DATA

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration ⌚ (hours : minutes)
Cotton	95	6.0	59 *	1.90	2:00
Cotton **	60	6.0	49	0.90	4:00
Cotton **	60	3.0	37	0.69	2:20
Cotton	40	6.0	54	0.65	2:45
Cotton **	40	3.0	37	0.58	2:30
Cotton Rapid	60	6.0	49	1.02	2:30
Synthetics	60	3.0	50 *	0.70	1:30
Synthetics	40	3.0	46	0.50	1:15
Delicates	30	1.5	50	0.50	0:45
Quick wash	30	3.0	40	0.40	0:30
Wool	40	1.0	55	0.60	0:45
Handwash	40	1.0	45	0.60	0:40

Consumption values were measured in normalized conditions in compliance with standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.Water and energy consumption refer to the default setting of the programmes; selecting special options or modifying spin speed or temperature will change the consumption data.

⌚ The programme duration may differ from the values indicated above as it depends on the operation conditions applicable at that time (see also "Troubleshooting Guide" in your Instructions for Use).

* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

** Reference programmes for Energy Label.

ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add detergents as indicated on the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use.

- Turn the **programme selector** to the desired programme and temperature.
- The indication lamp next to "**Start(Pause)**" button blinks.

SELECT ANY DESIRED OPTION

Push the button of any option desired - the respective indication lamp lights up.
If the combination of programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

"Spin speed reduction" button

- Reduces the predetermined automatic maximum spin speed to treat your laundry more gently.

"Rinse hold" button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- Particularly useful if you want to postpone spinning to a later time, or if you want to drain only.
  Note: The programme stops to "Rinse hold" at the time the "Rinse hold" light in the programme sequence indication is on. The indication lamp next to the **"Start(Pause)"** button blinks.

Terminate the "Rinse hold" option :

- Press the **"Start/Pause"** button ; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn the programme selector to the "Drain" programme and press the **"Start(Pause)"** button .

PROGRAMME START

Open the tap and press the **"Start(Pause)"** button. The indication lamp next to the **"Start (Pause)"** button lights up. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain.

"DOOR OPEN" INDICATION

Before starting and after end of a programme, the lamp lights to show the the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Cancel (Reset) a running programme before the end".

FAILURE INDICATIONS

In case of any failures or irregularities, consult the "Troubleshooting Guide" in your Instructions for Use.

"Service"
Lighting up of the "Service" indication can be caused by a fault in an electrical component.

"Water tap closed"
The washing machine has no or insufficient water supply; the water tap might be closed or the water inlet hose kinked.

"Clean pump"
Waste water is not pumped out. The drain hose may be kinked or the filter must be cleaned (see "Cleaning the filter" in your Instructions for Use).

PROGRAMME END

- All the lights of the programme sequence indicator are off, and the "Door open" indication lights up.

1. Turn the programme selector to the "Off/O" position.
2. Close the water tap.
3. Open the door and unload the machine.
4. Leave the door ajar to allow the drum to dry.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the **"Start(Pause)"** button to pause the programme. The light blinks.
2. Select the new programme (with temperature), and any options if you want.
3. Press the **"Start(Pause)"** button again.
   The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END

The **"Reset"** button cancels a programme before the end.

- Press and hold the "**Reset**" button for a few seconds.
  Any existing water is drained out. It may last some time until the door can be opened.

Whirlpool is a registered trademark of Whirlpool USA.

5019 301 01315